

# **CLYMER HONDA GL1800 GOLD WING**

## **• 2001-2010 (M507-3)**

**WARNING:** The information on this CD is to be used with the manual. Important safety and procedural information is not addressed herein. The publisher assumes no responsibility for any damage to property or injury to persons. Individuals engaging in service and/or repair work do so entirely at their own risk.

Copyright ©2011 Penton Business Media, Inc.

All rights reserved. Reproduction of this CD content in any manner for resale or redistribution through photocopy/scan, e-mail, website, blog, forum, user group, etc. is prohibited.

## **CONTENTS**

<b>WIRING DIAGRAMS . . . . .</b>	<b>W-1-W-63</b>
----------------------------------	-----------------

---

### **DIAGRAMS BY YEAR AND MODEL**


---

<b>Starting and Reverse Systems (2001-2005 Models) . . . . .</b>	<b>W-1</b>
<b>Starting and Reverse Systems (2006-2010 Non-Airbag Models) . . . . .</b>	<b>W-2</b>
<b>Starting and Reverse Systems (2006-2010 Airbag Models) . . . . .</b>	<b>W-3</b>
<b>Ignition, Charging and Cooling Systems (2001-2005 Models) . . . . .</b>	<b>W-4</b>
<b>Ignition, Charging and Cooling Systems (2006-2008 1A, 1B, 1C, 1D and 2009-2010 2A, 2B, 2C, 2E Models) . . . . .</b>	<b>W-5</b>
<b>Ignition, Charging and Cooling Systems (2006-2008 1E and 1F Models) . . . . .</b>	<b>W-6</b>
<b>Ignition, Charging and Cooling Systems (2006-2008 1G Models) . . . . .</b>	<b>W-7</b>
<b>Ignition, Charging and Cooling Systems (2009-2010 2D and 2F Models) . . . . .</b>	<b>W-8</b>
<b>Fuel Injection System (2001-2003 Models) . . . . .</b>	<b>W-9</b>
<b>Fuel Injection System (2004-2005 Models) . . . . .</b>	<b>W-10</b>
<b>Fuel Injection System (2006-2008 1A, 1B, 1C, 1D and 2009-2010 2A, 2B, 2C, 2E Models) . . . . .</b>	<b>W-11</b>
<b>Fuel Injection System (2006-2008 1E and 1F Models) . . . . .</b>	<b>W-12</b>
<b>Fuel Injection System (2006-2008 1G Models) . . . . .</b>	<b>W-13</b>
<b>Fuel Injection System (2009-2010 2D and 2F Models) . . . . .</b>	<b>W-14</b>
<b>ABS System (2001 Models) . . . . .</b>	<b>W-15</b>
<b>ABS System (2002-2005 Models) . . . . .</b>	<b>W-16</b>
<b>ABS System (2006-2008 1E, 1F, 1G Models) . . . . .</b>	<b>W-17</b>
<b>ABS System (2009-2010 2C, 2D, 2E, 2F Models) . . . . .</b>	<b>W-17</b>
<b>Lighting System (2001-2005 Models) . . . . .</b>	<b>W-18</b>
<b>Lighting System (2006-2010 Non-Airbag Models) . . . . .</b>	<b>W-19</b>
<b>Lighting System (2006-2010 Airbag Models) . . . . .</b>	<b>W-20</b>

Turn Signal and Horn Systems (2001-2005 Models) . . . . .	W-21
Turn Signal and Horn Systems (2006-2010 Non-Airbag Models) . . . . .	W-22
Turn Signal and Horn Systems (2006-2010 Airbag Models) . . . . .	W-23
Combination Meter (2001 Models) . . . . .	W-24
Combination Meter (2002-2005 Models) . . . . .	W-25
Combination Meter (2006-2008 1A, 1B, 1C, 1E and 2009-2010 2A Models) . . . . .	W-26
Combination Meter (2006-2008 1D and 1F Models) . . . . .	W-27
Combination Meter (2009-2010 2B, 2C and 2E Models) . . . . .	W-28
Combination Meter (2006-2010 Airbag Models) . . . . .	W-29
Cruise Control System (2001-2003 Models) . . . . .	W-30
Cruise Control System (2004-2005 Models) . . . . .	W-31
Cruise Control System (2006-2010 Non-Airbag Models) . . . . .	W-32
Cruise Control System (2006-2010 Airbag Models) . . . . .	W-33
Accessory and Trunk Lock Control Systems (2001-2002 Models) . . . . .	W-34
Accessory and Trunk Lock Control Systems (2003-2005 Models) . . . . .	W-35
Accessory and Trunk Lock Control Systems (2006-2010 Models) . . . . .	W-36
Audio System (2001-2002 Models) . . . . .	W-37
Audio System (2003 Models) . . . . .	W-38
Audio System (2004-2005 Models) . . . . .	W-39
Audio System (2006-2008 1A Models) . . . . .	W-40
Audio System (2006-2008 1B, 1C, 1D, 1E, 1F and 2009-2010 2A, 2B, 2C, 2E Models) . . . . .	W-41
Audio System (Airbag Models) . . . . .	W-42
Audio System Switches (Airbag Models) . . . . .	W-43
Suspension Level Control System (2001 Models) . . . . .	W-44
Suspension Level Control System (2002-2005 Models) . . . . .	W-45
Suspension Level Control System (2006-2008 1A, 1B, 1C and 1E Models) . . . . .	W-46
Suspension Level Control System (2006-2008 1D and 1F Models) . . . . .	W-47
Suspension Level Control System (2006-2008 1G Models) . . . . .	W-48
Suspension Level Control System/TPMS (2009-2010 2A Models) . . . . .	W-49
Suspension Level Control System/TPMS (2009-2010 2B, 2C, 2D, 2E and 2F Models) . . . . .	W-50
Fuse Box and Relay Box (2001-2005 Models) . . . . .	W-51
Fuse Box and Relay Box (2001-2005 Models) . . . . .	W-52
Fuse Box (2006-2008 1A, 1B, 1C, 1D and 2009-2010 2A, 2B, 2C, 2E Models) . . . . .	W-53
Fuse Box (2006-2008 1E and 1F Models) . . . . .	W-54
Fuse Box (2006-2010 Airbag Models) . . . . .	W-55
Relay Box (2006-2008 1A, 1B, 1C, 1D and 2009-2010 2A, 2B Models) . . . . .	W-56
Relay Box (2006-2008 1E, 1F, 1G and 2009-2010 2C, 2D, 2E, 2F Models) . . . . .	W-56
Airbag System (2006-2010 Models) . . . . .	W-57
Heated Hand Grips and Seat Heater System (2006-2010 Models Except 1B) . . . . .	W-58
Navigation System (2006-2008 1D and 1F Models) . . . . .	W-59
Navigation System (2006-2008 1G and 2009-2010 2F Models) . . . . .	W-60
Navigation System (2009-2010 2B and 2C Models) . . . . .	W-61
Navigation System (2009-2010 2D Models) . . . . .	W-62
Navigation System (2009-2010 2E Models) . . . . .	W-63


W-1


## STARTING AND REVERSE SYSTEMS (2001-2005 MODELS)

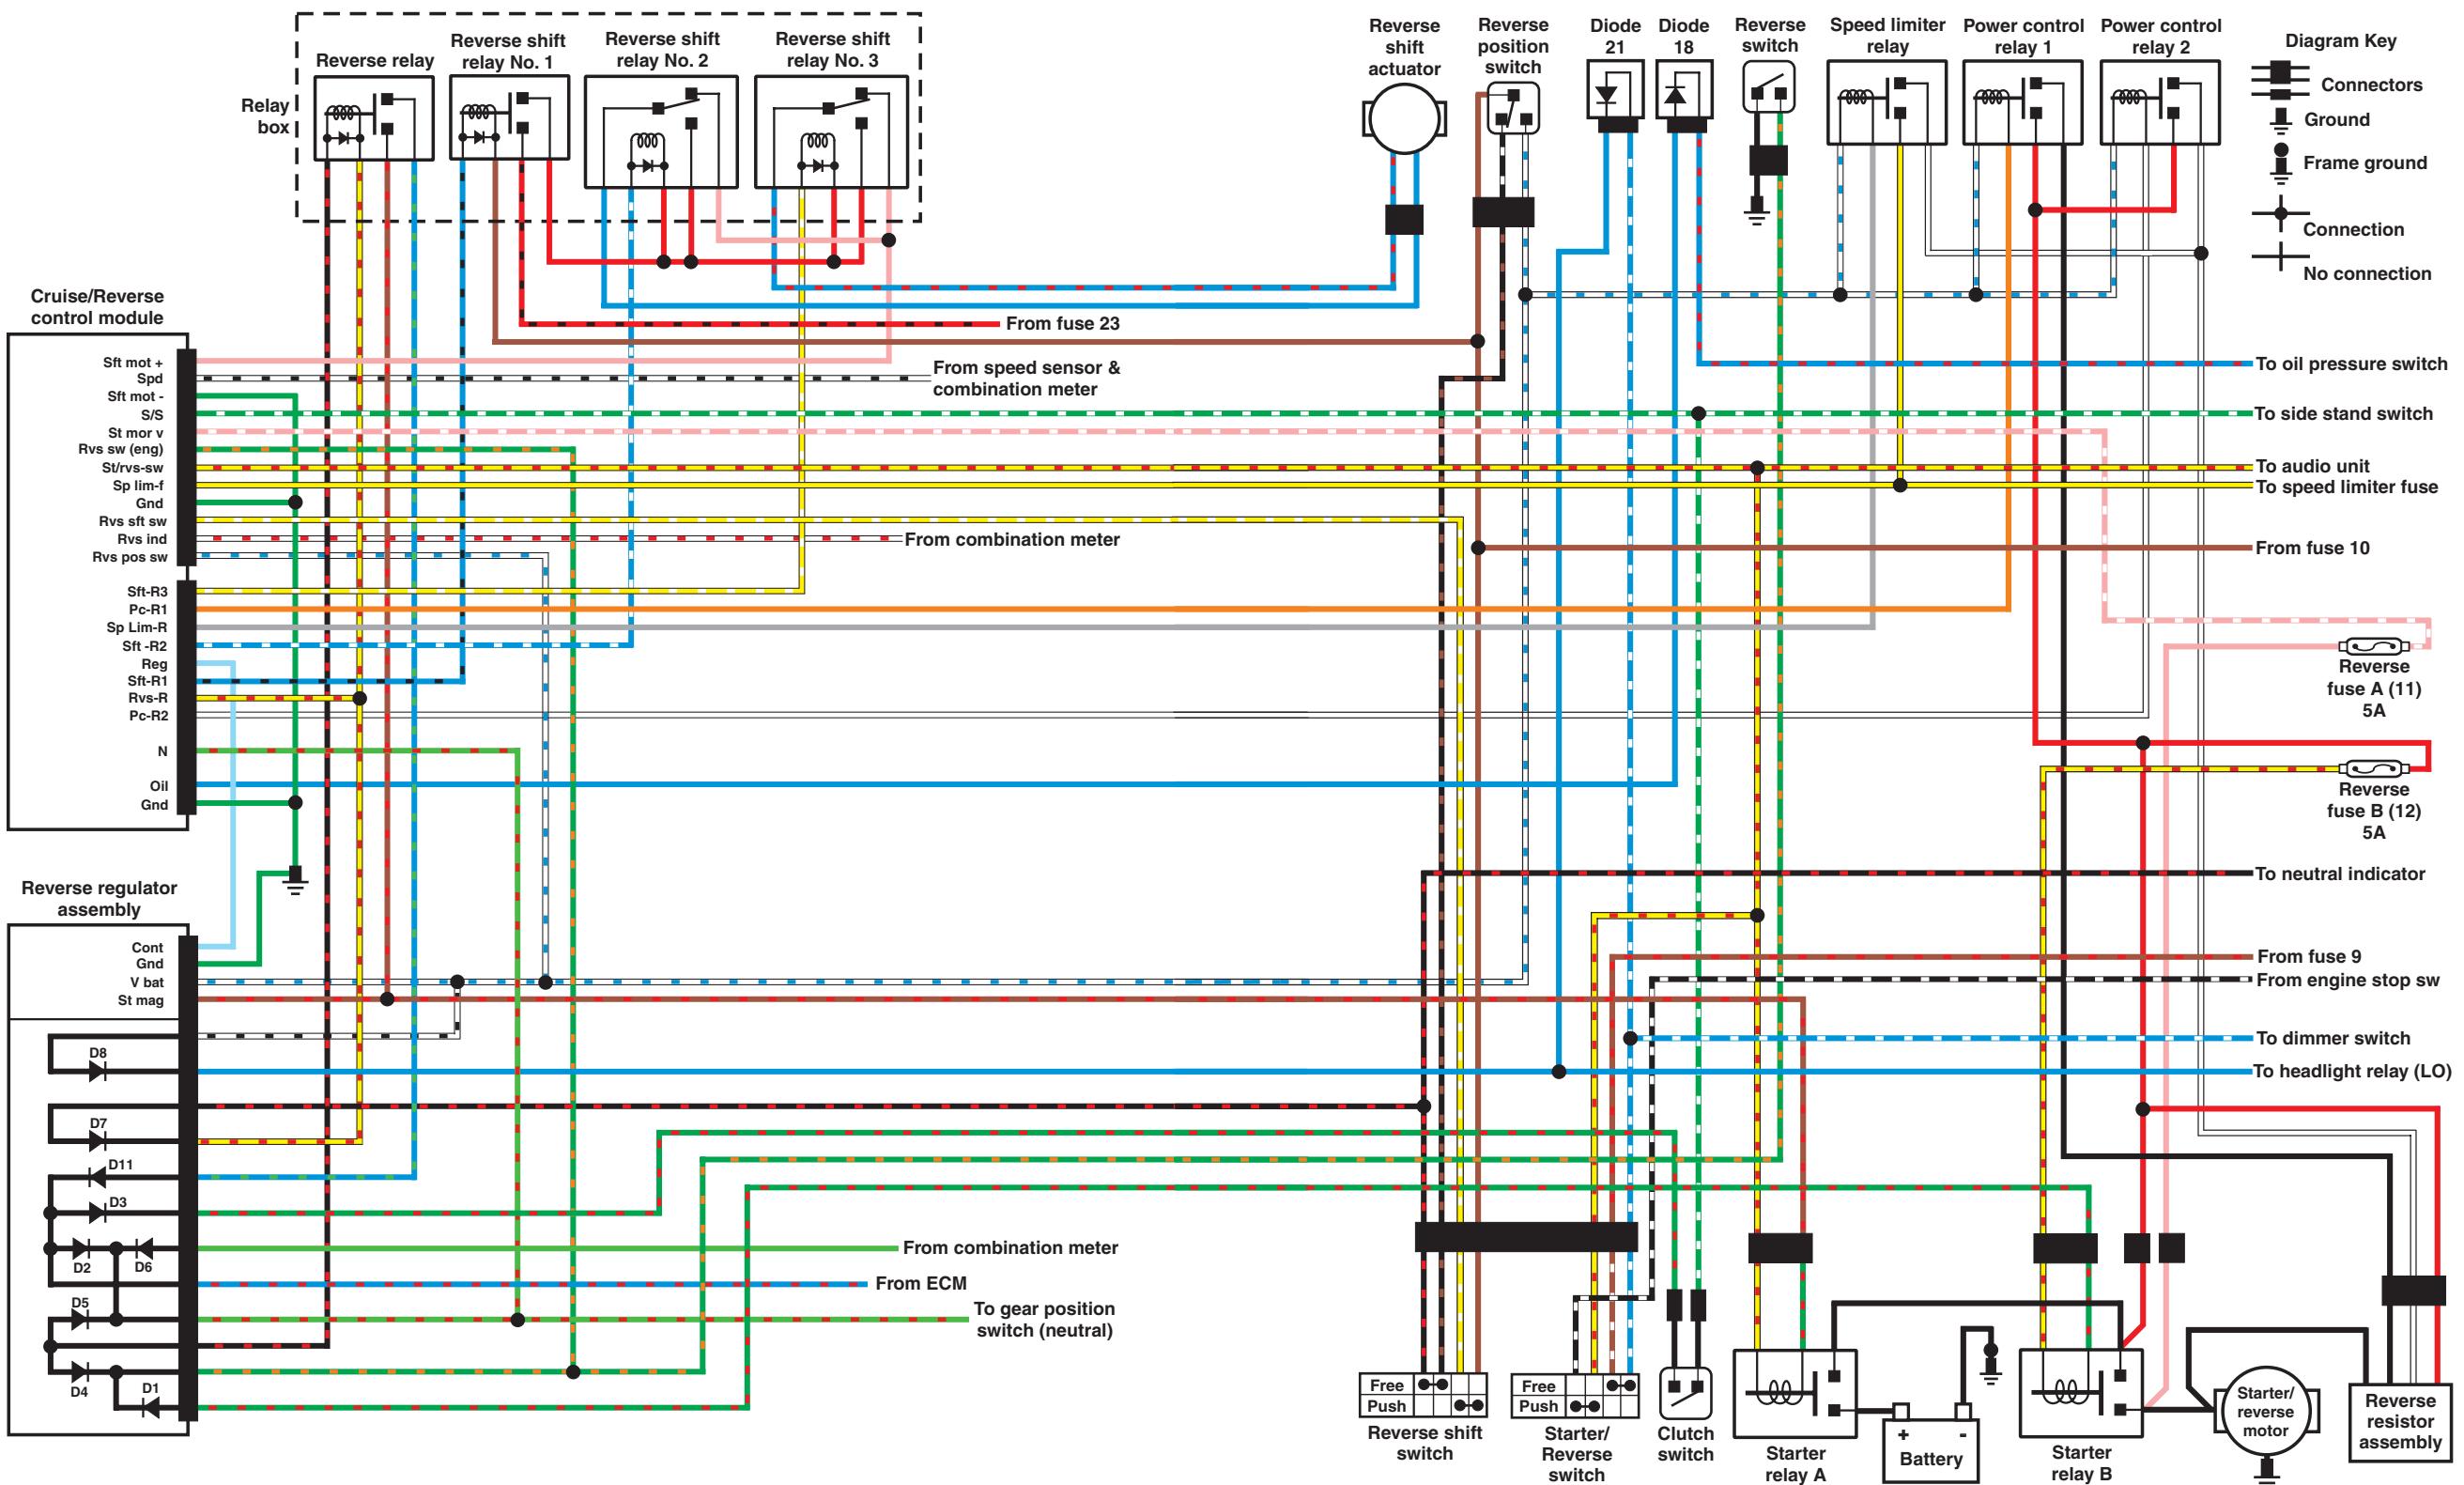


W-2

## STARTING AND REVERSE SYSTEMS (2006-2010 NON-AIRBAG MODELS)

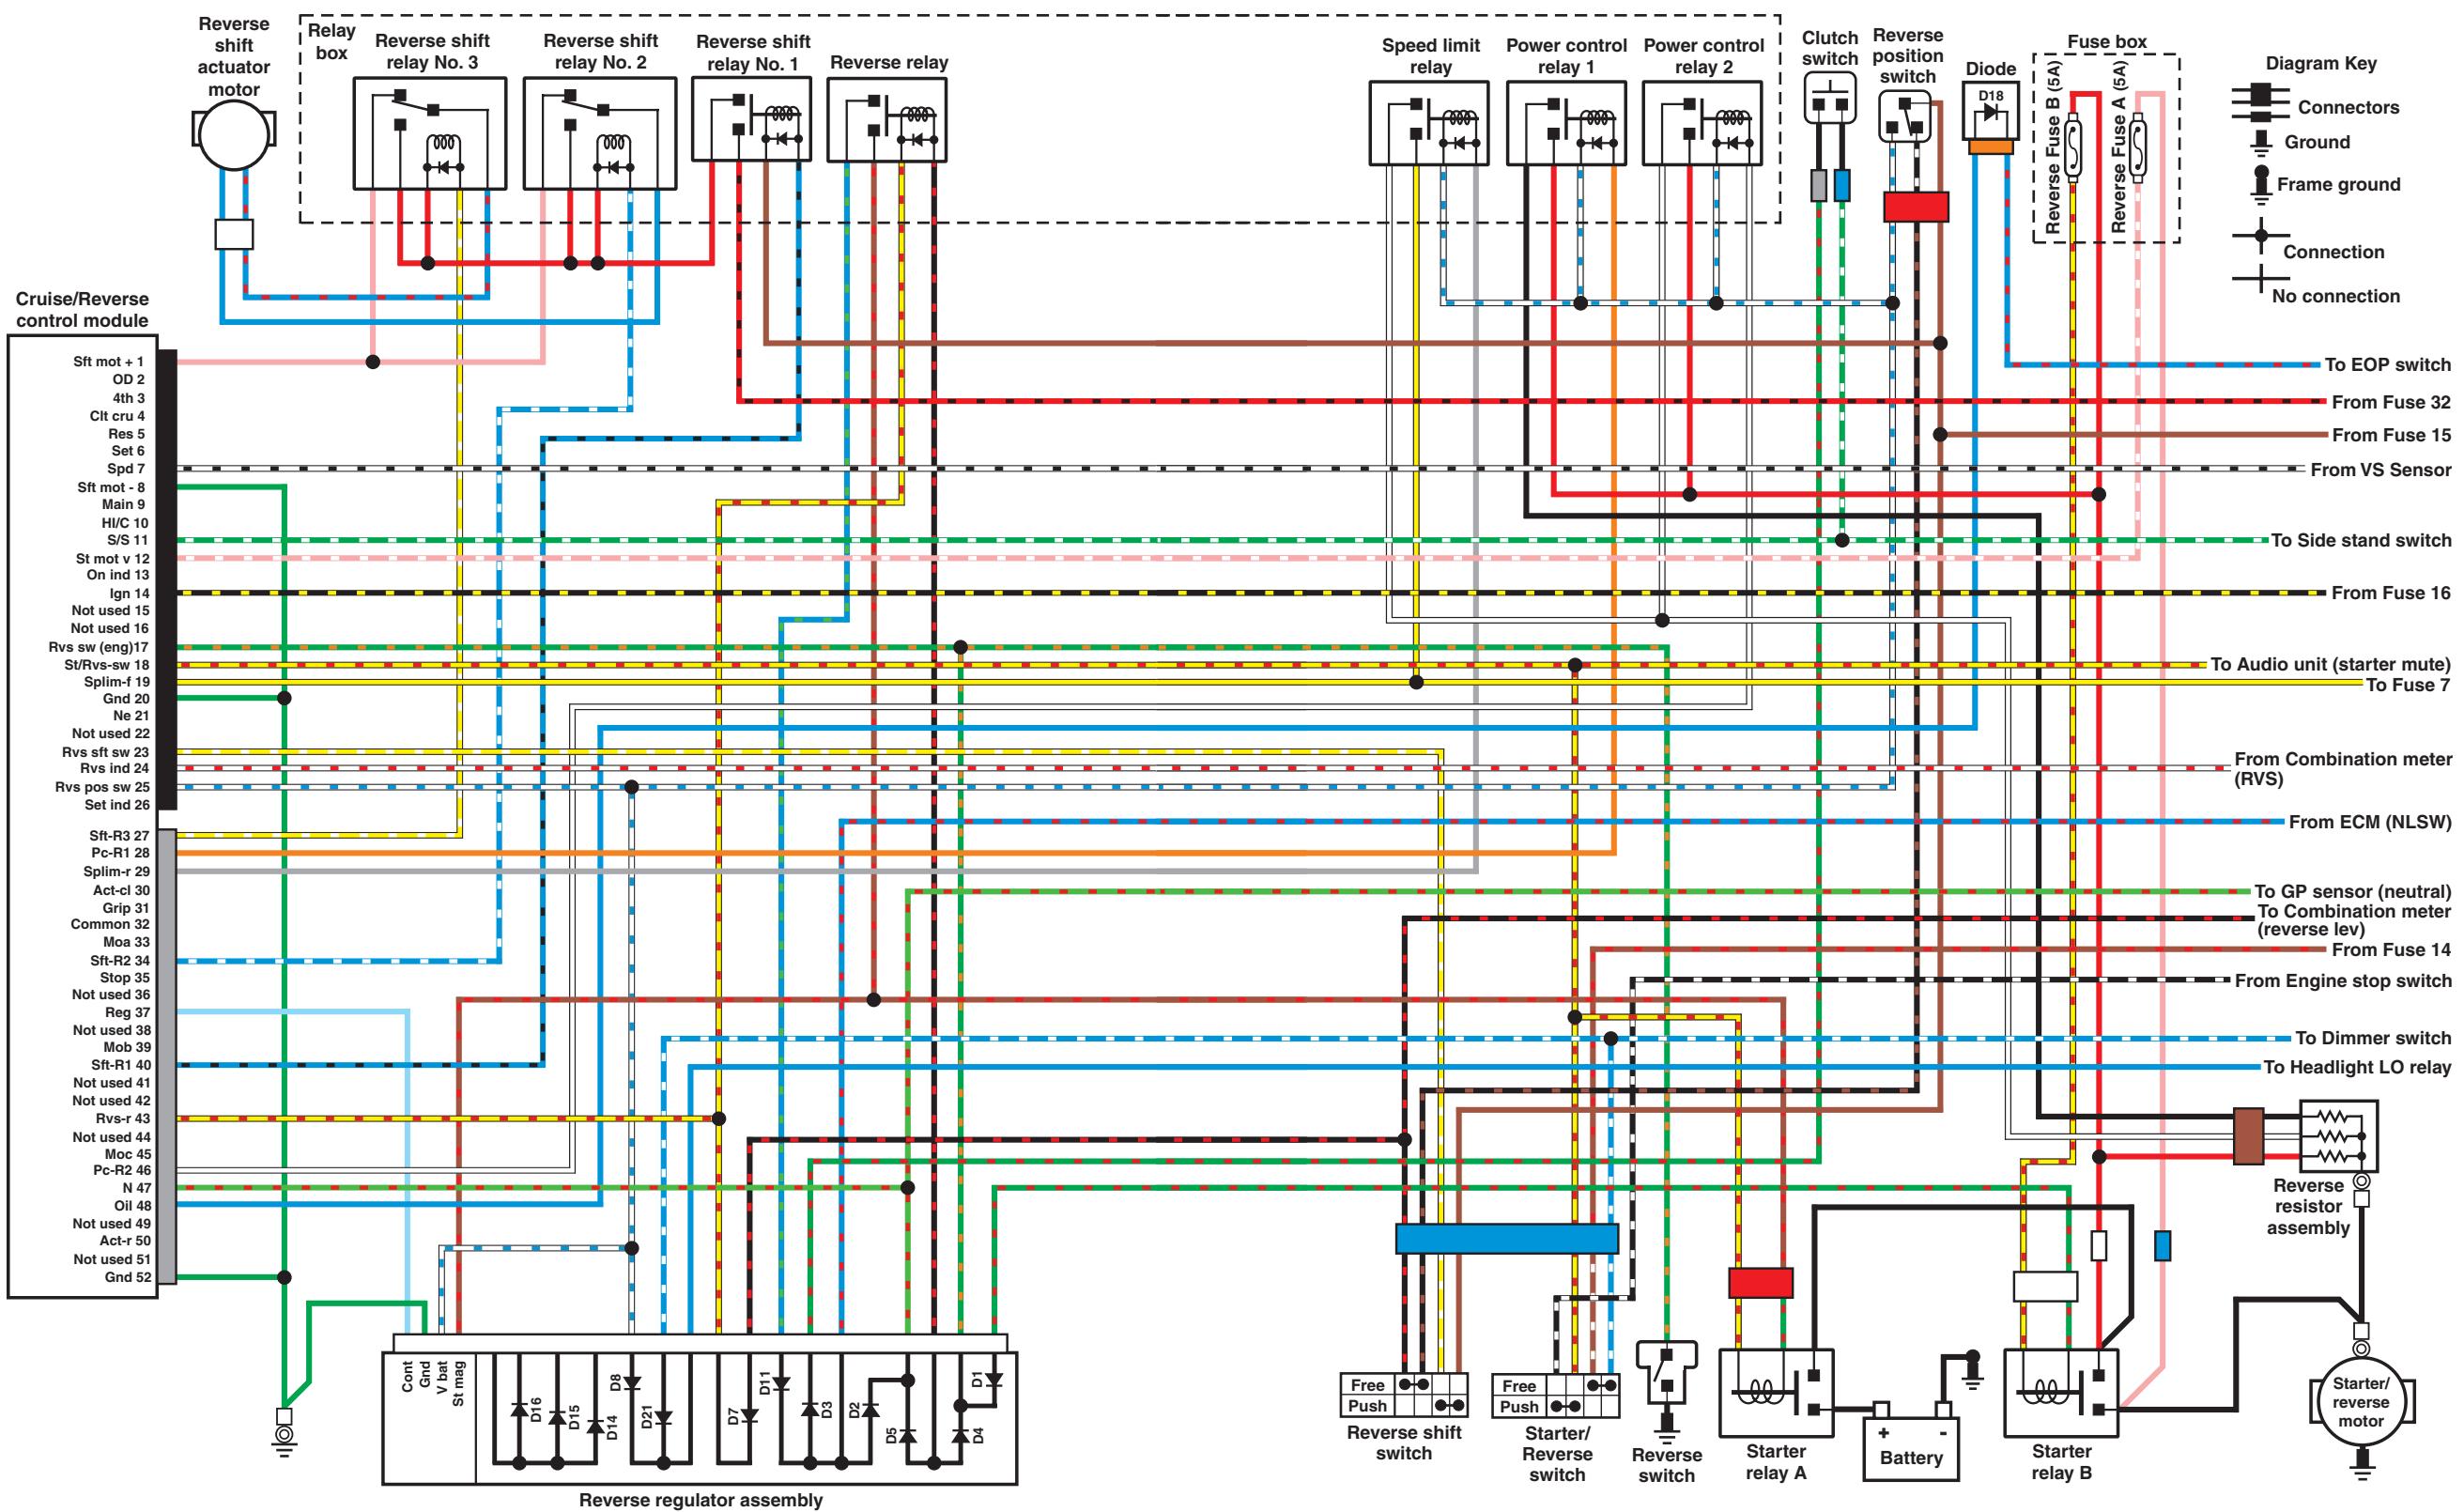


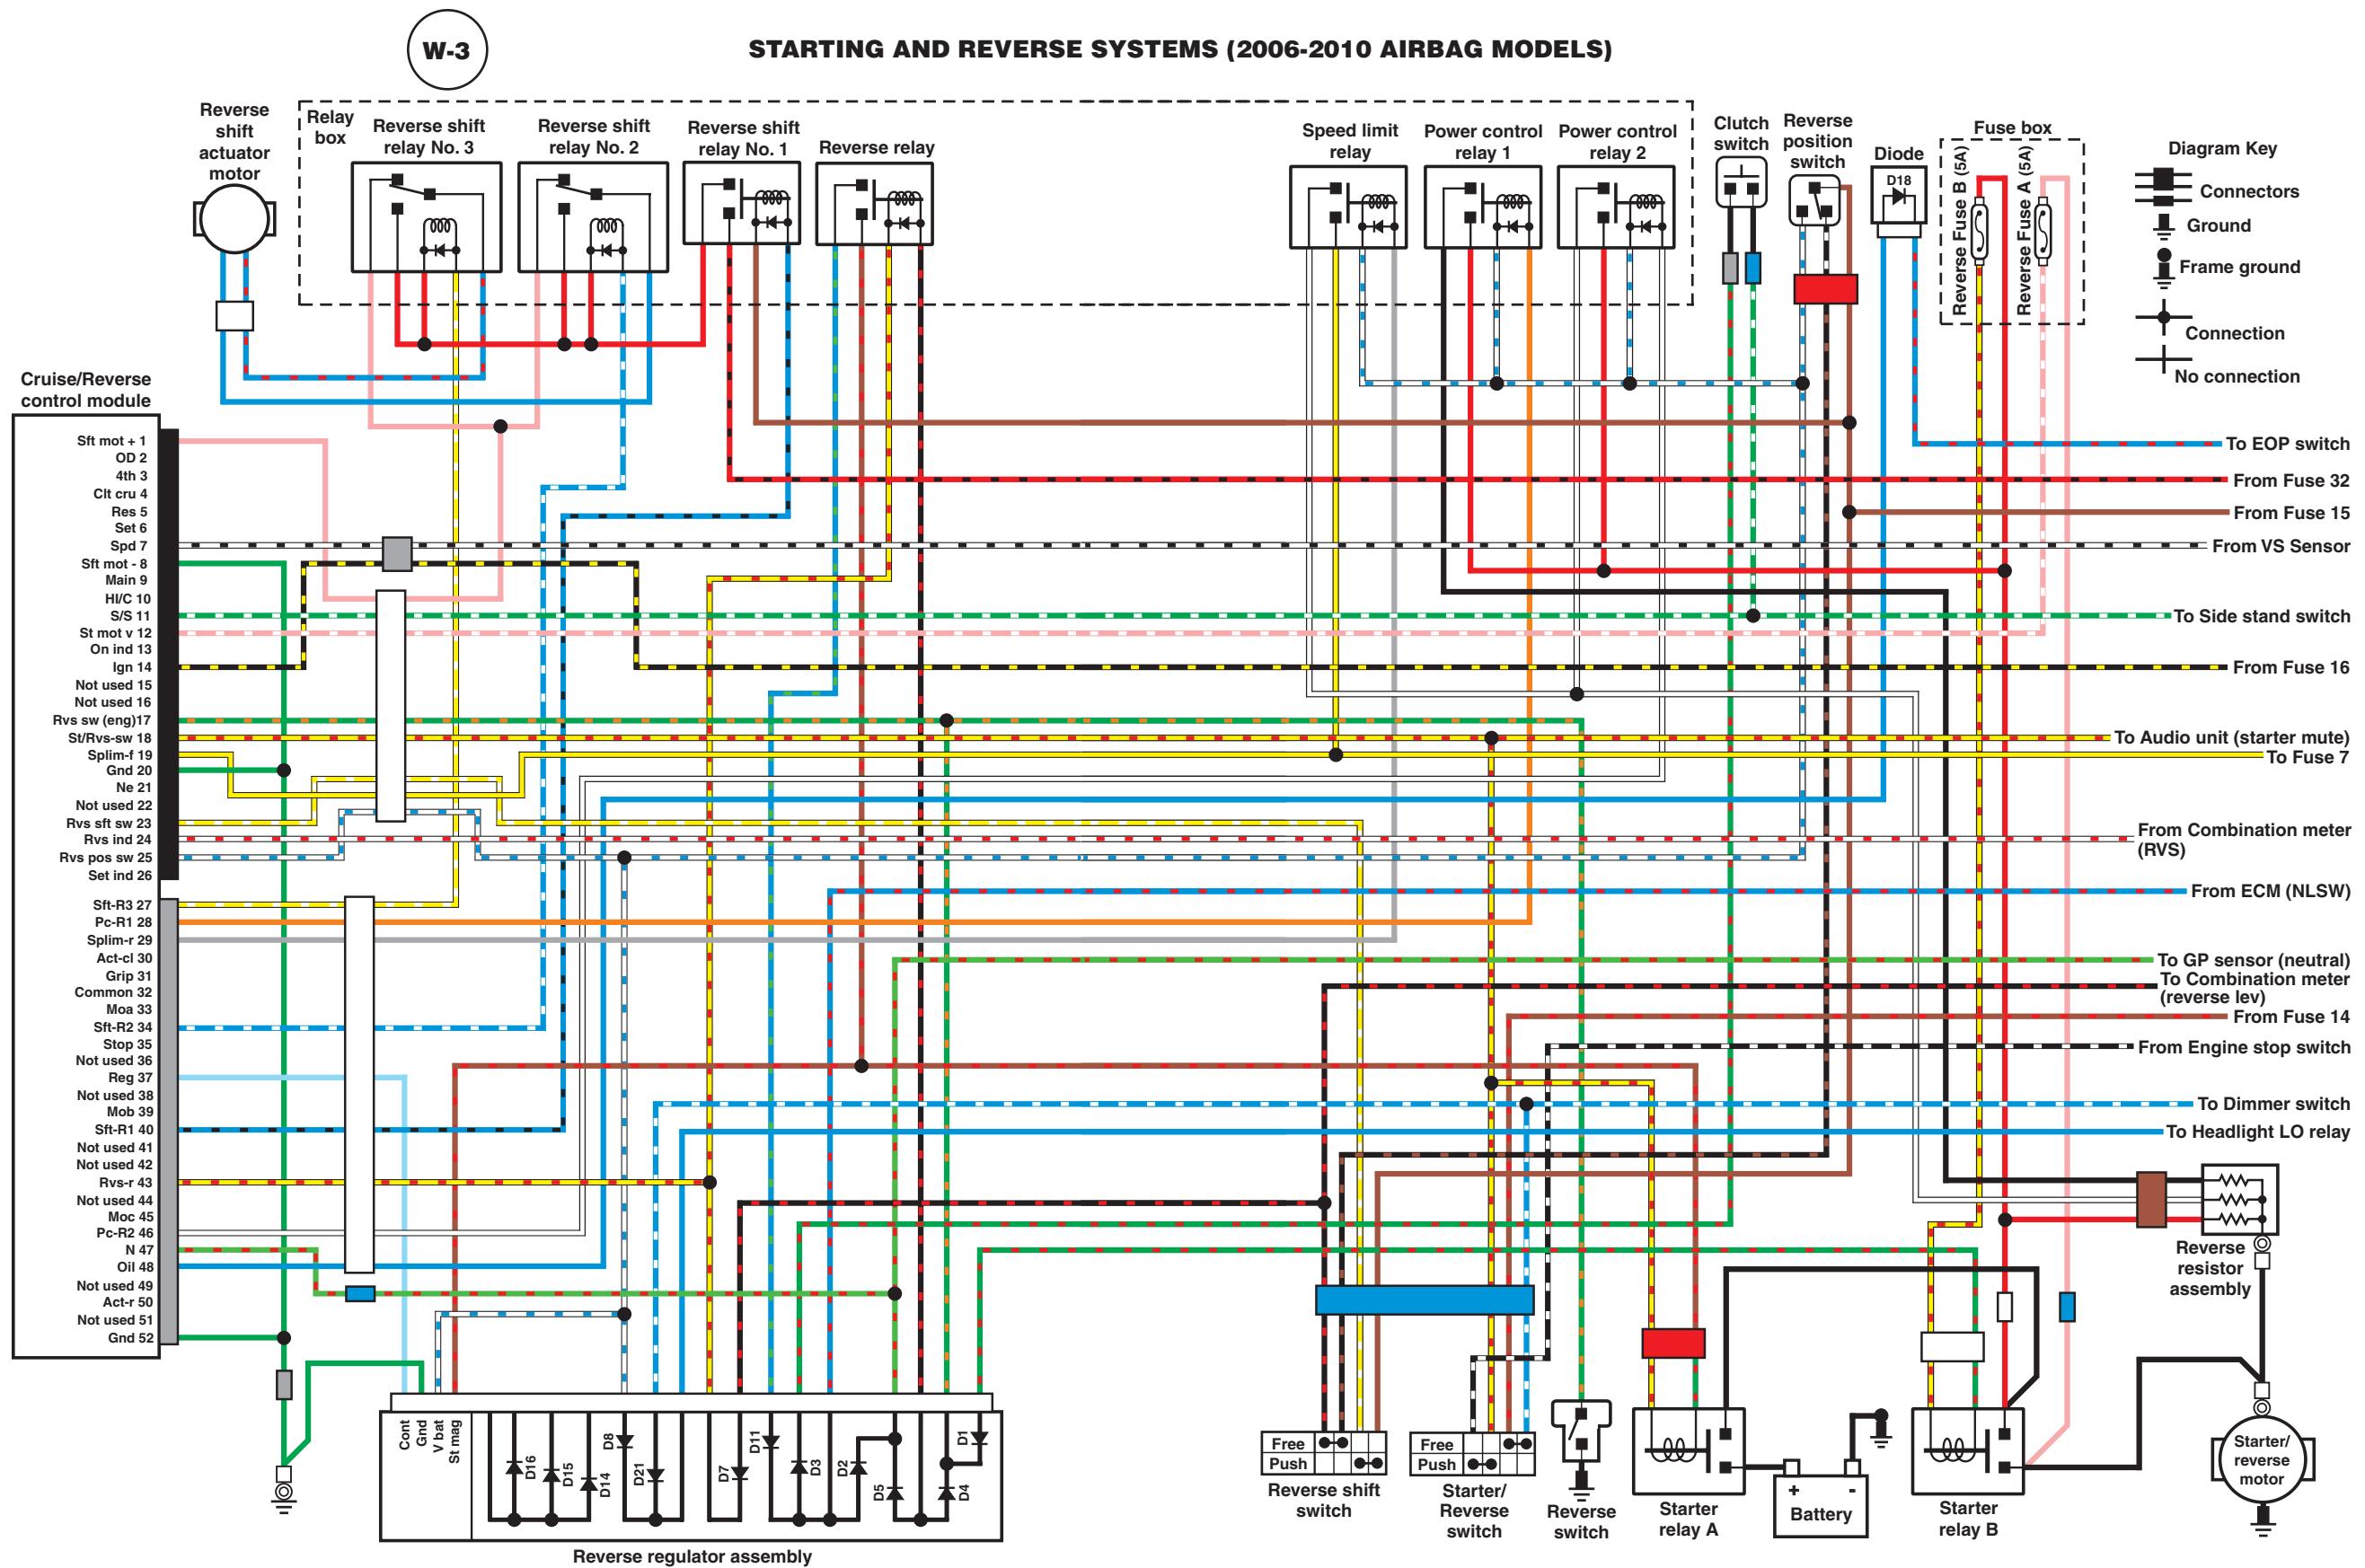

## IGNITION, CHARGING AND COOLING SYSTEMS (2001-2005 MODELS)

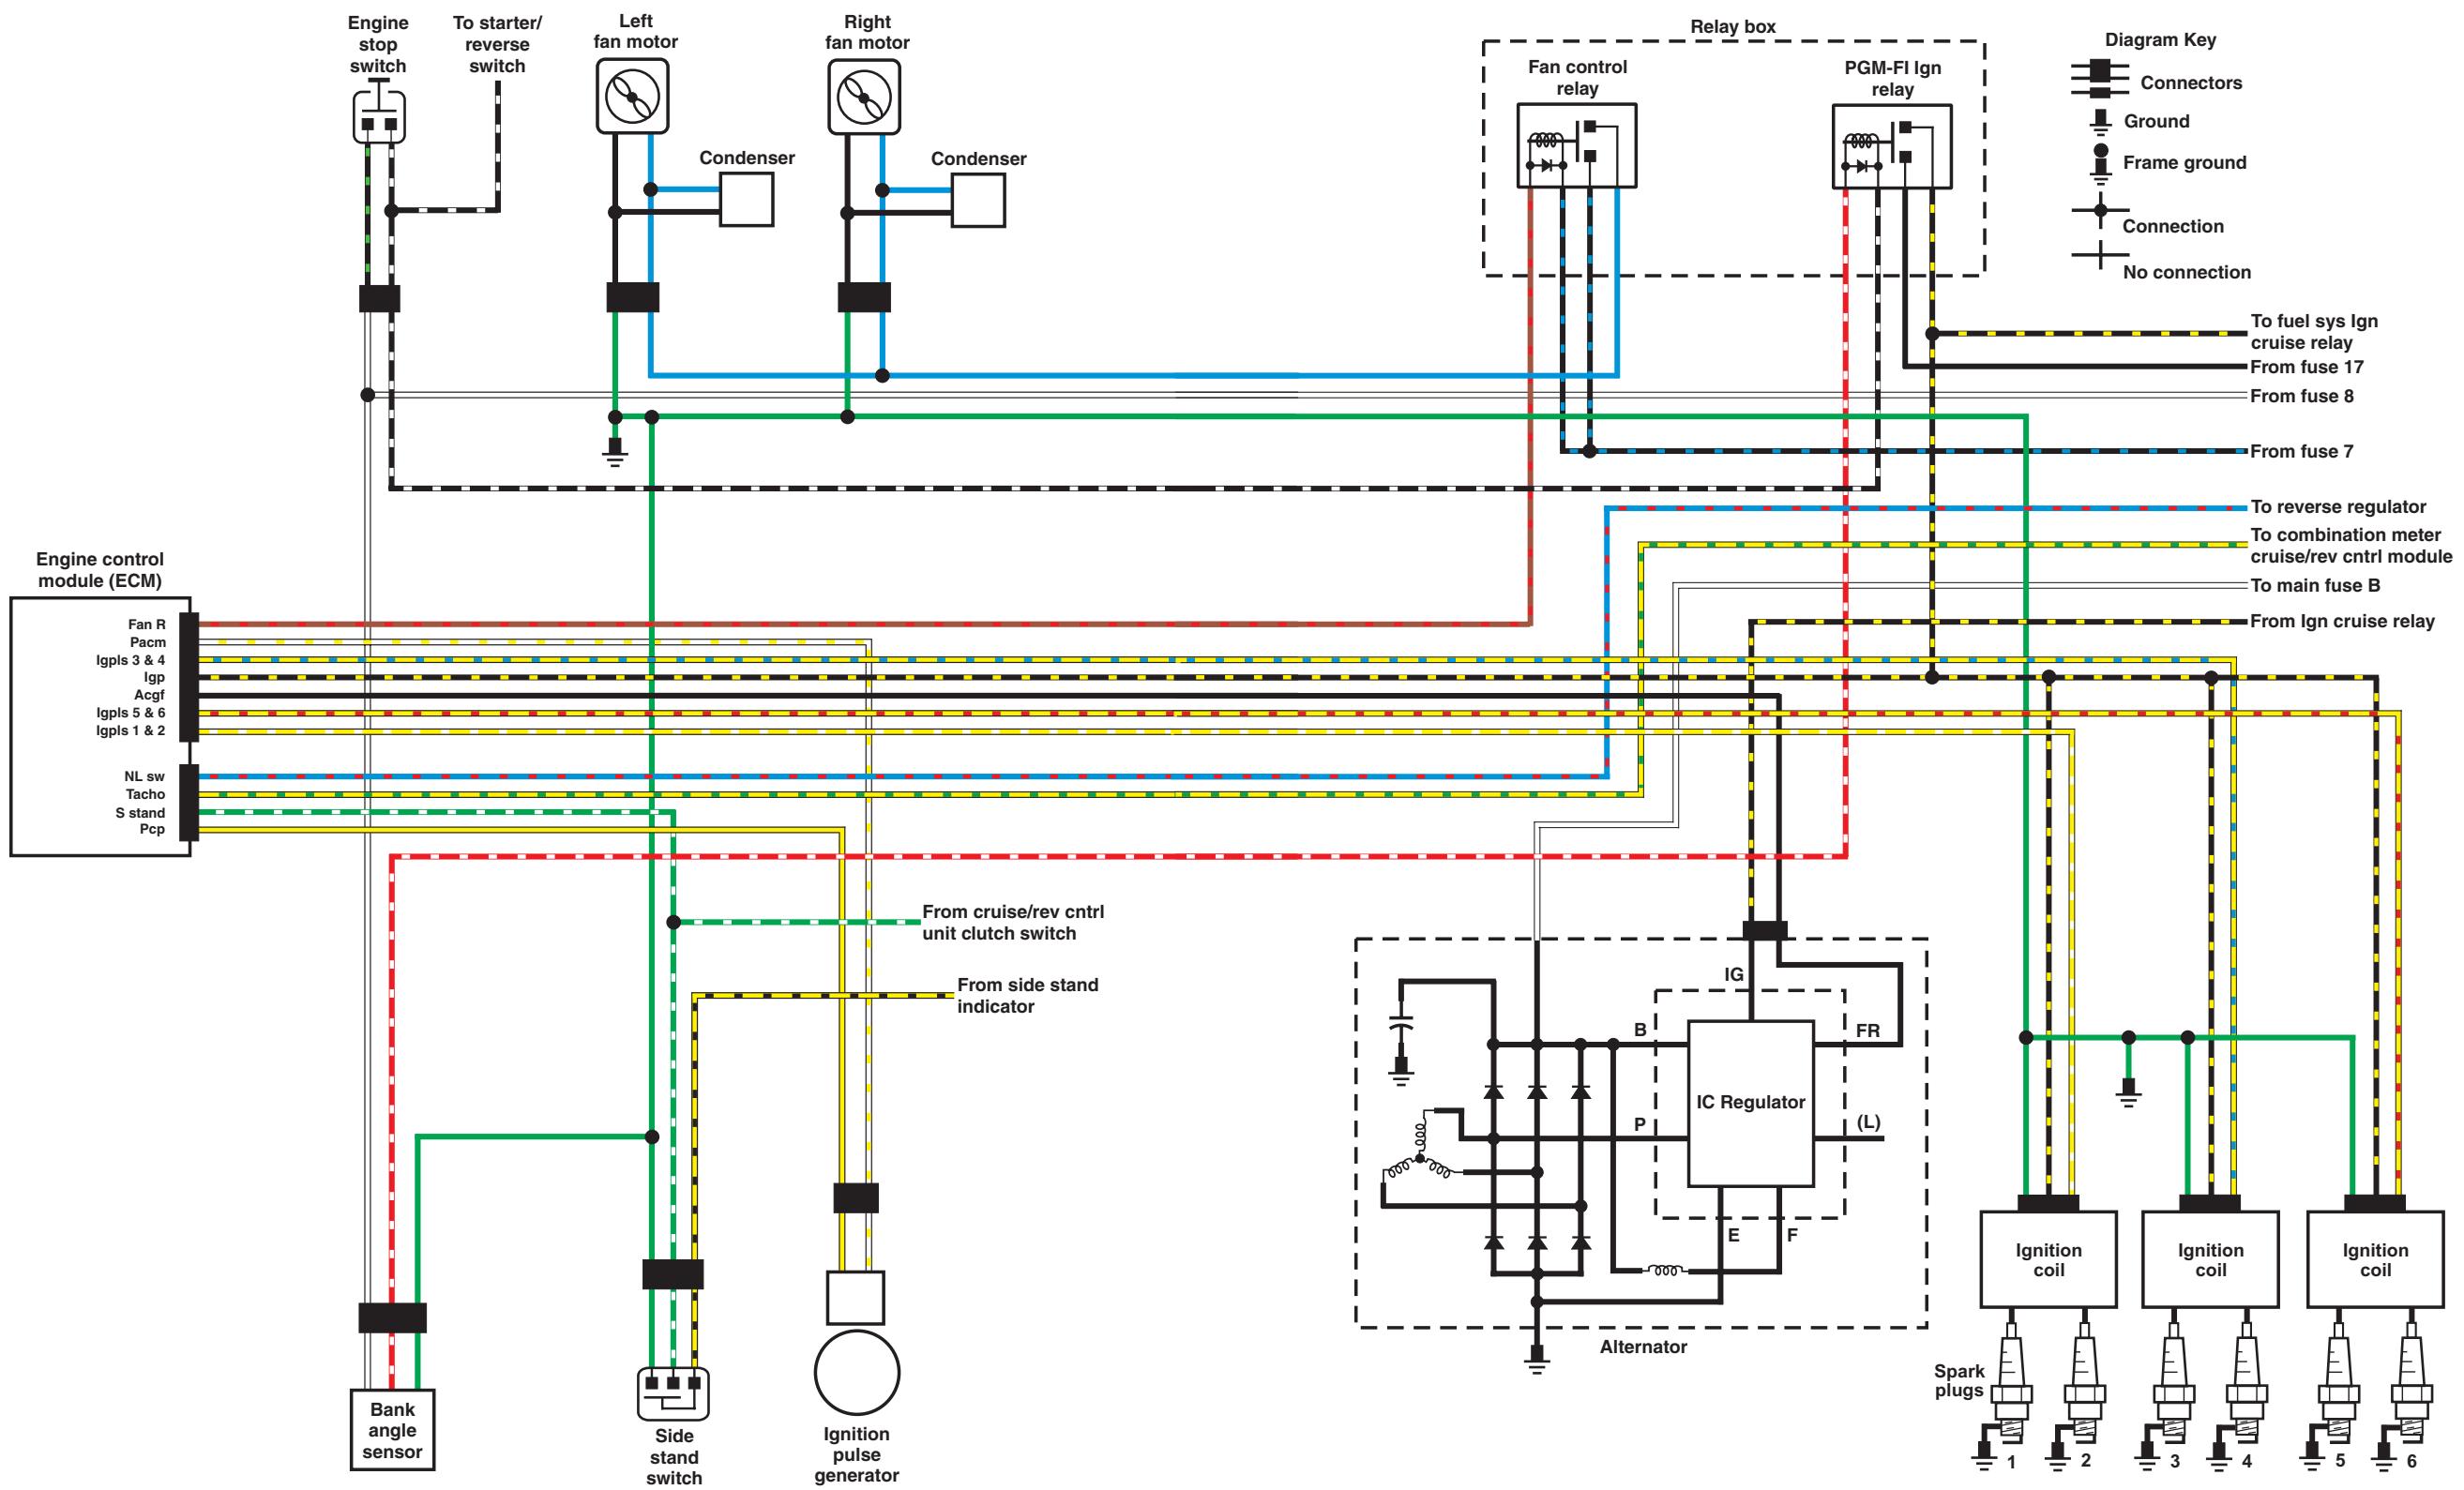


W-5

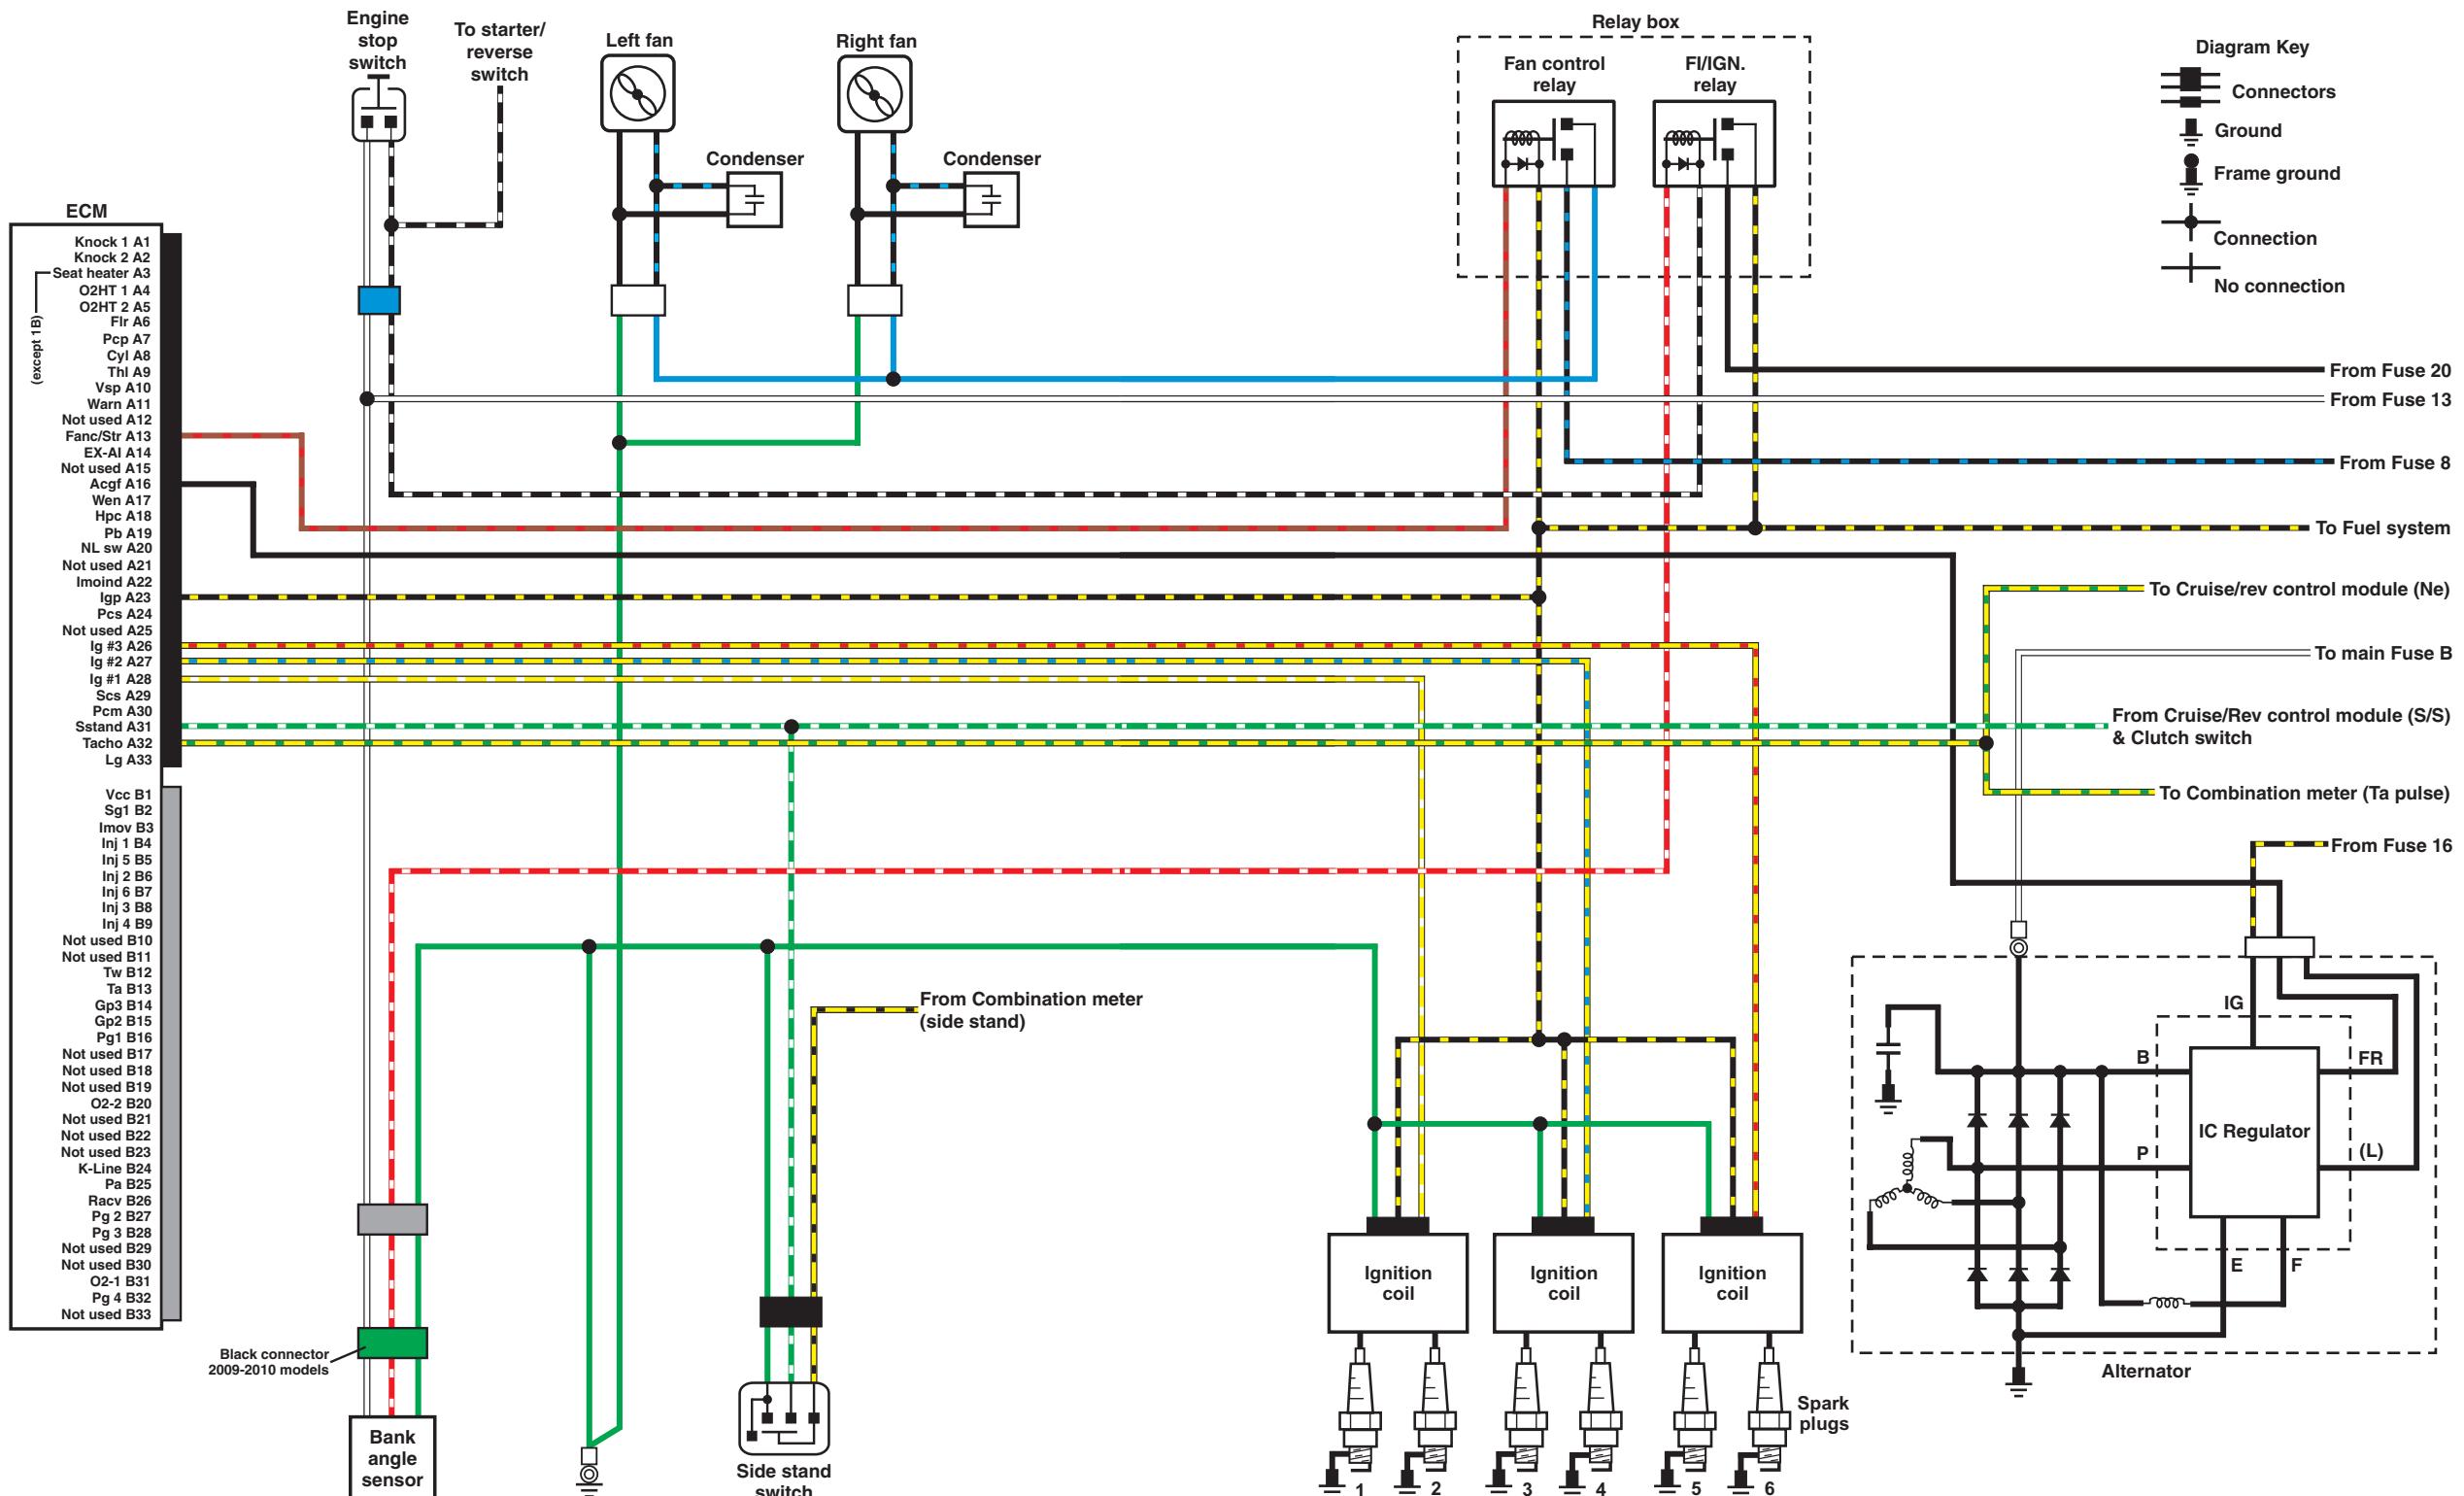**IGNITION, CHARGING AND COOLING SYSTEMS (2006-2008 1A, 1B, 1C, 1D AND  
2009-2010 2A, 2B, 2C, 2E MODELS)**


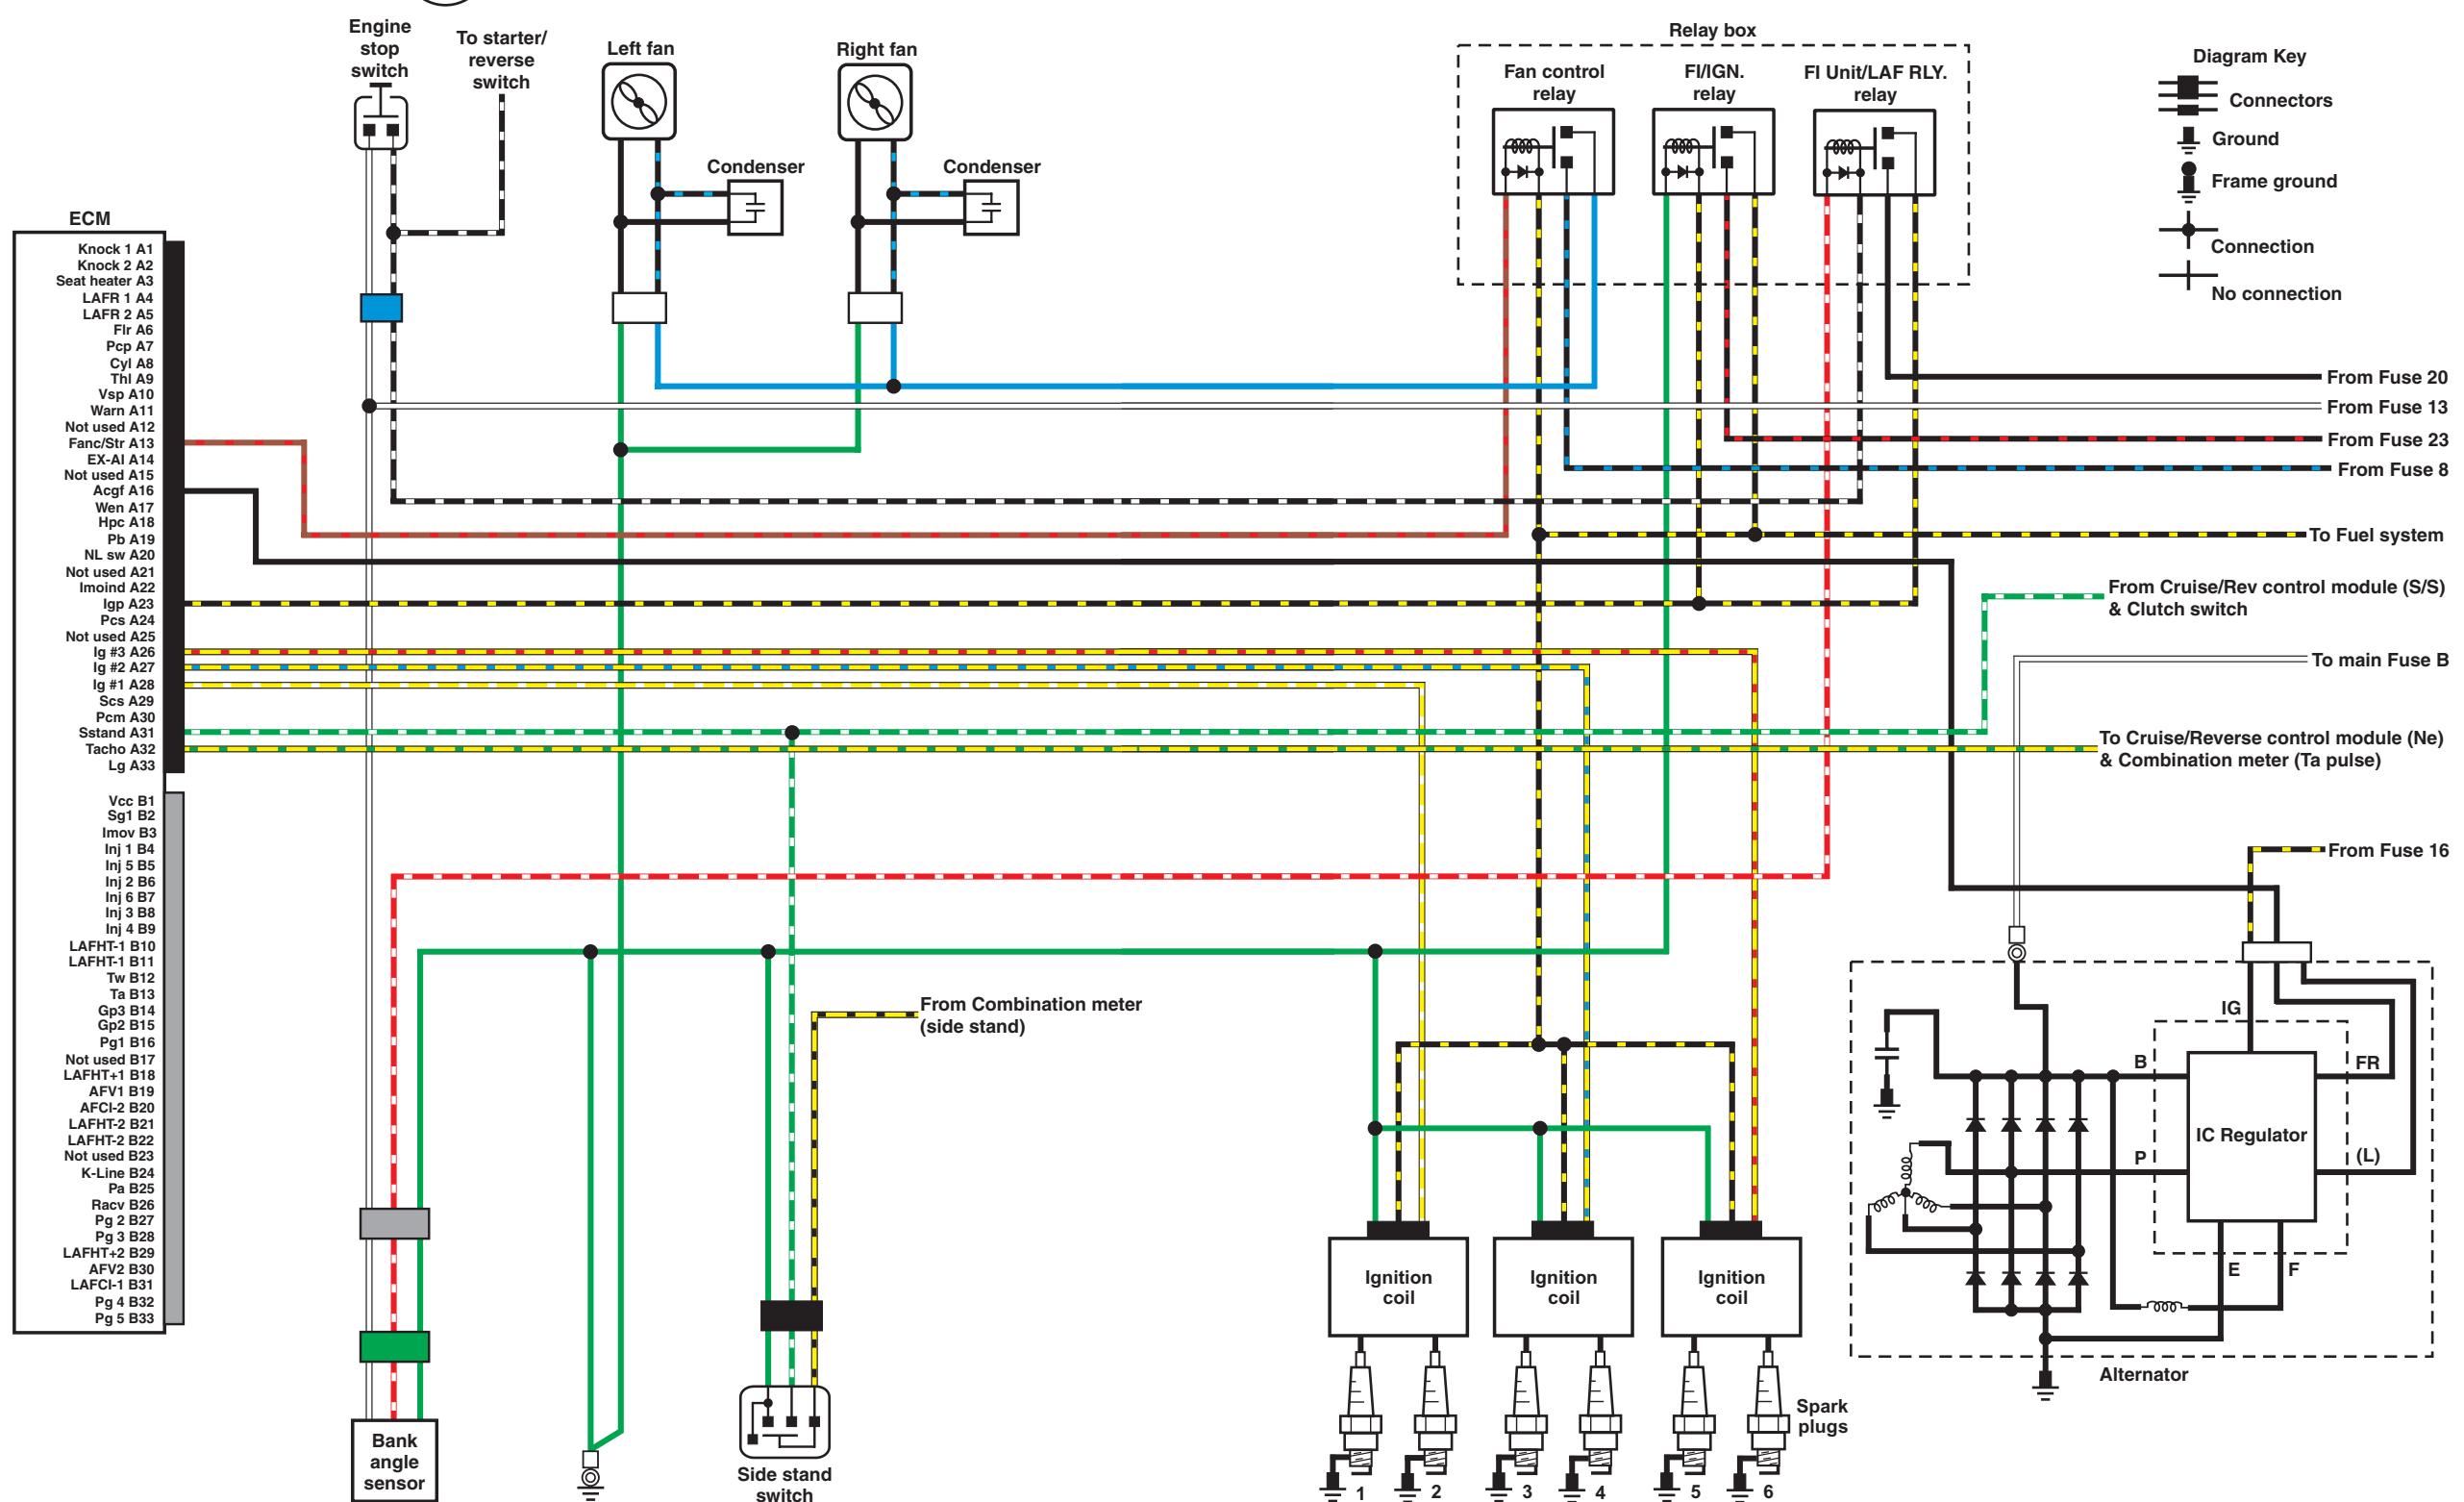
W-6

## IGNITION, CHARGING AND COOLING SYSTEMS (2006-2008 1E AND 1F MODELS)

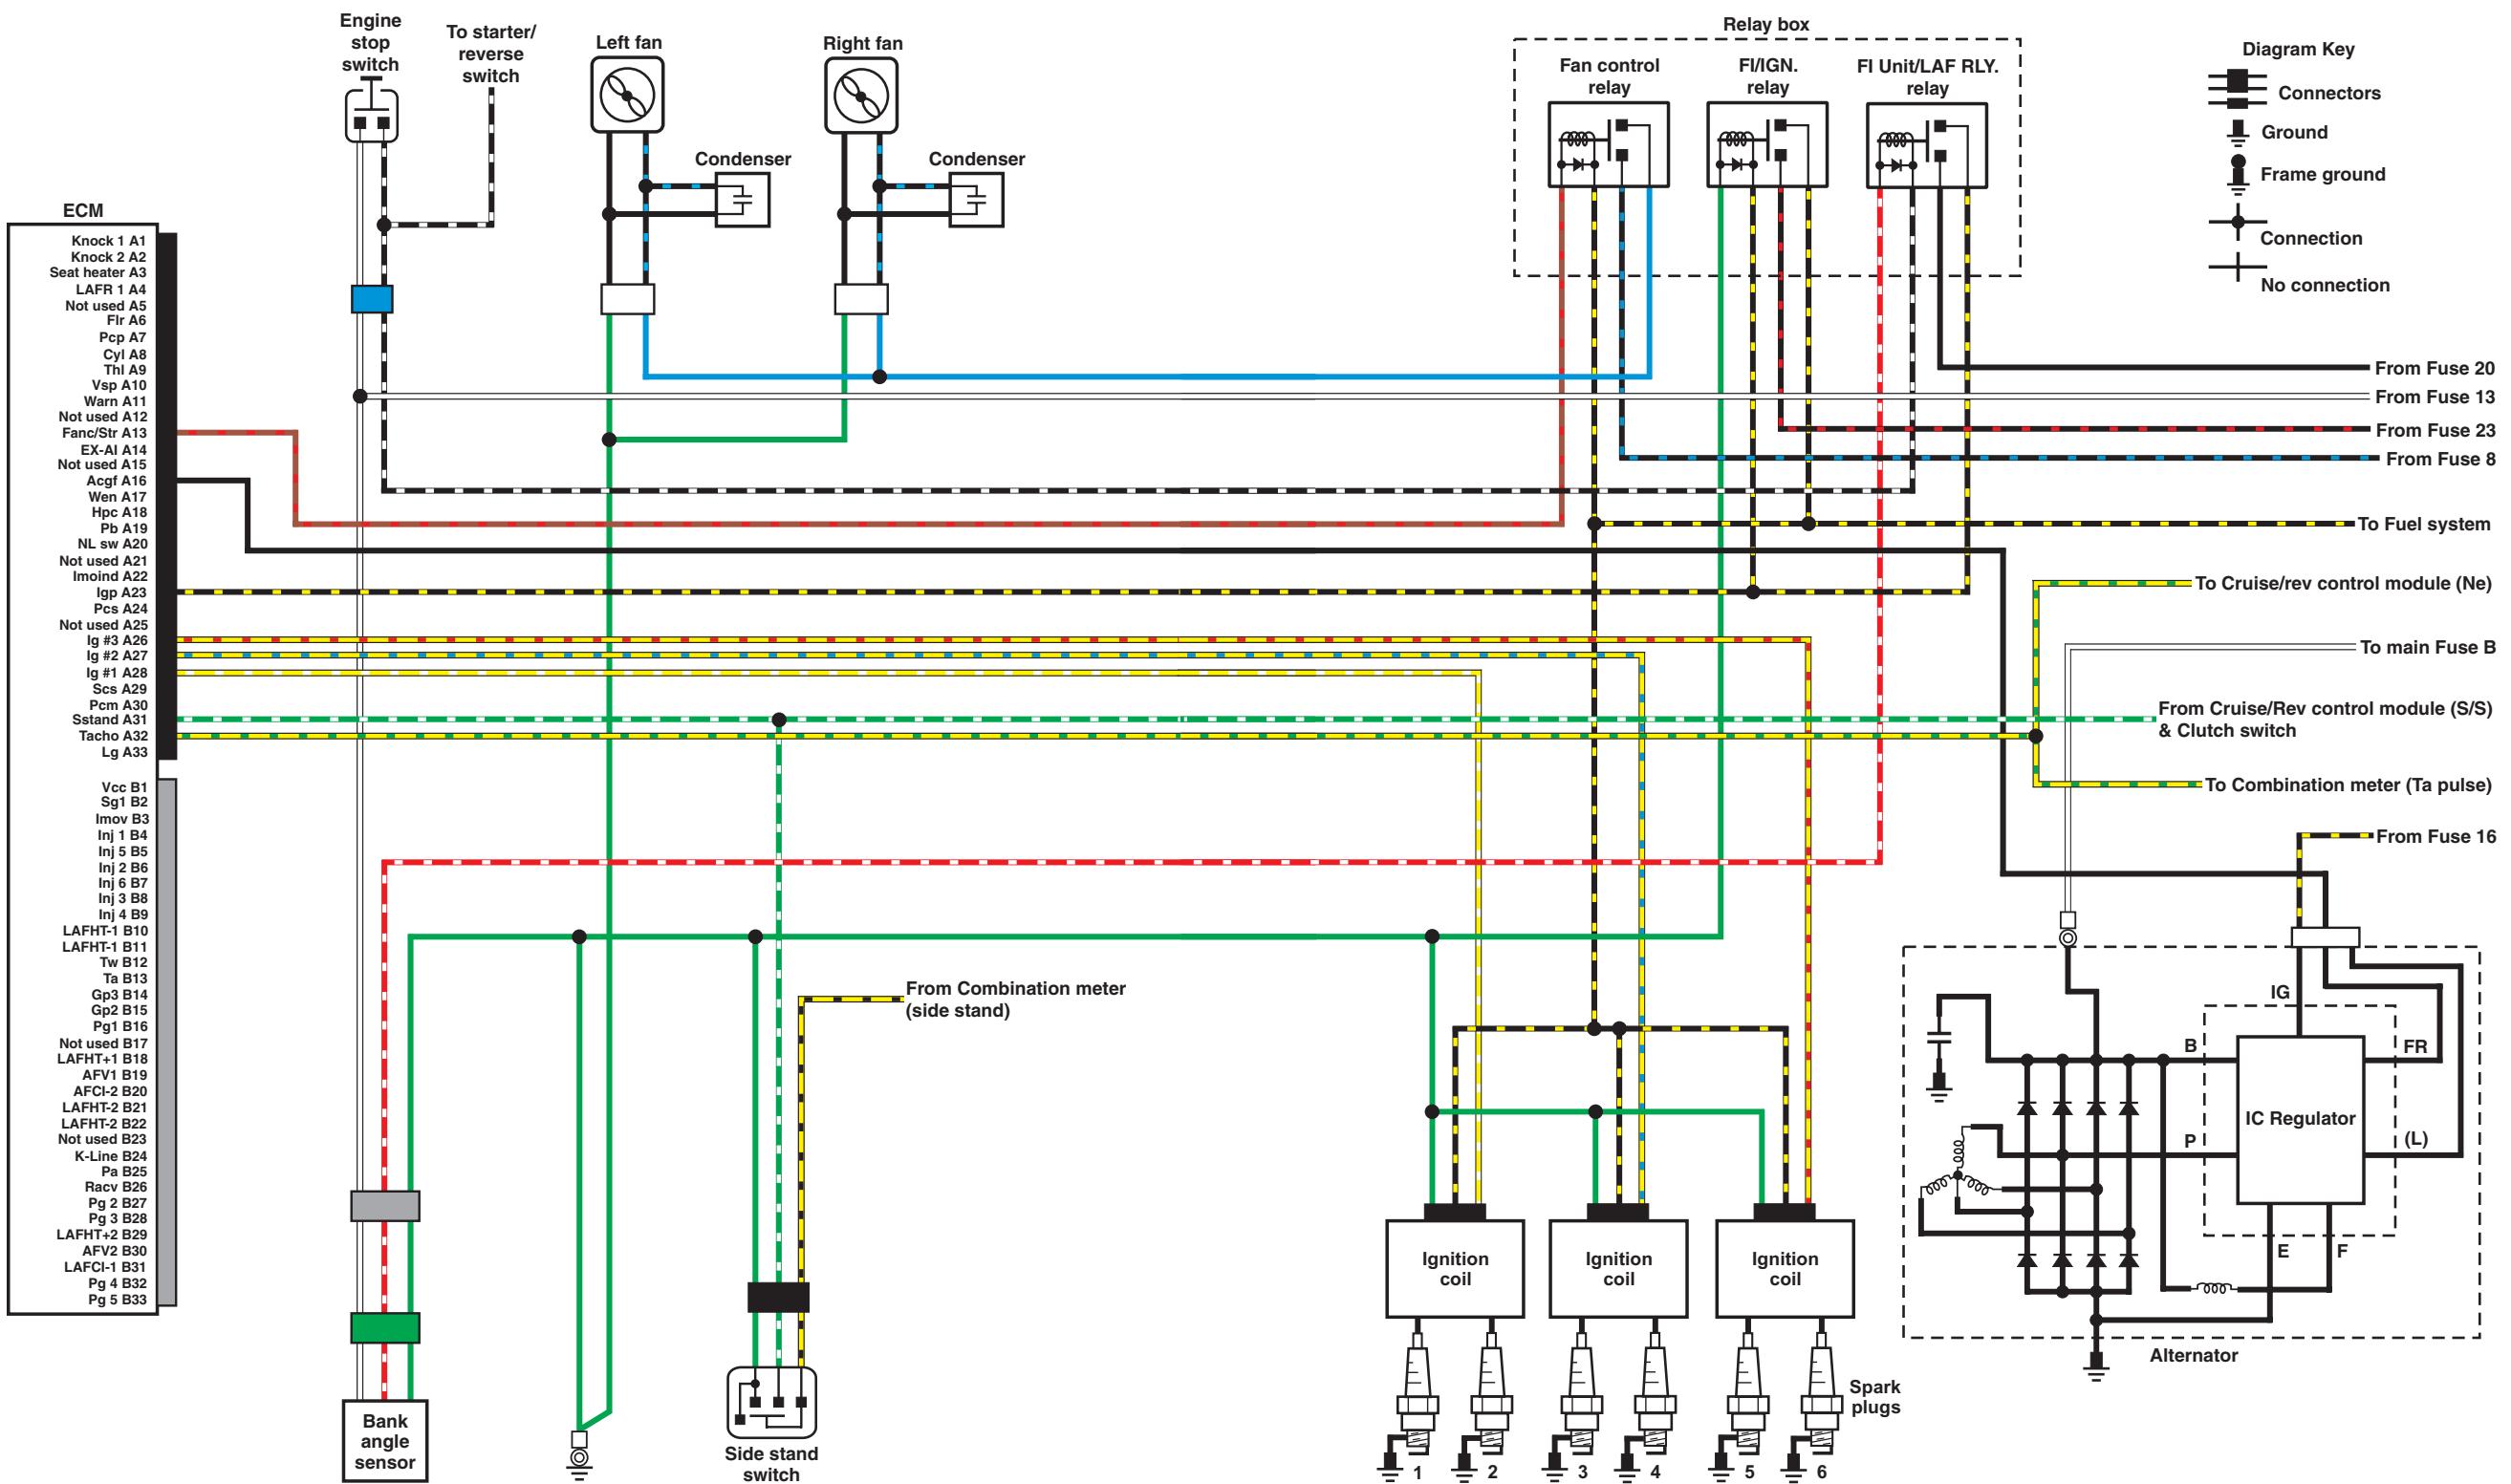


W-7

## IGNITION, CHARGING AND COOLING SYSTEMS (2006-2008 1G MODELS)




W-8

## IGNITION, CHARGING AND COOLING SYSTEMS (2009-2010 2D AND 2F MODELS)

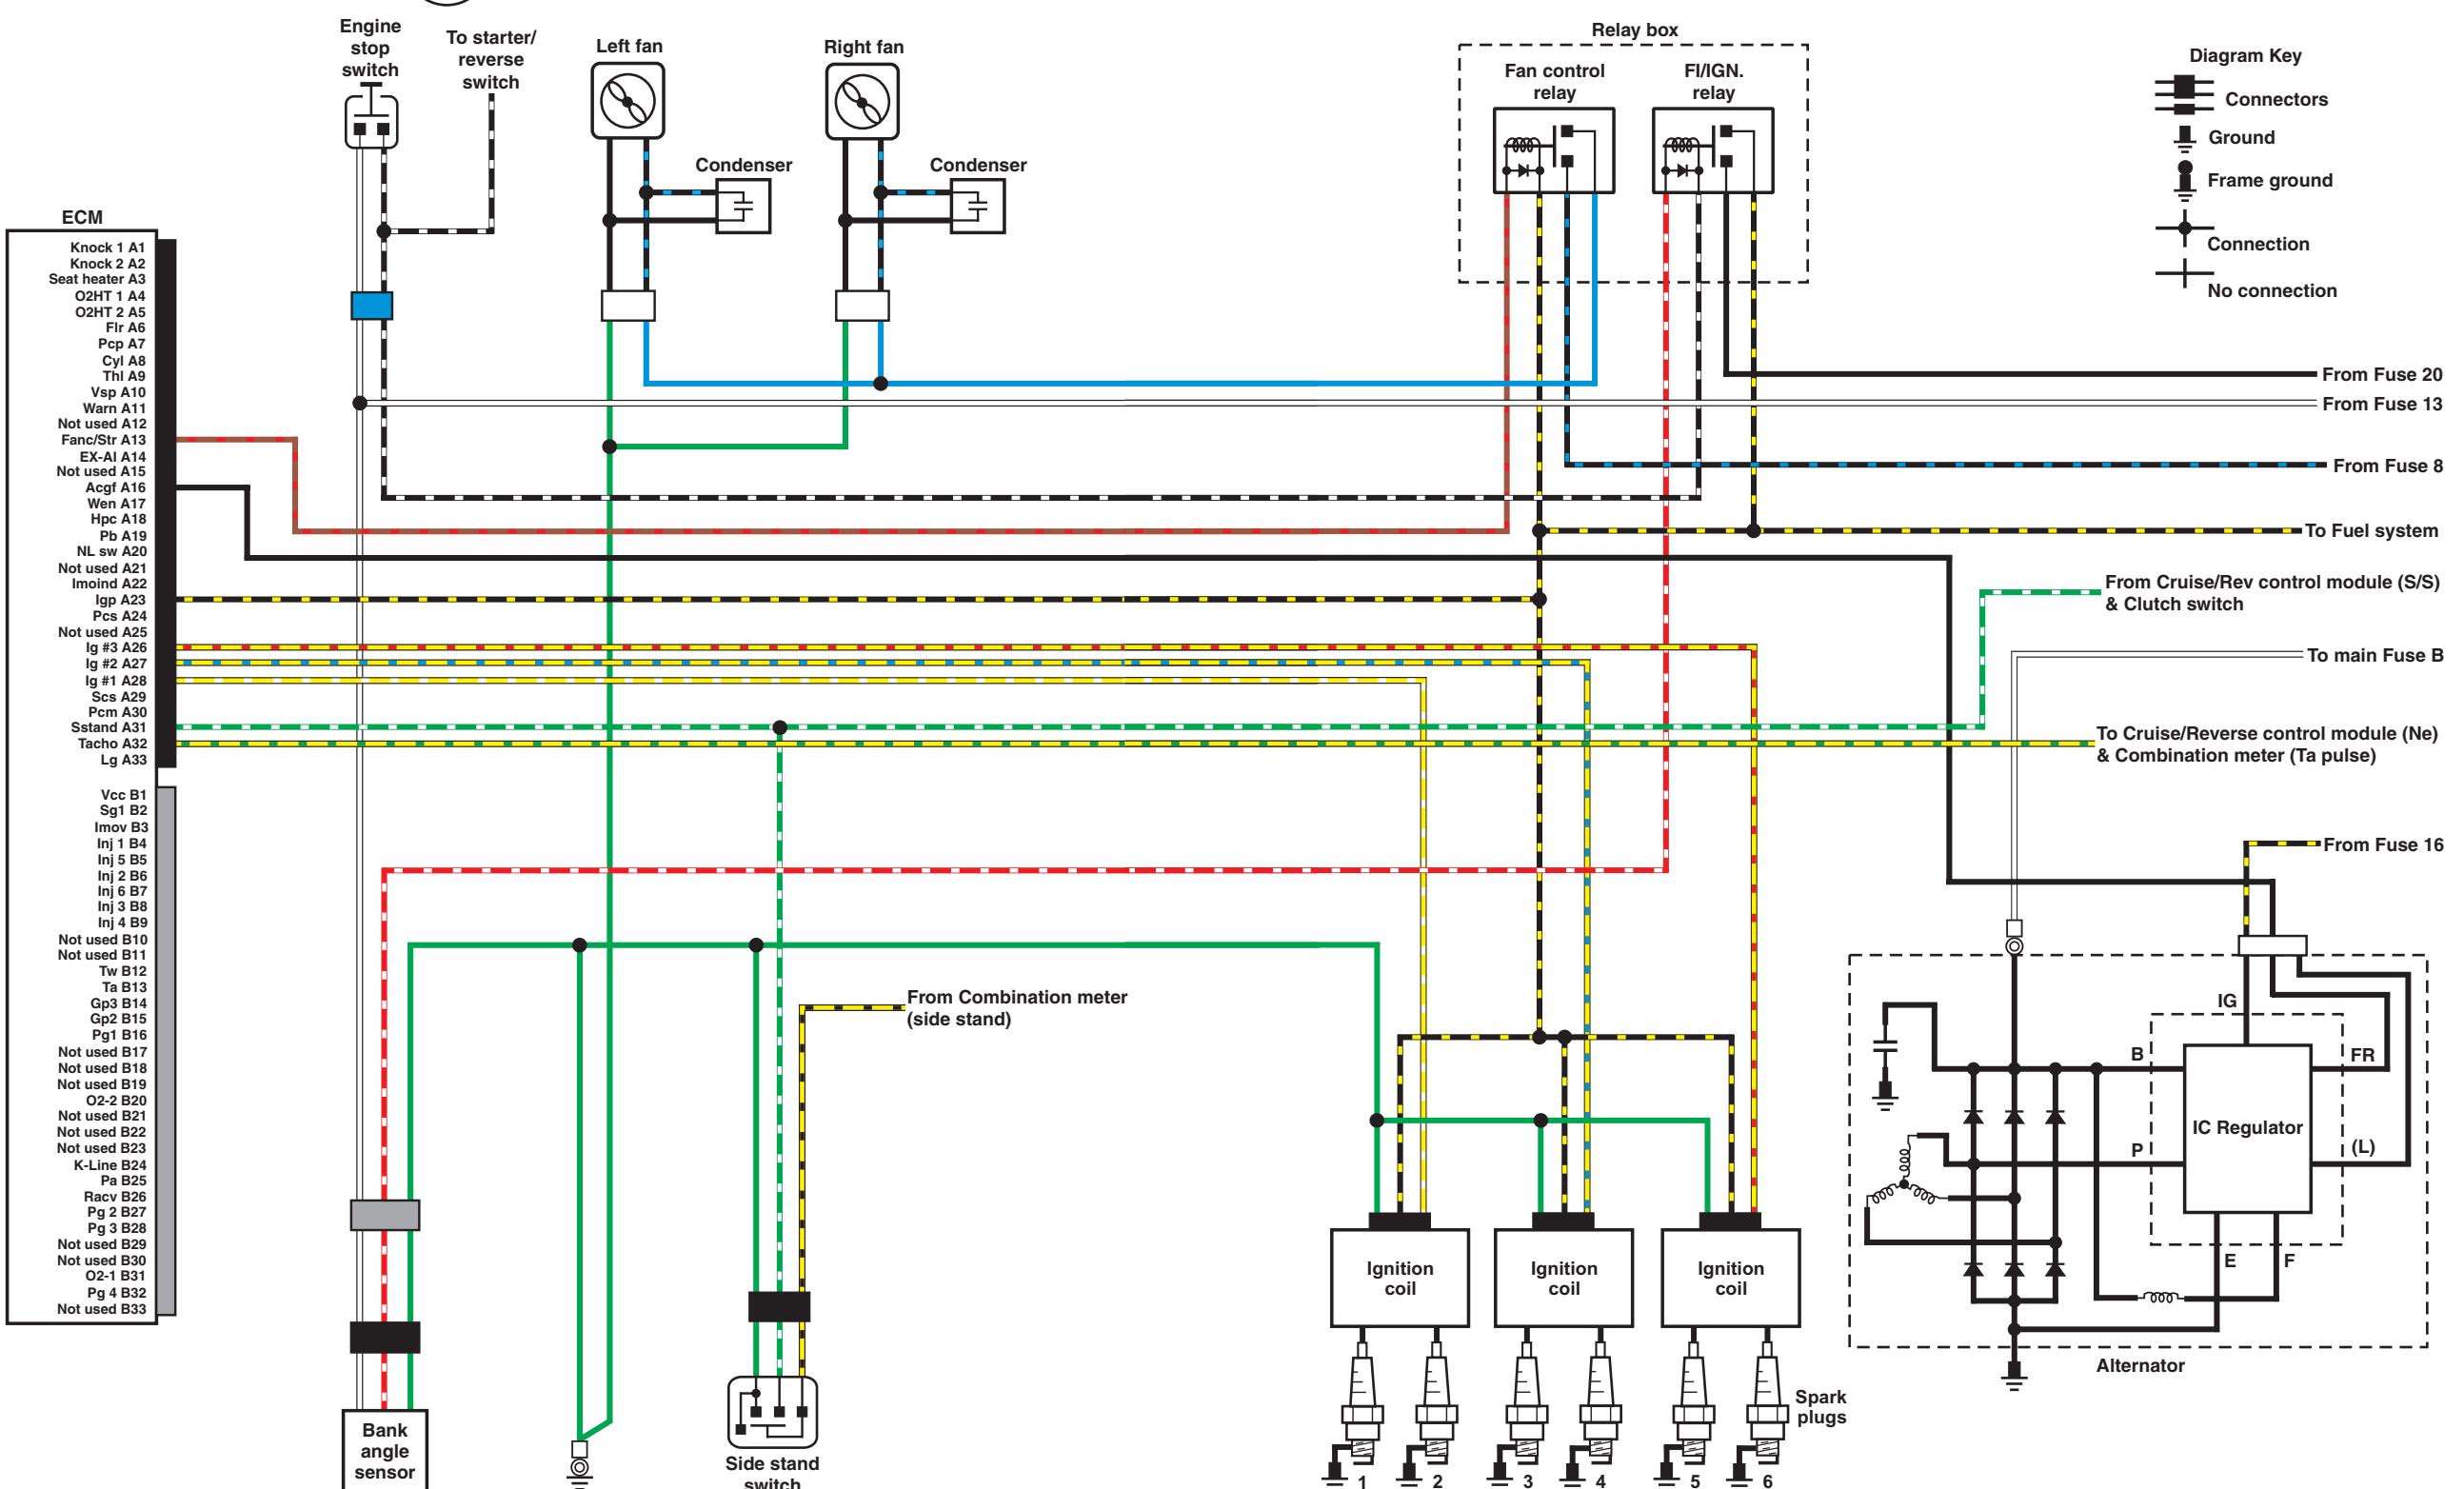


## FUEL INJECTION SYSTEM (2001-2003 MODELS)

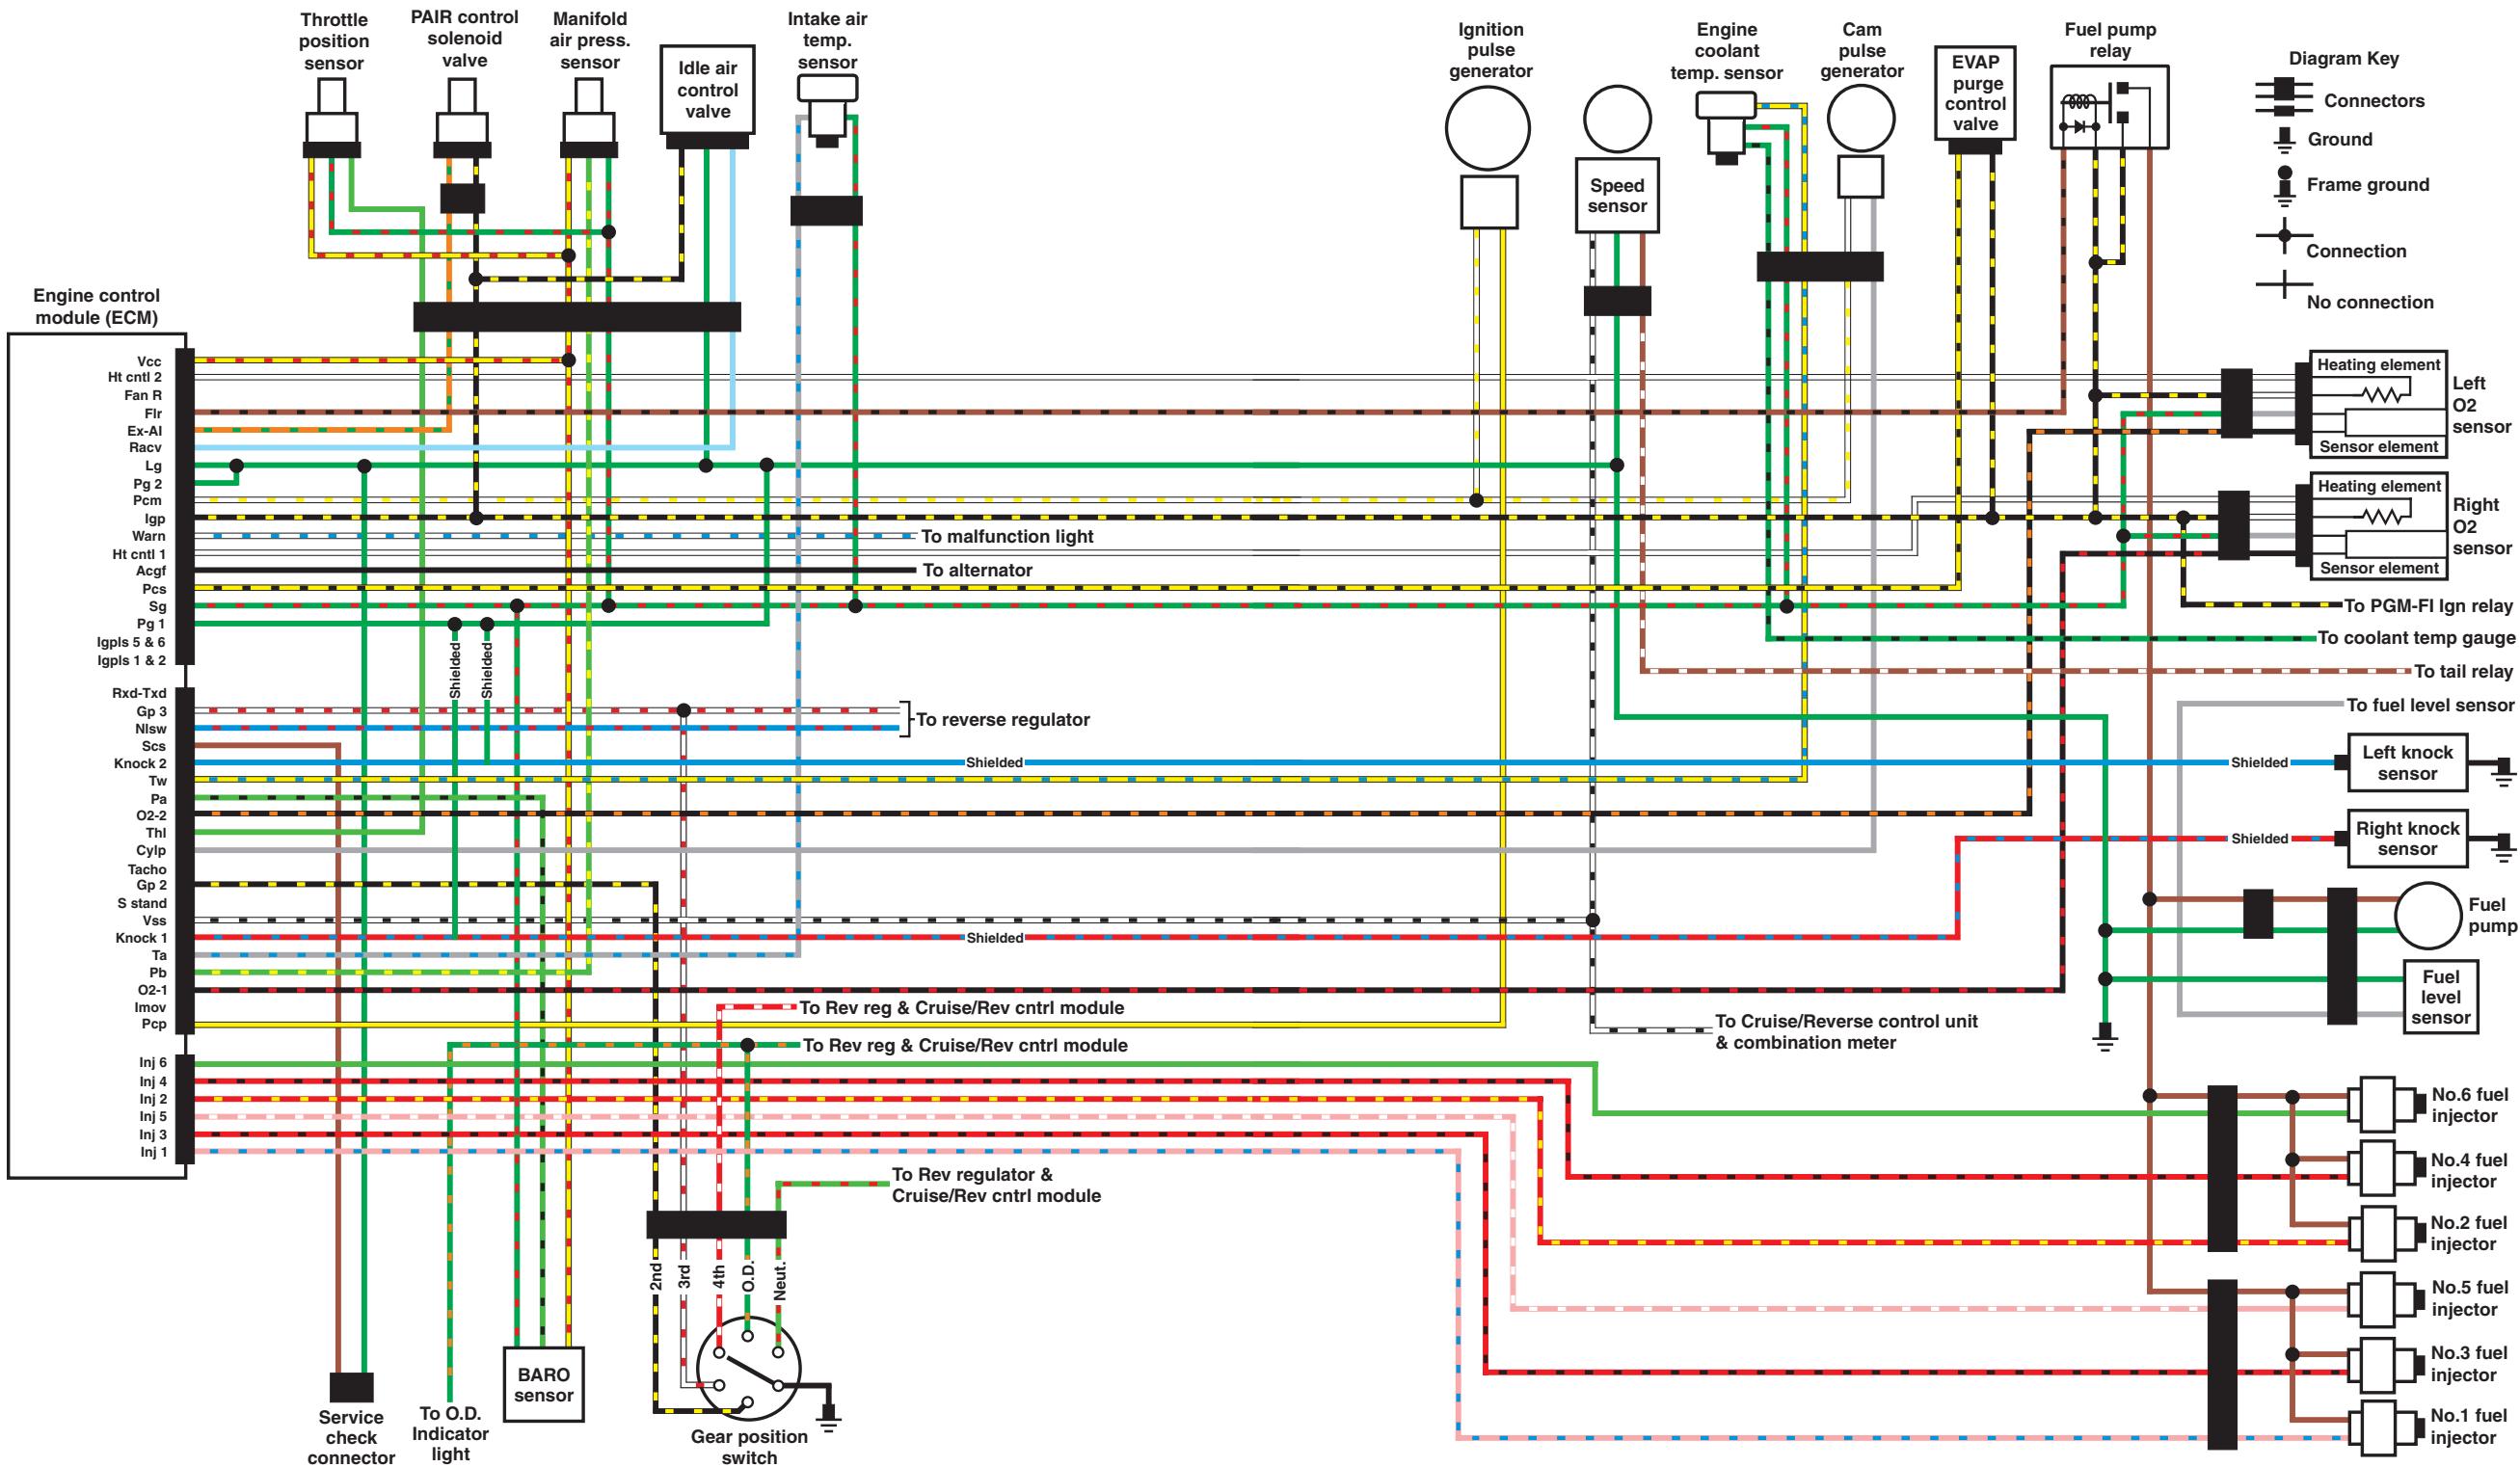


W-10

## FUEL INJECTION SYSTEM (2004-2005 MODELS)

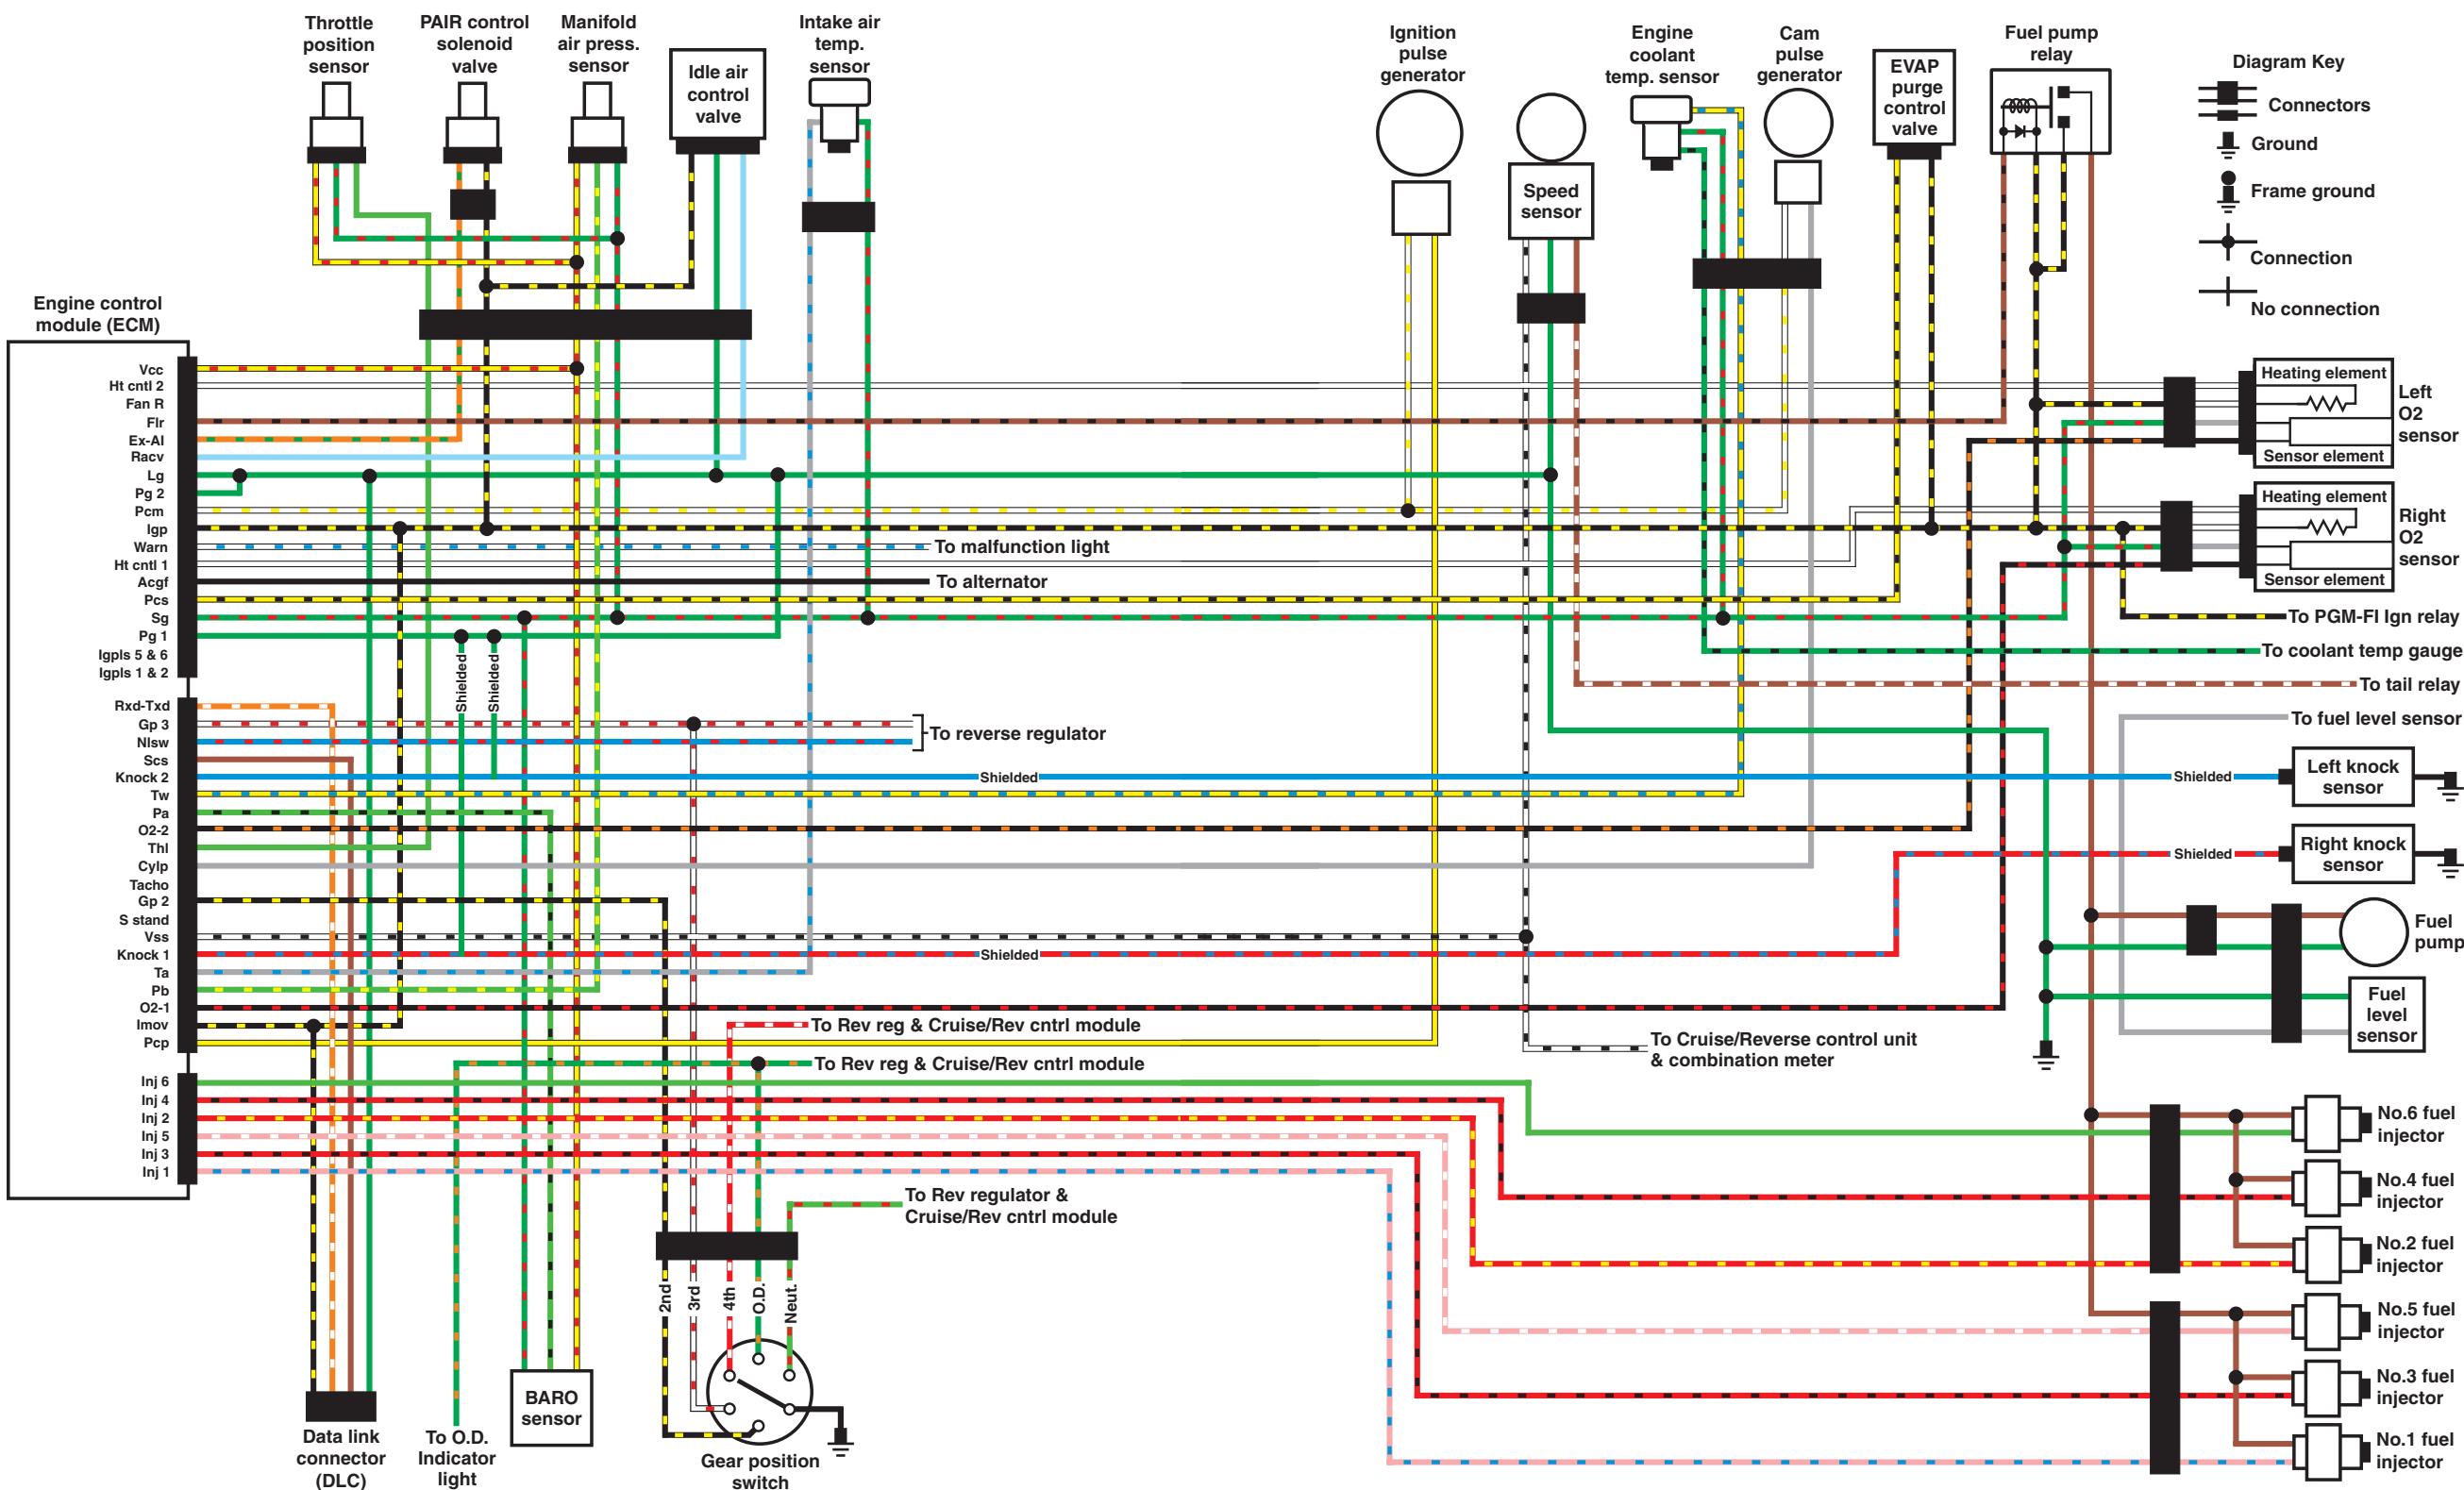


W-11

## FUEL INJECTION SYSTEM (2006-2008 1A, 1B, 1C, 1D AND 2009-2010 2A, 2B, 2C, 2E MODELS)

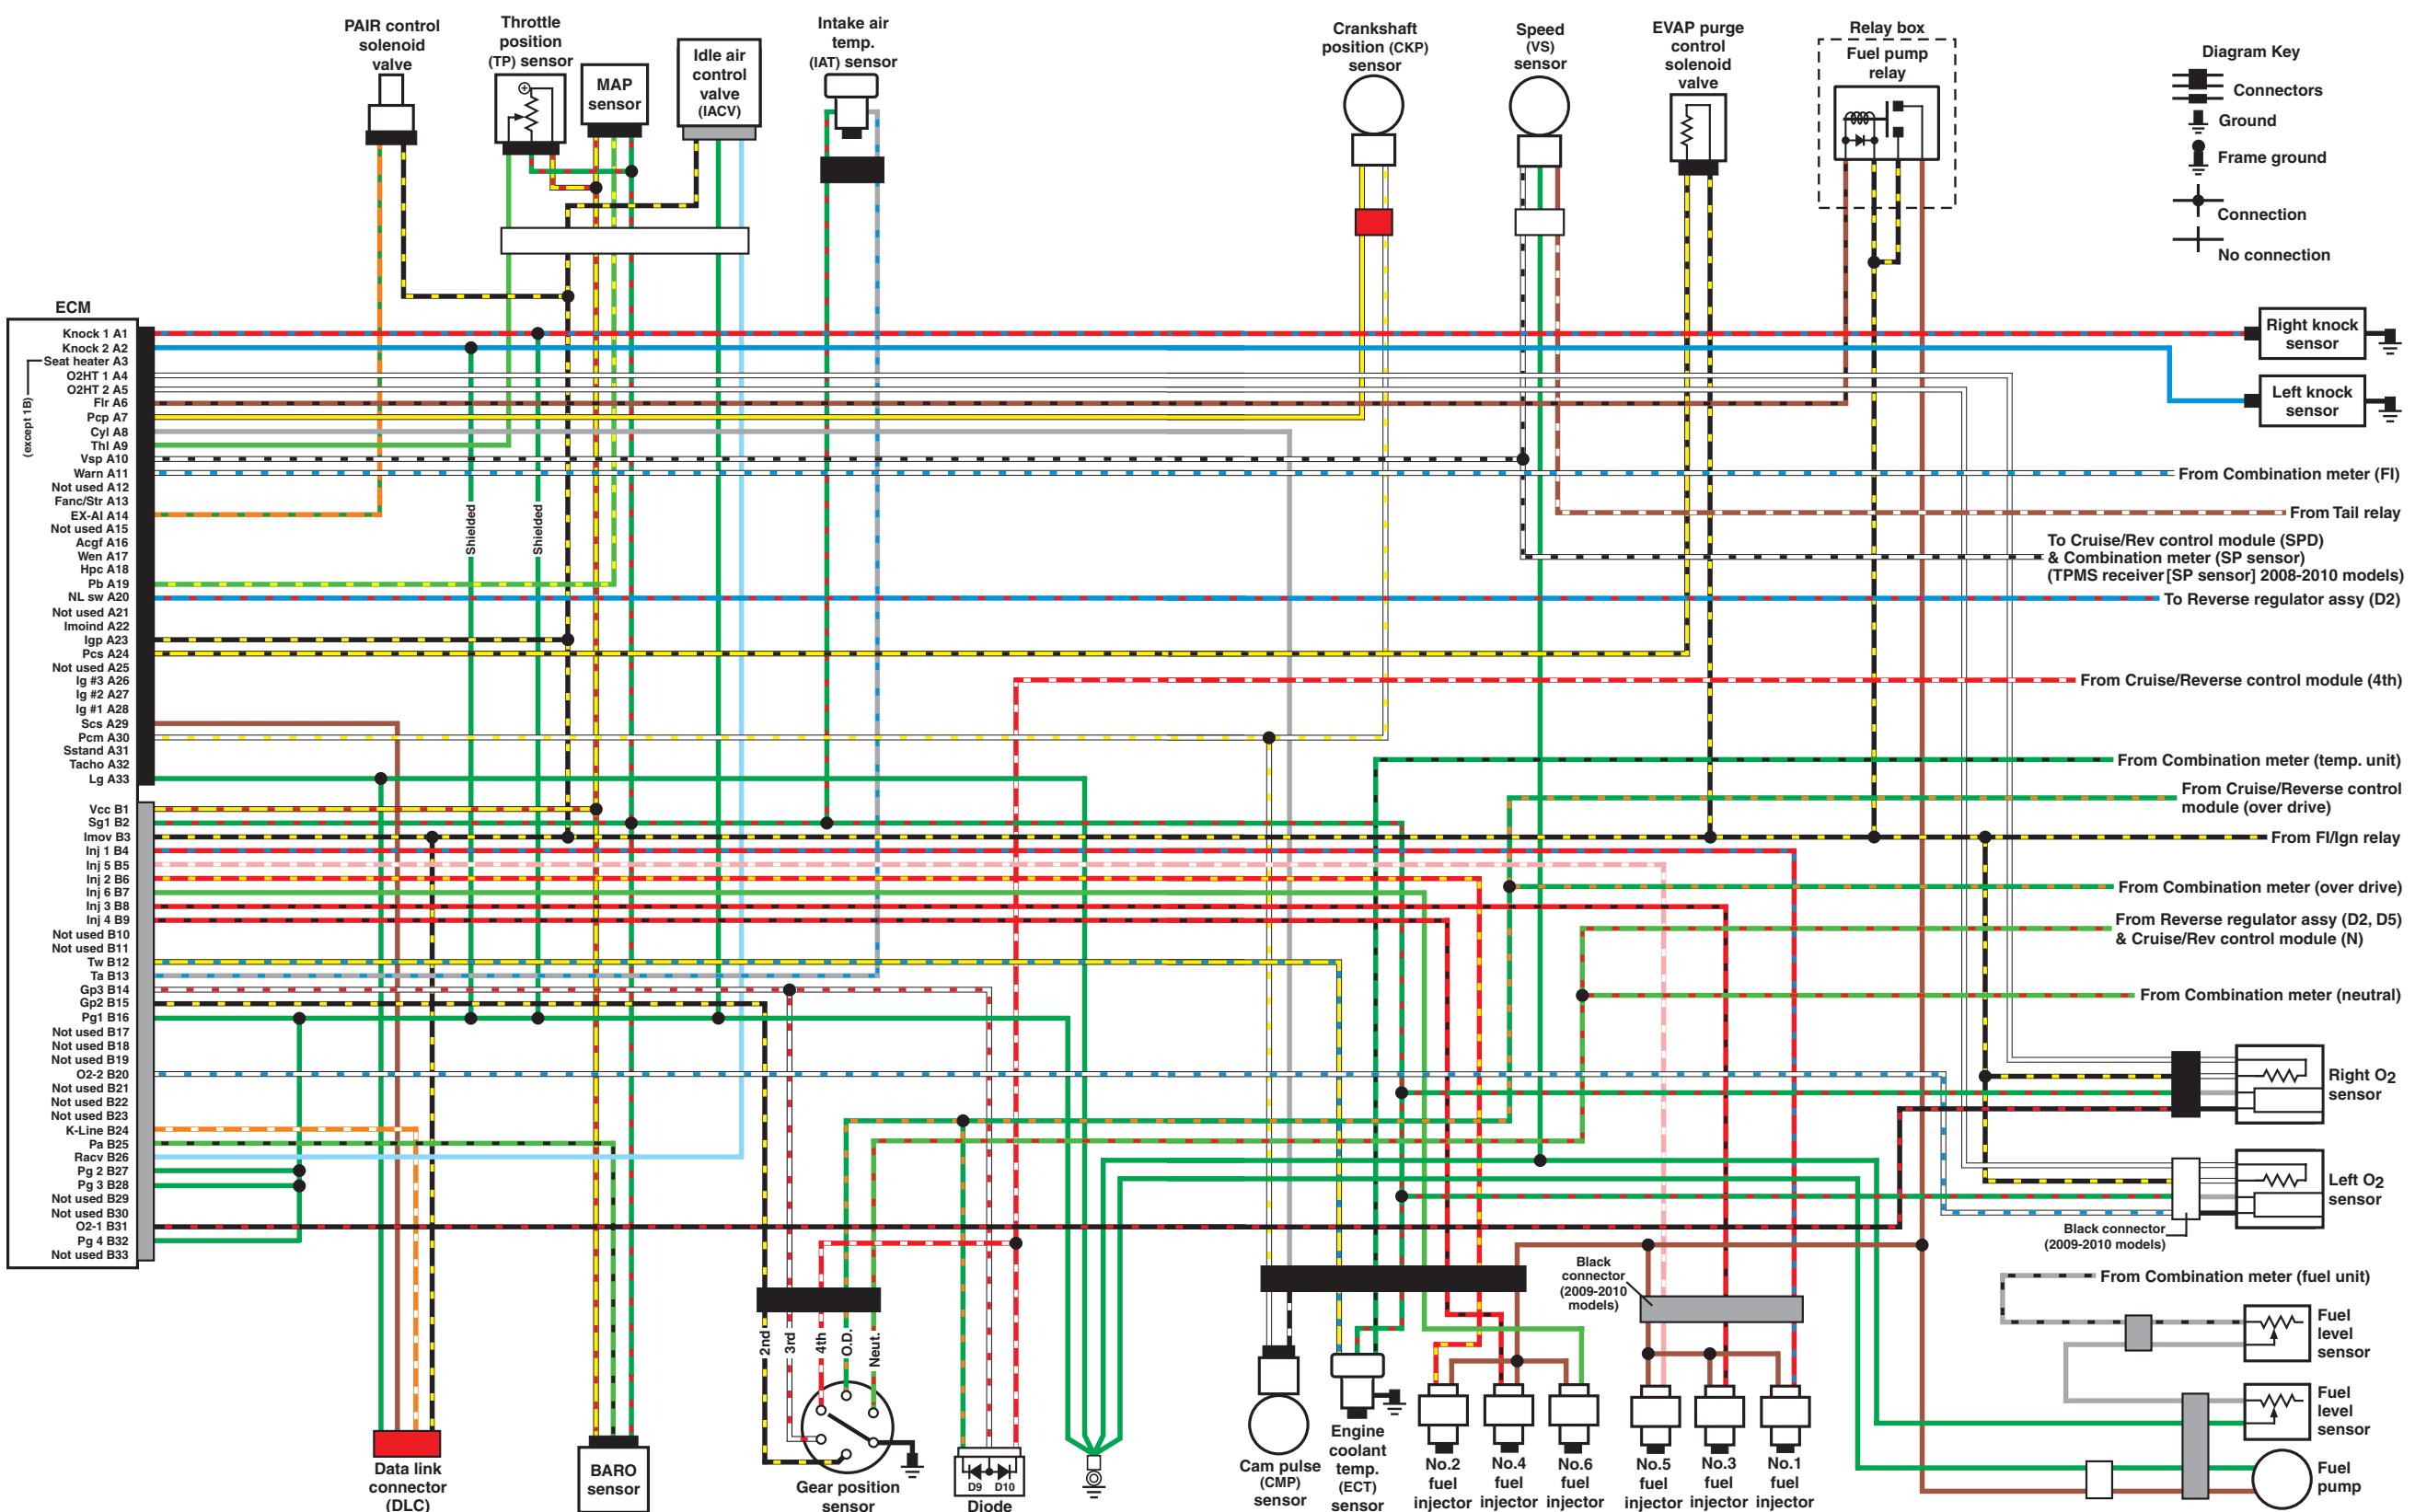


W-12

## FUEL INJECTION SYSTEM (2006-2008 1E AND 1F MODELS)

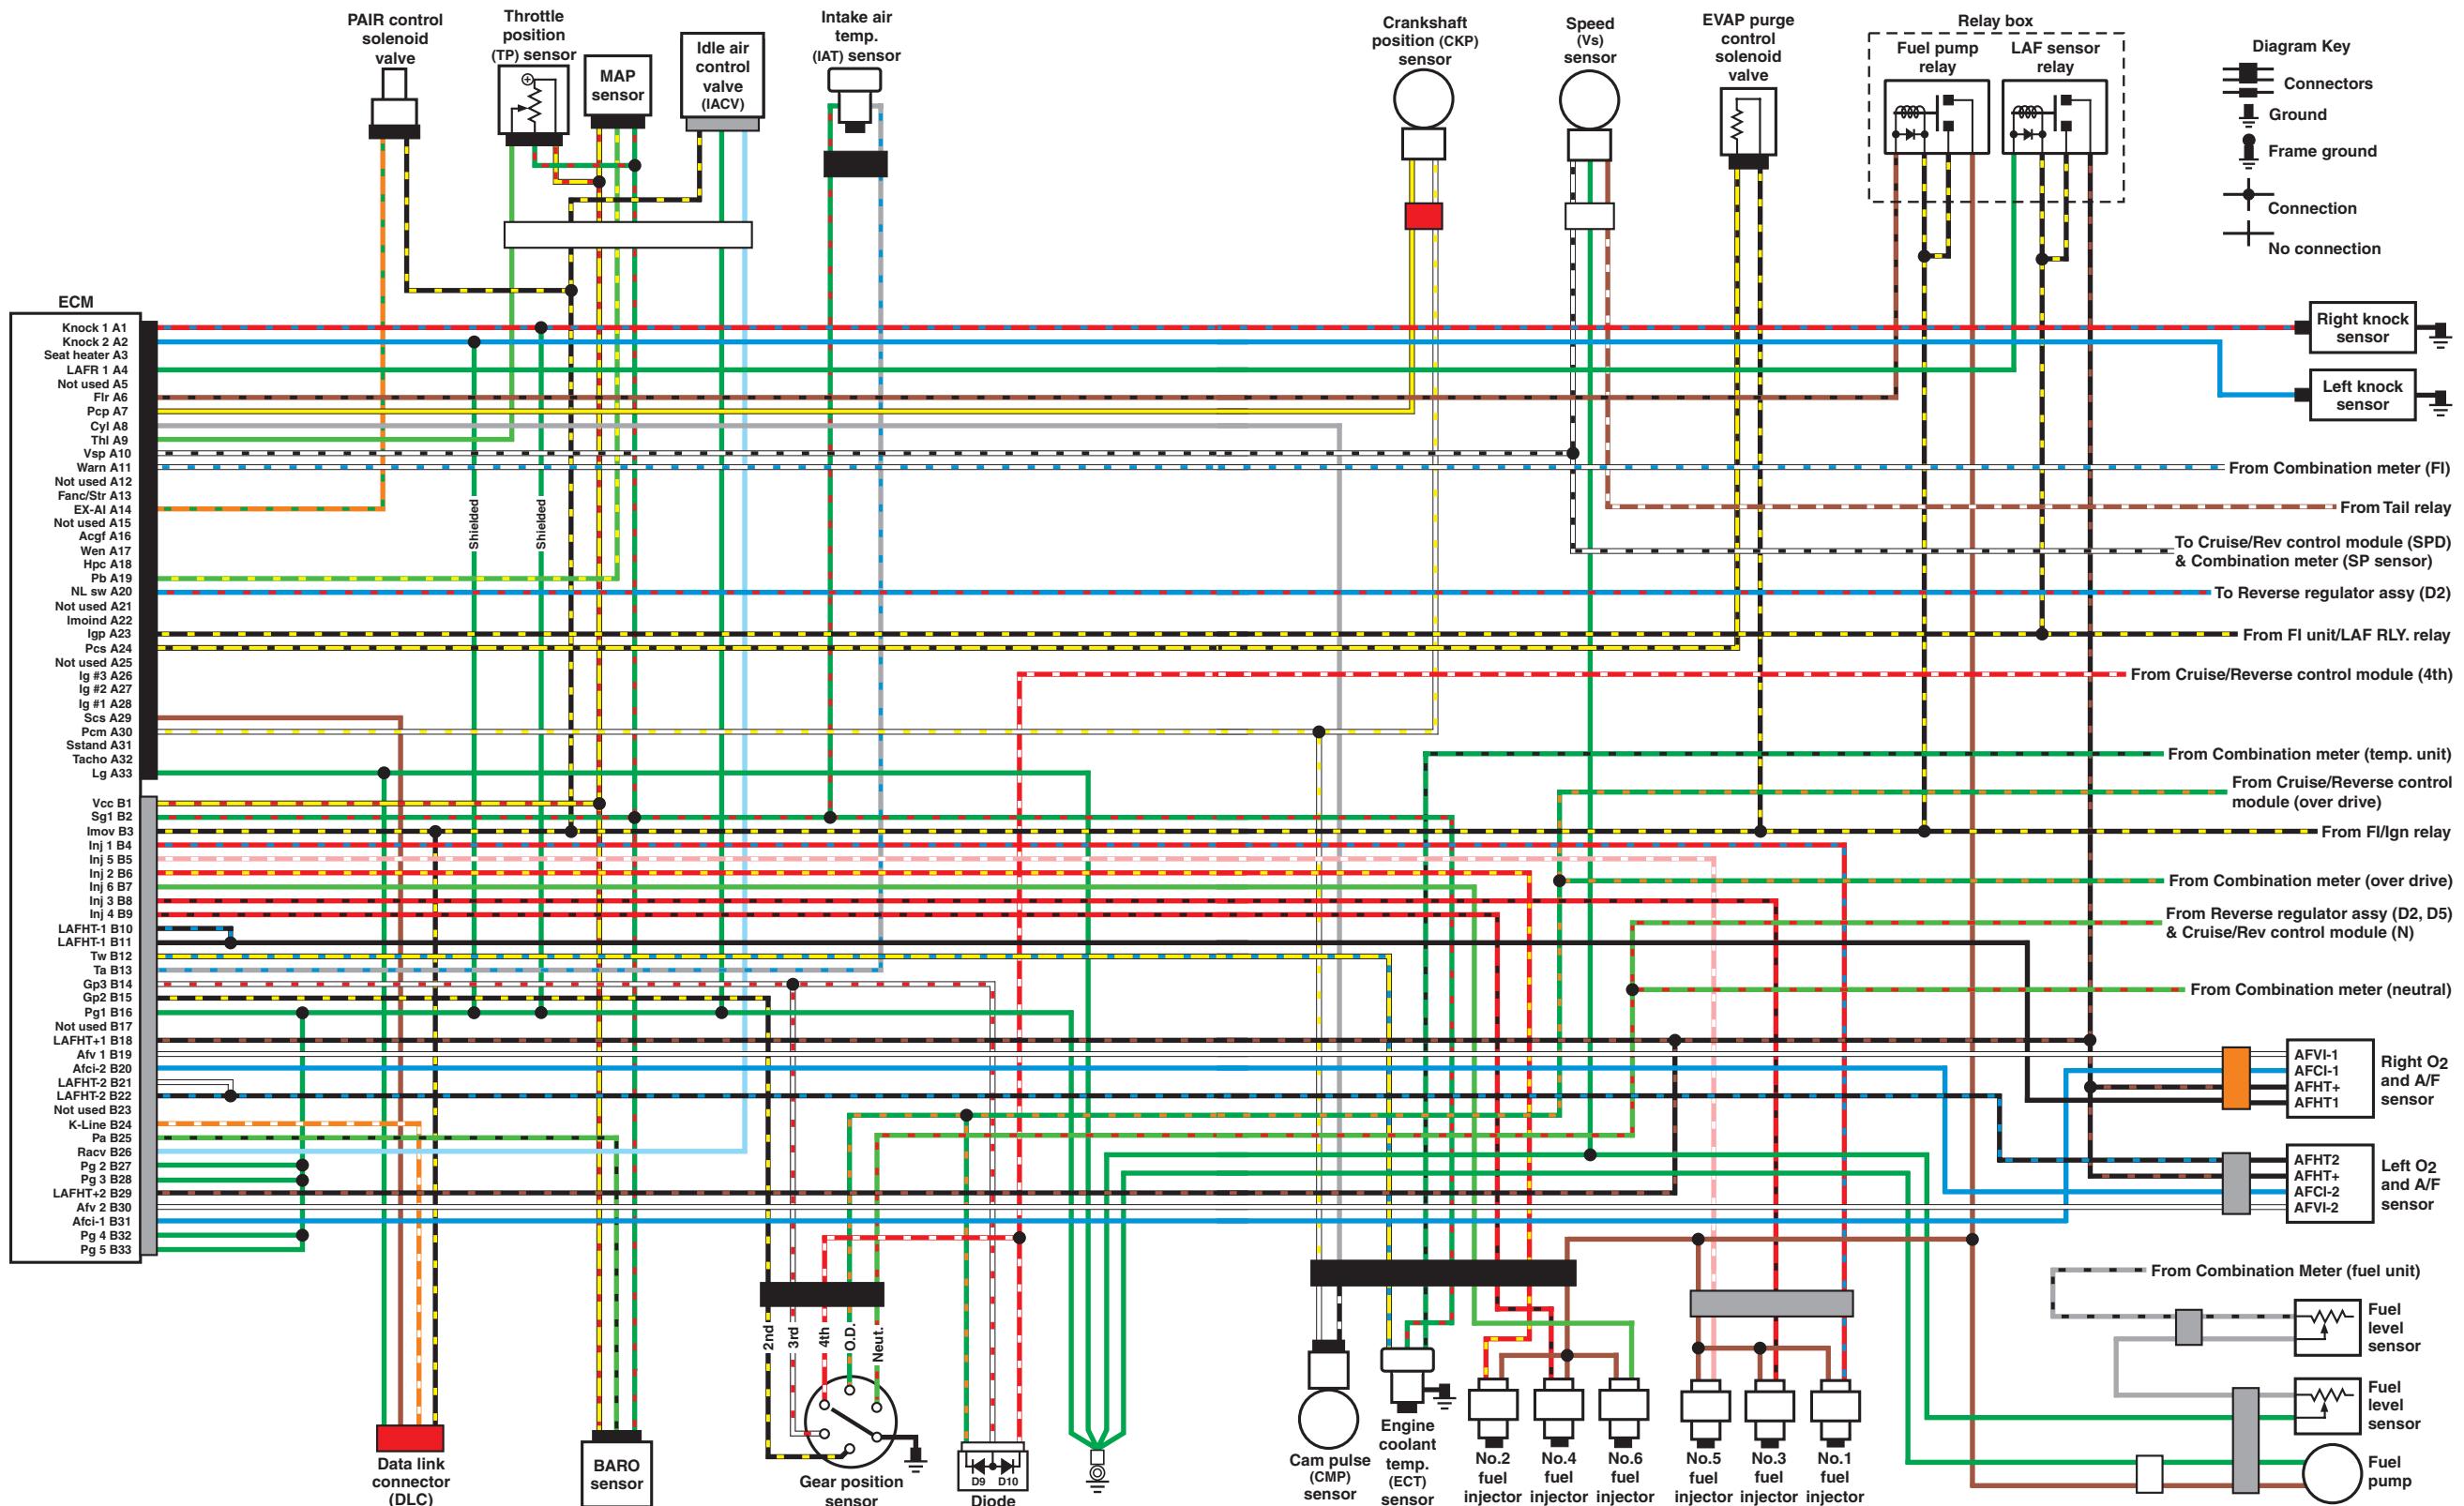


W-13

## FUEL INJECTION SYSTEM (2006-2008 1G MODELS)

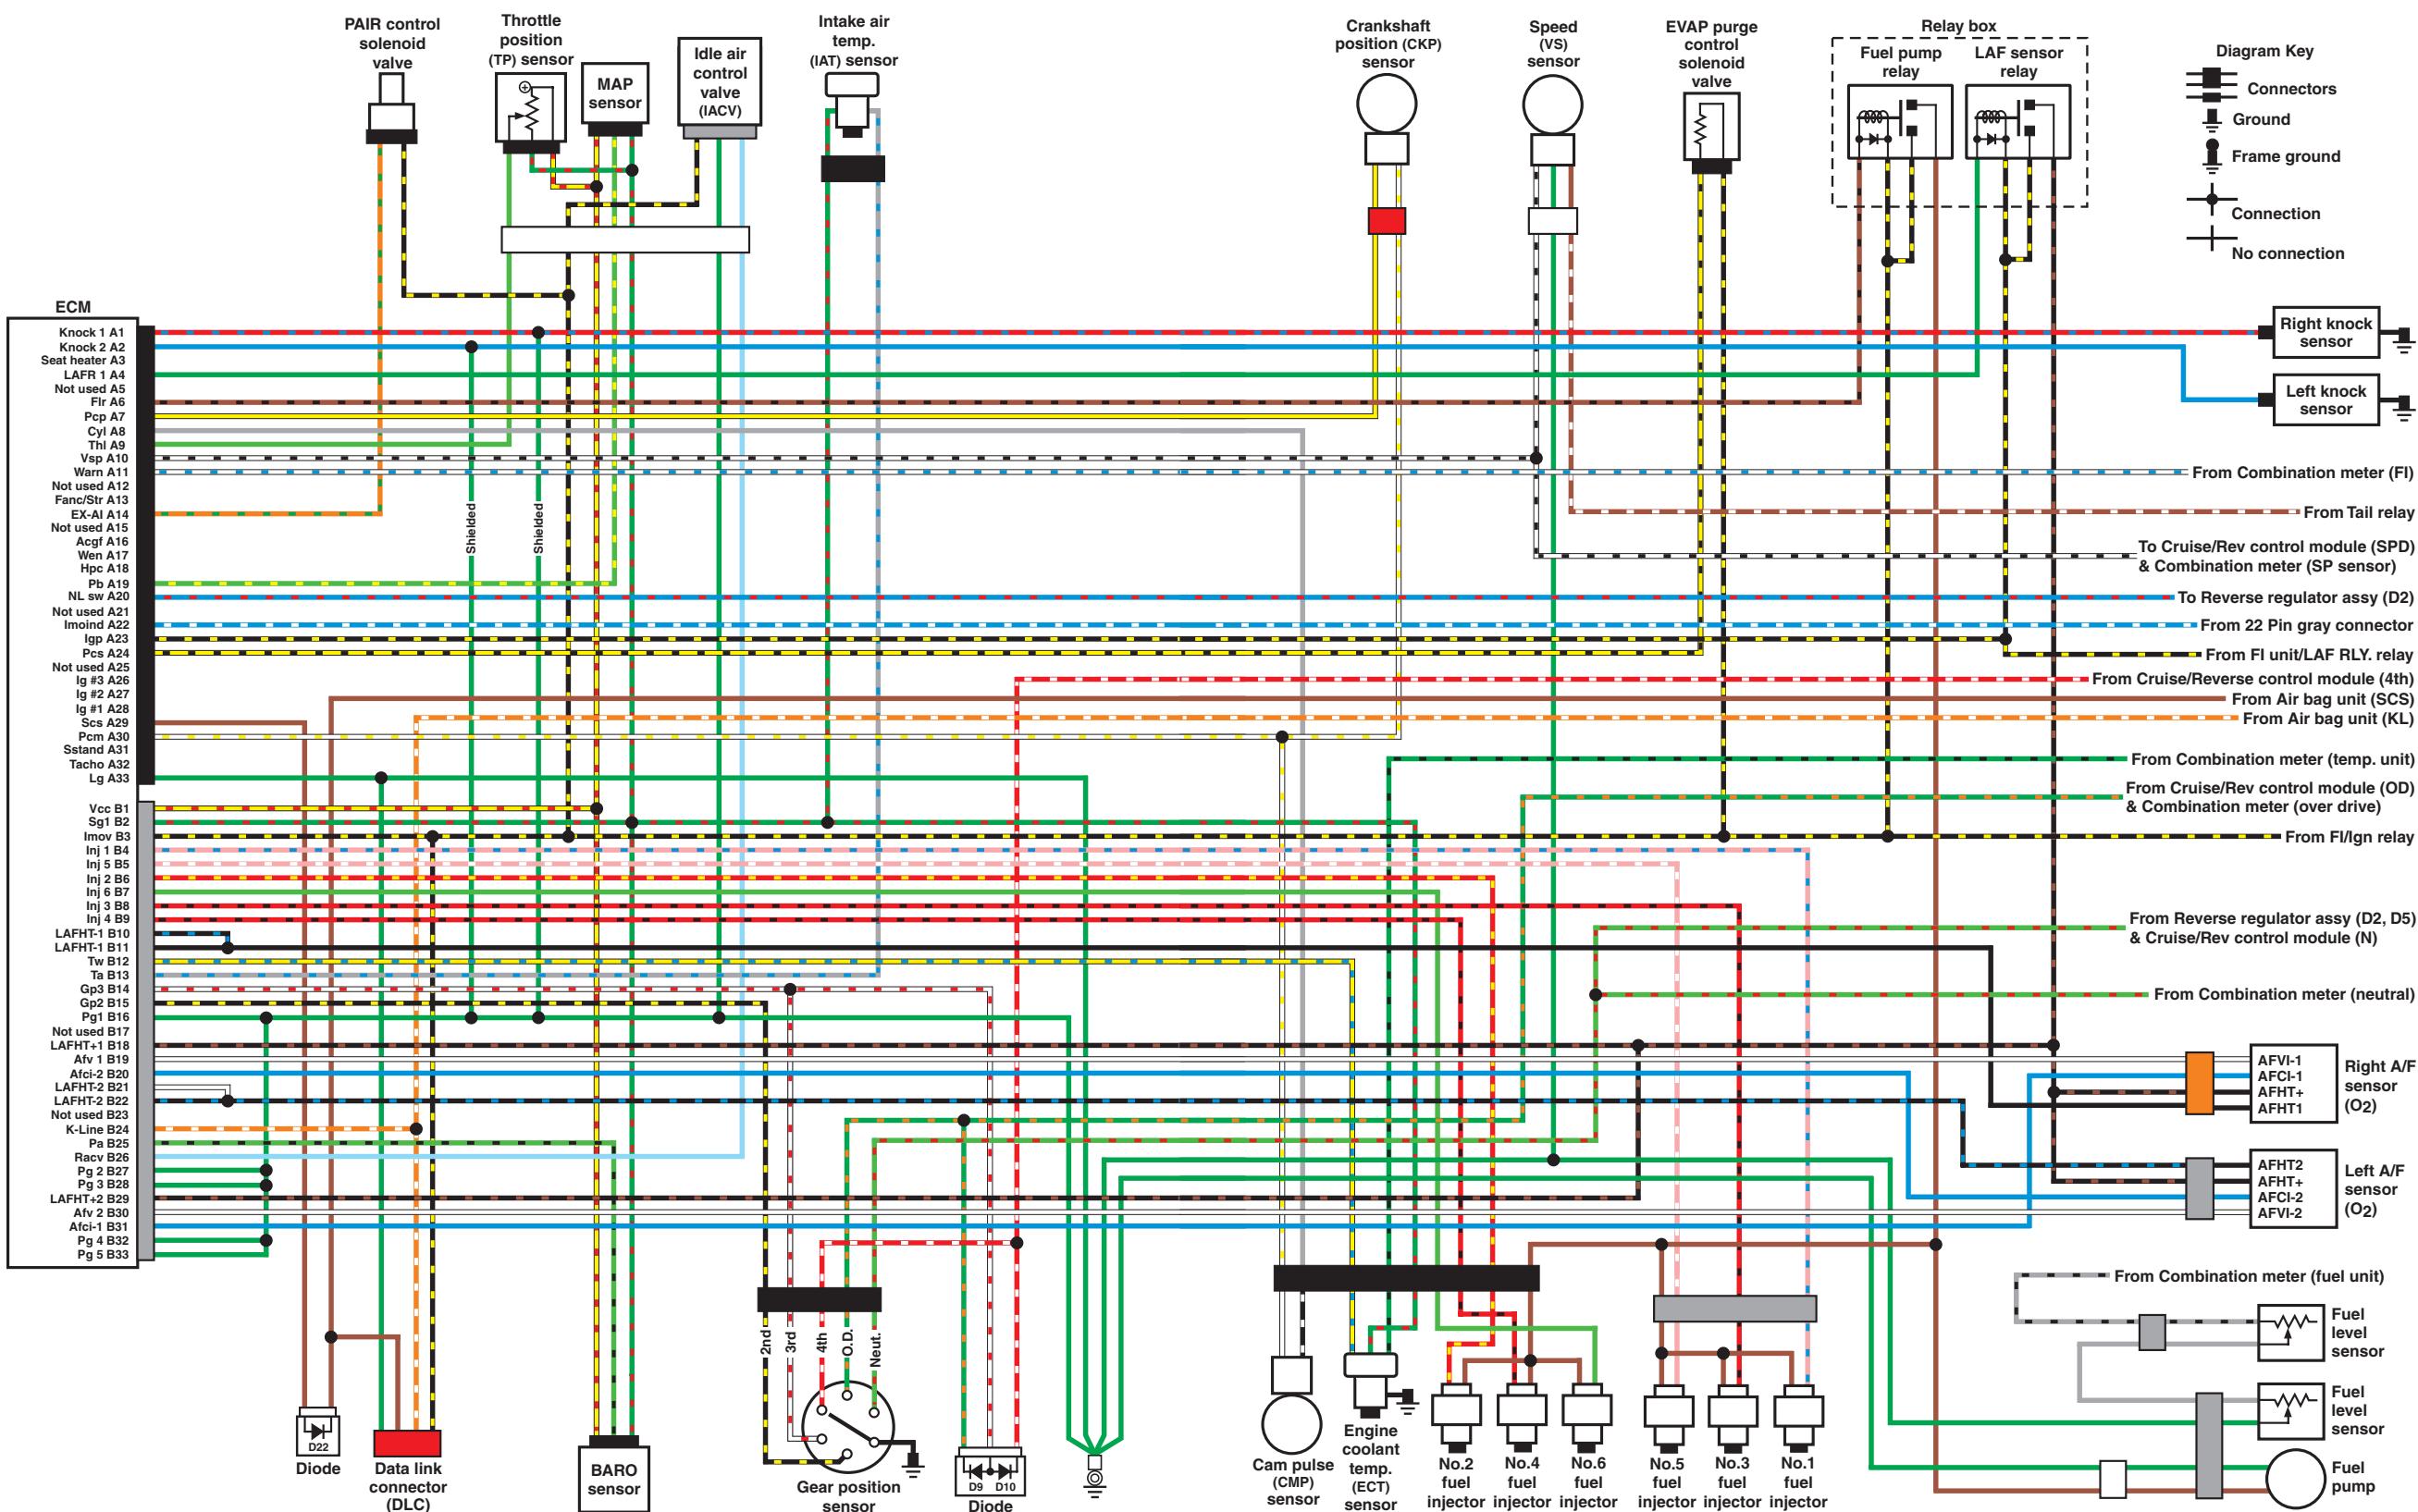



W-14



## FUEL INJECTION SYSTEM (2009-2010 2D AND 2F MODELS)

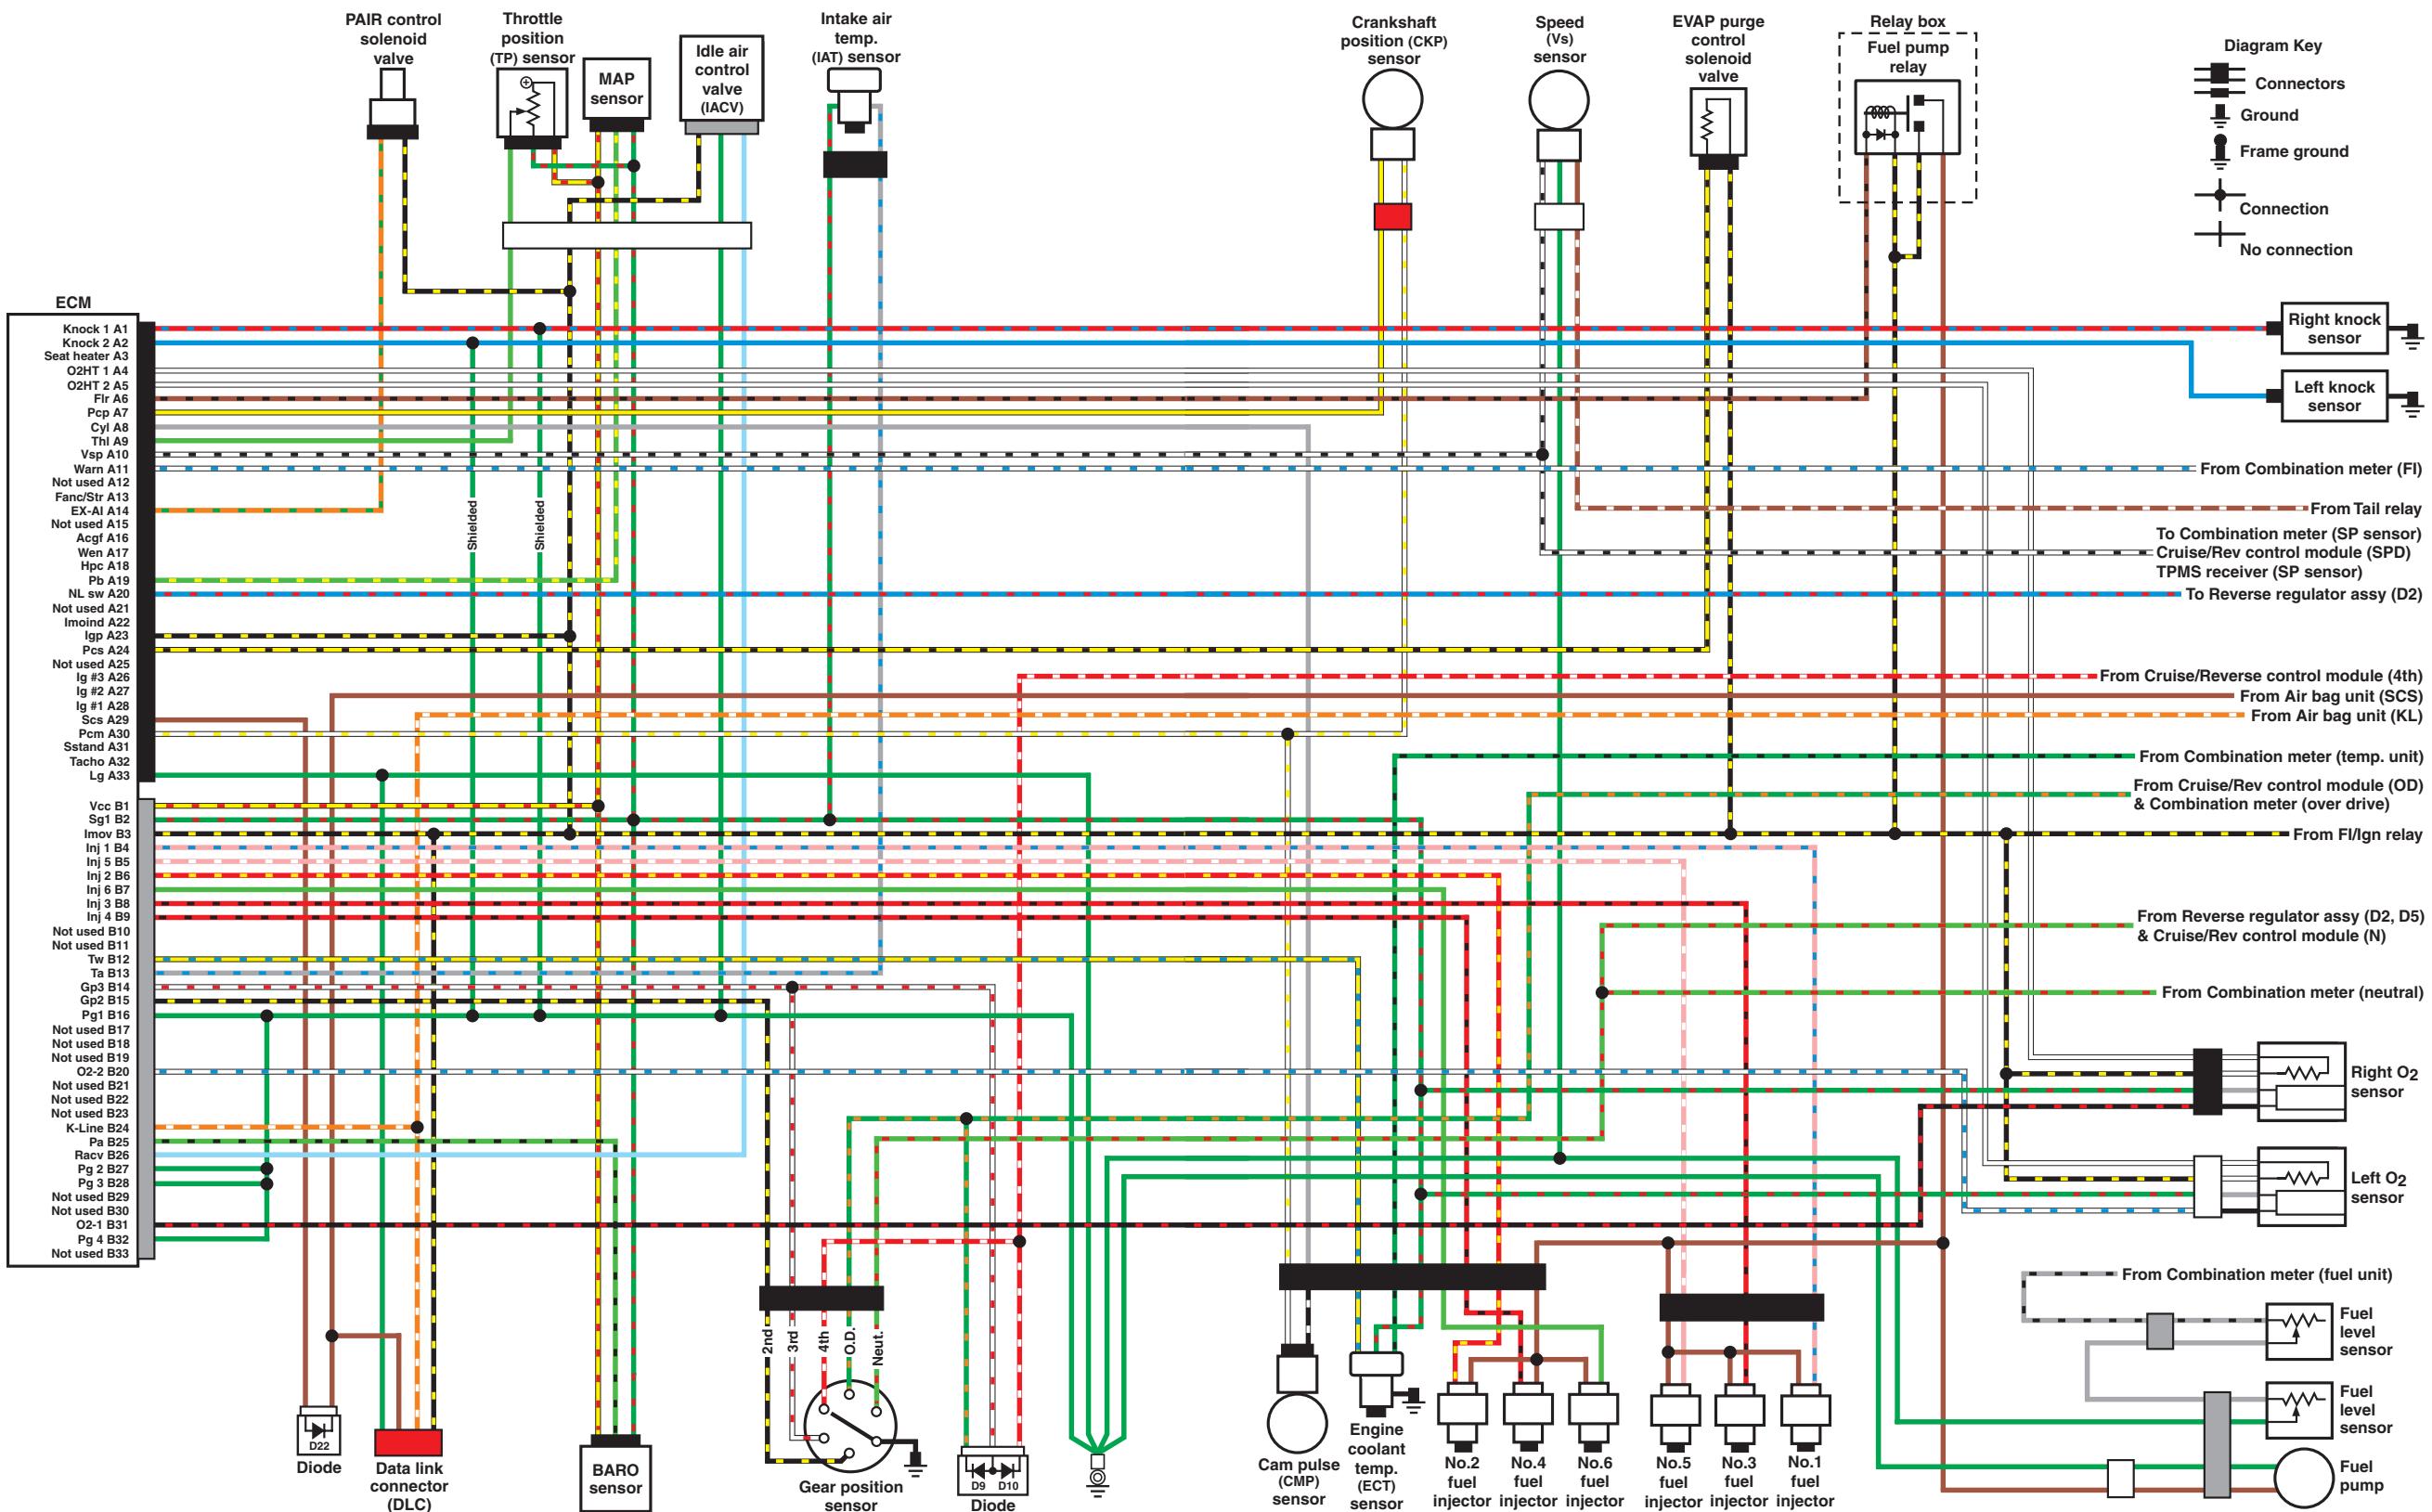

## ABS SYSTEM (2001 MODELS)

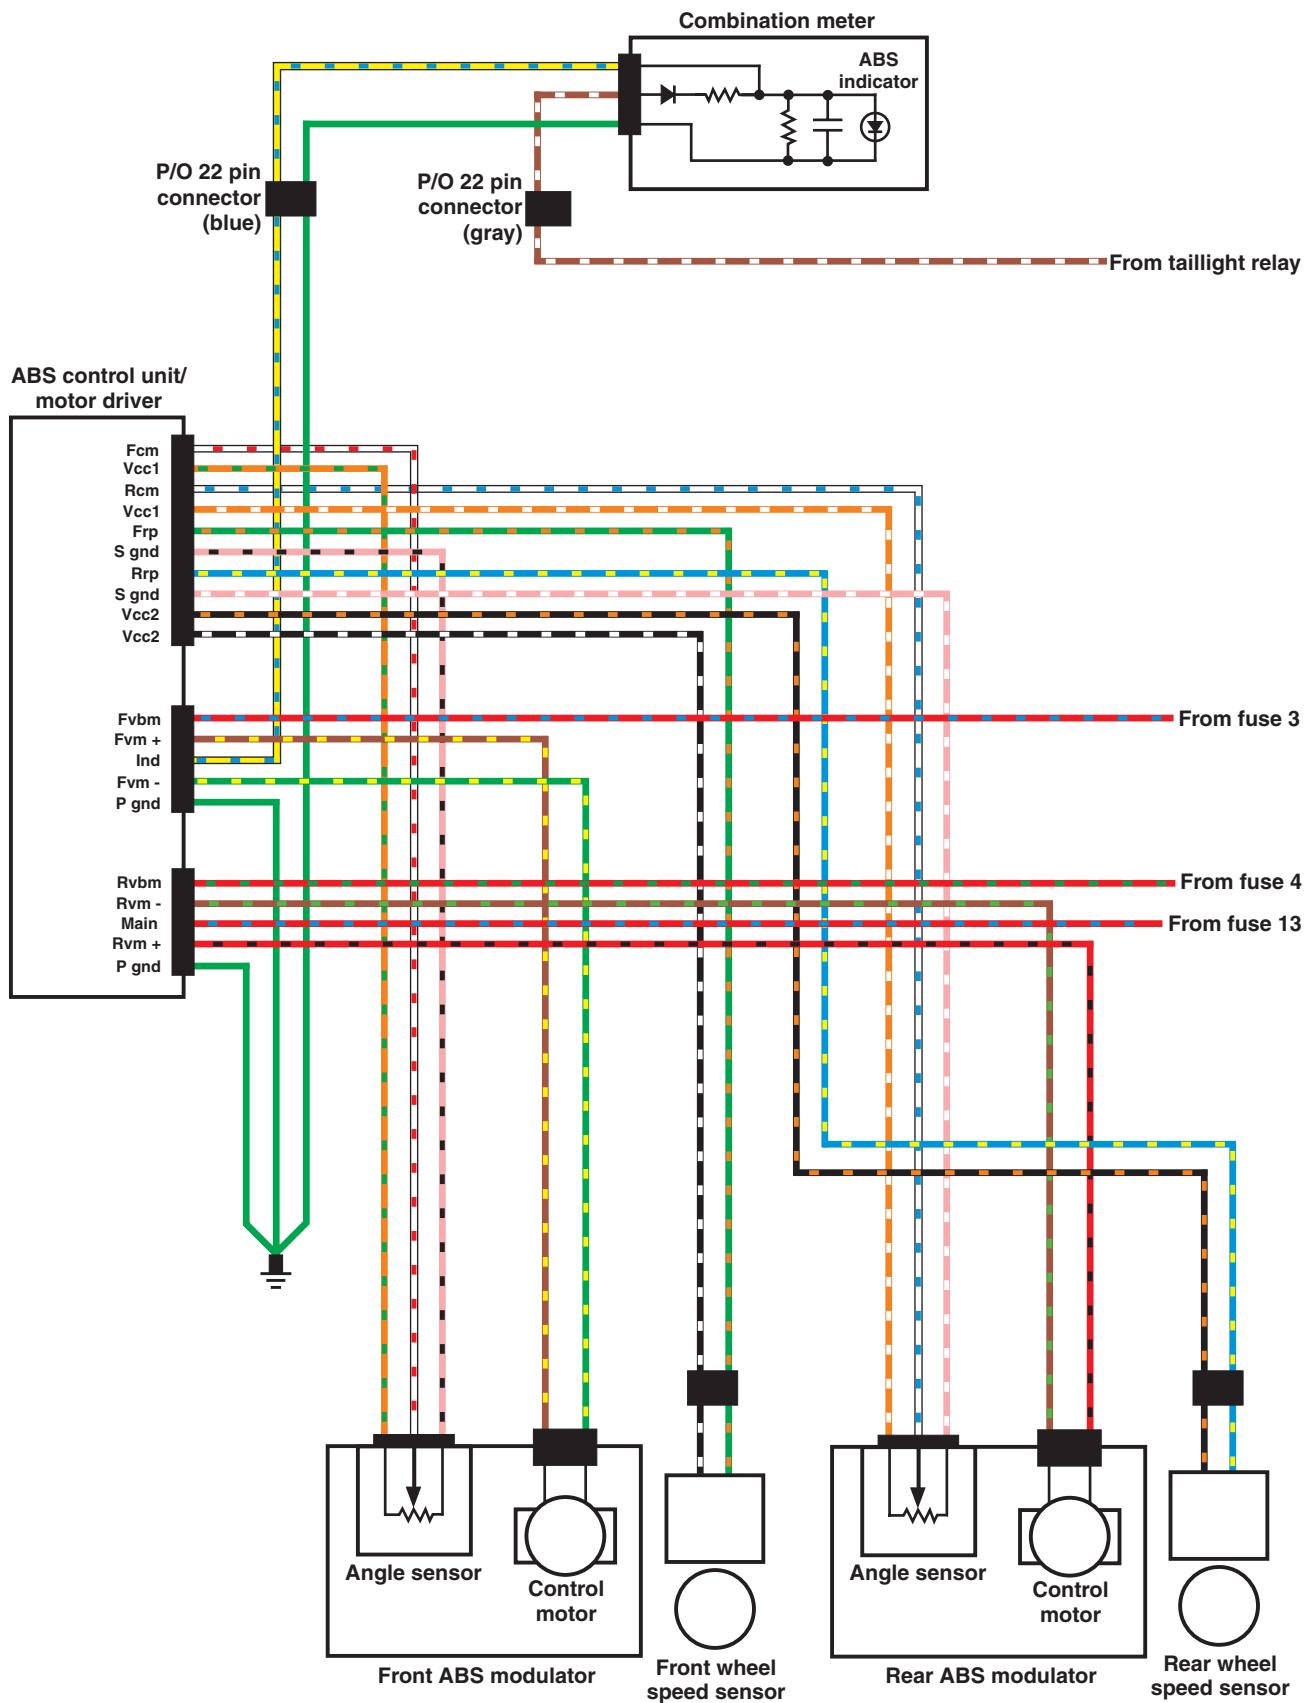


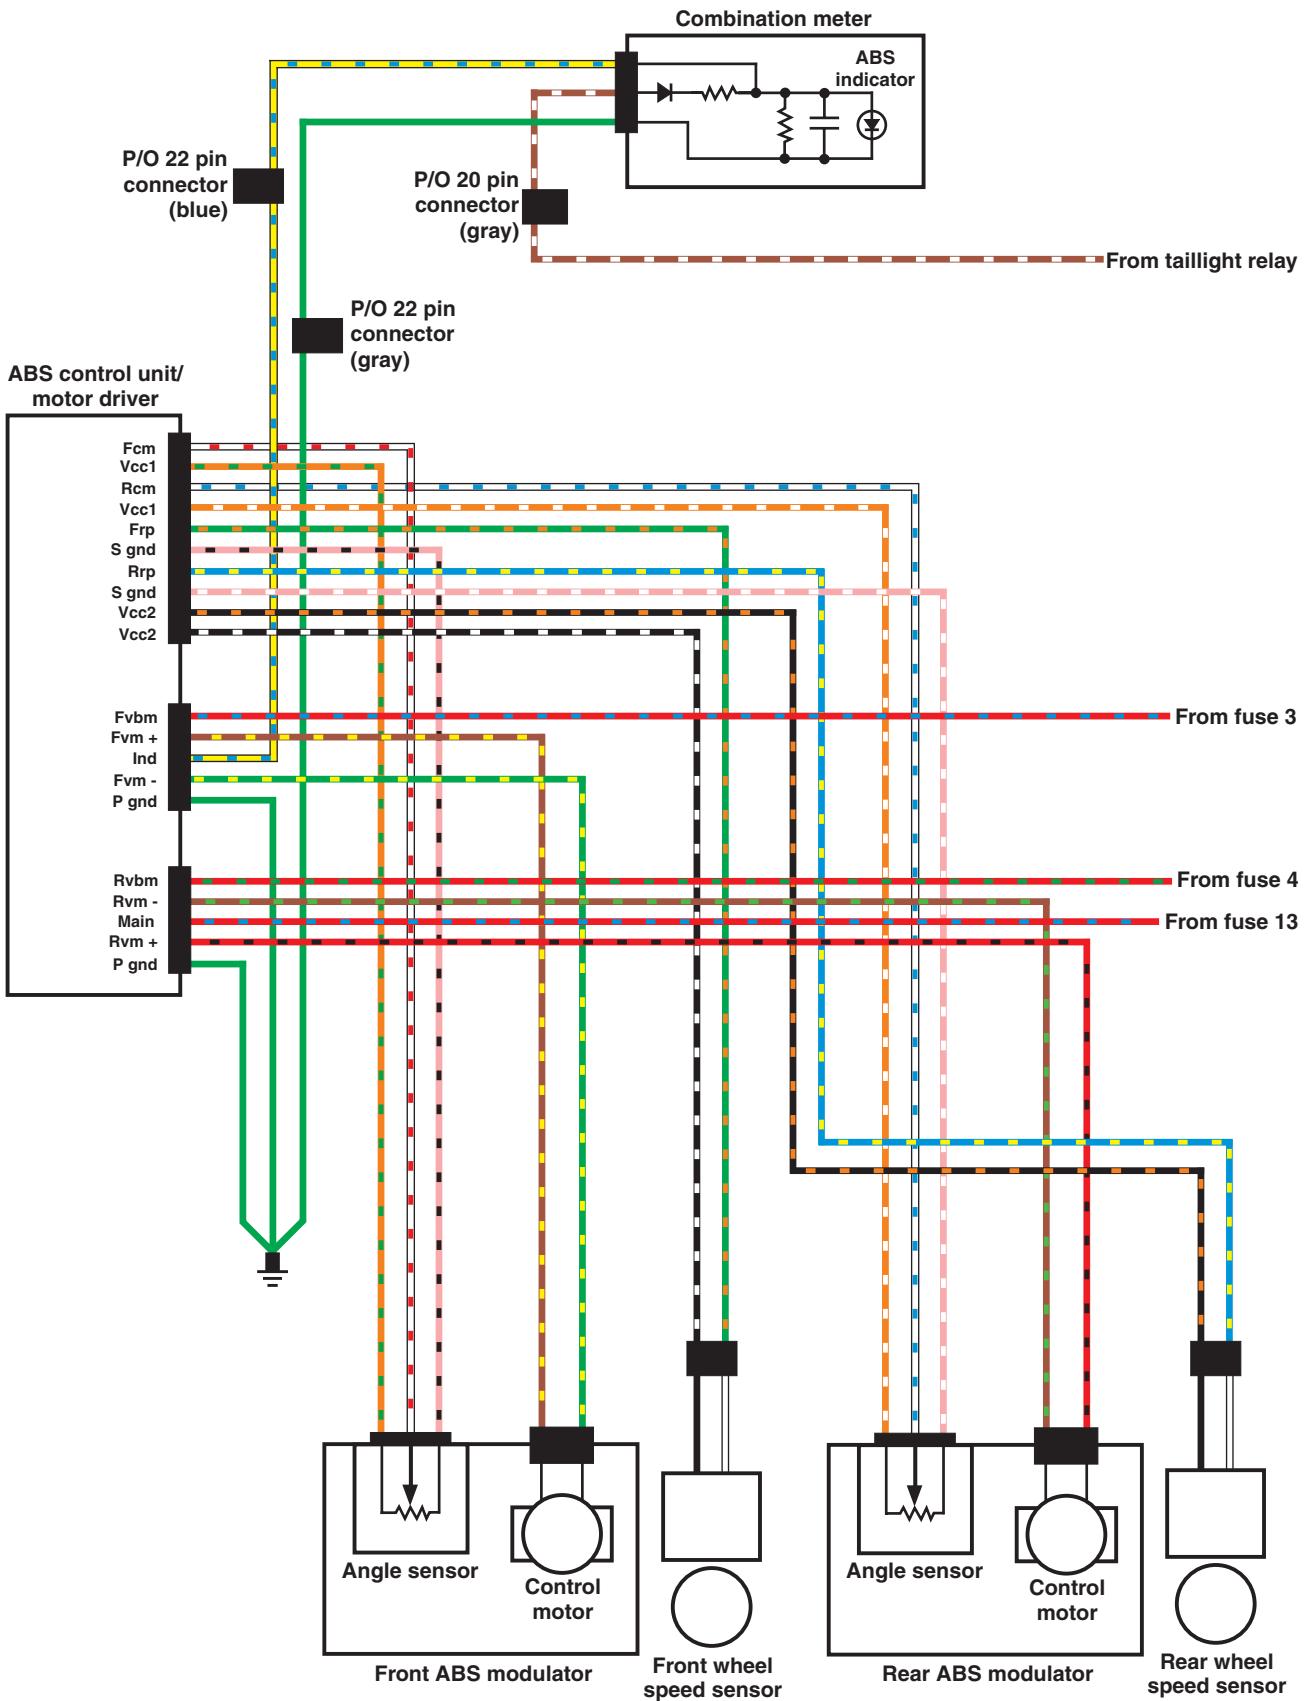**ABS SYSTEM (2002-2005 MODELS)**

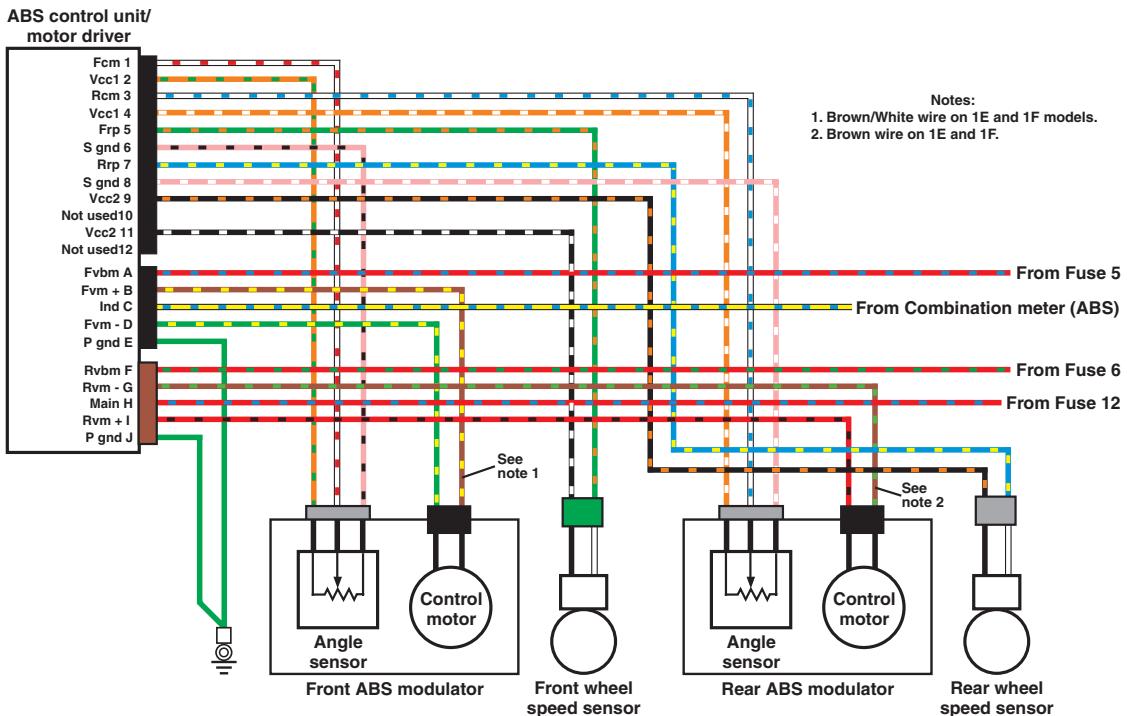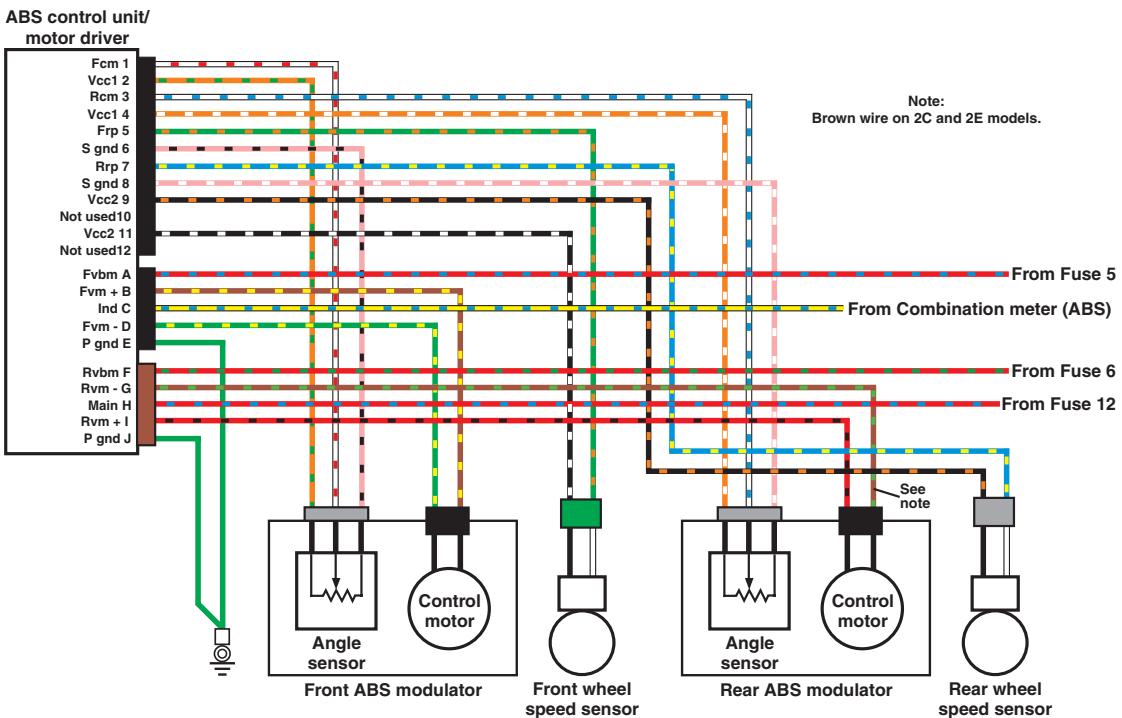**ABS SYSTEM (2006-2008 1E, 1F, 1G MODELS)****ABS SYSTEM (2009-2010 2C, 2D, 2E, 2F MODELS)**


W-18

## LIGHTING SYSTEM (2001-2005 MODELS)

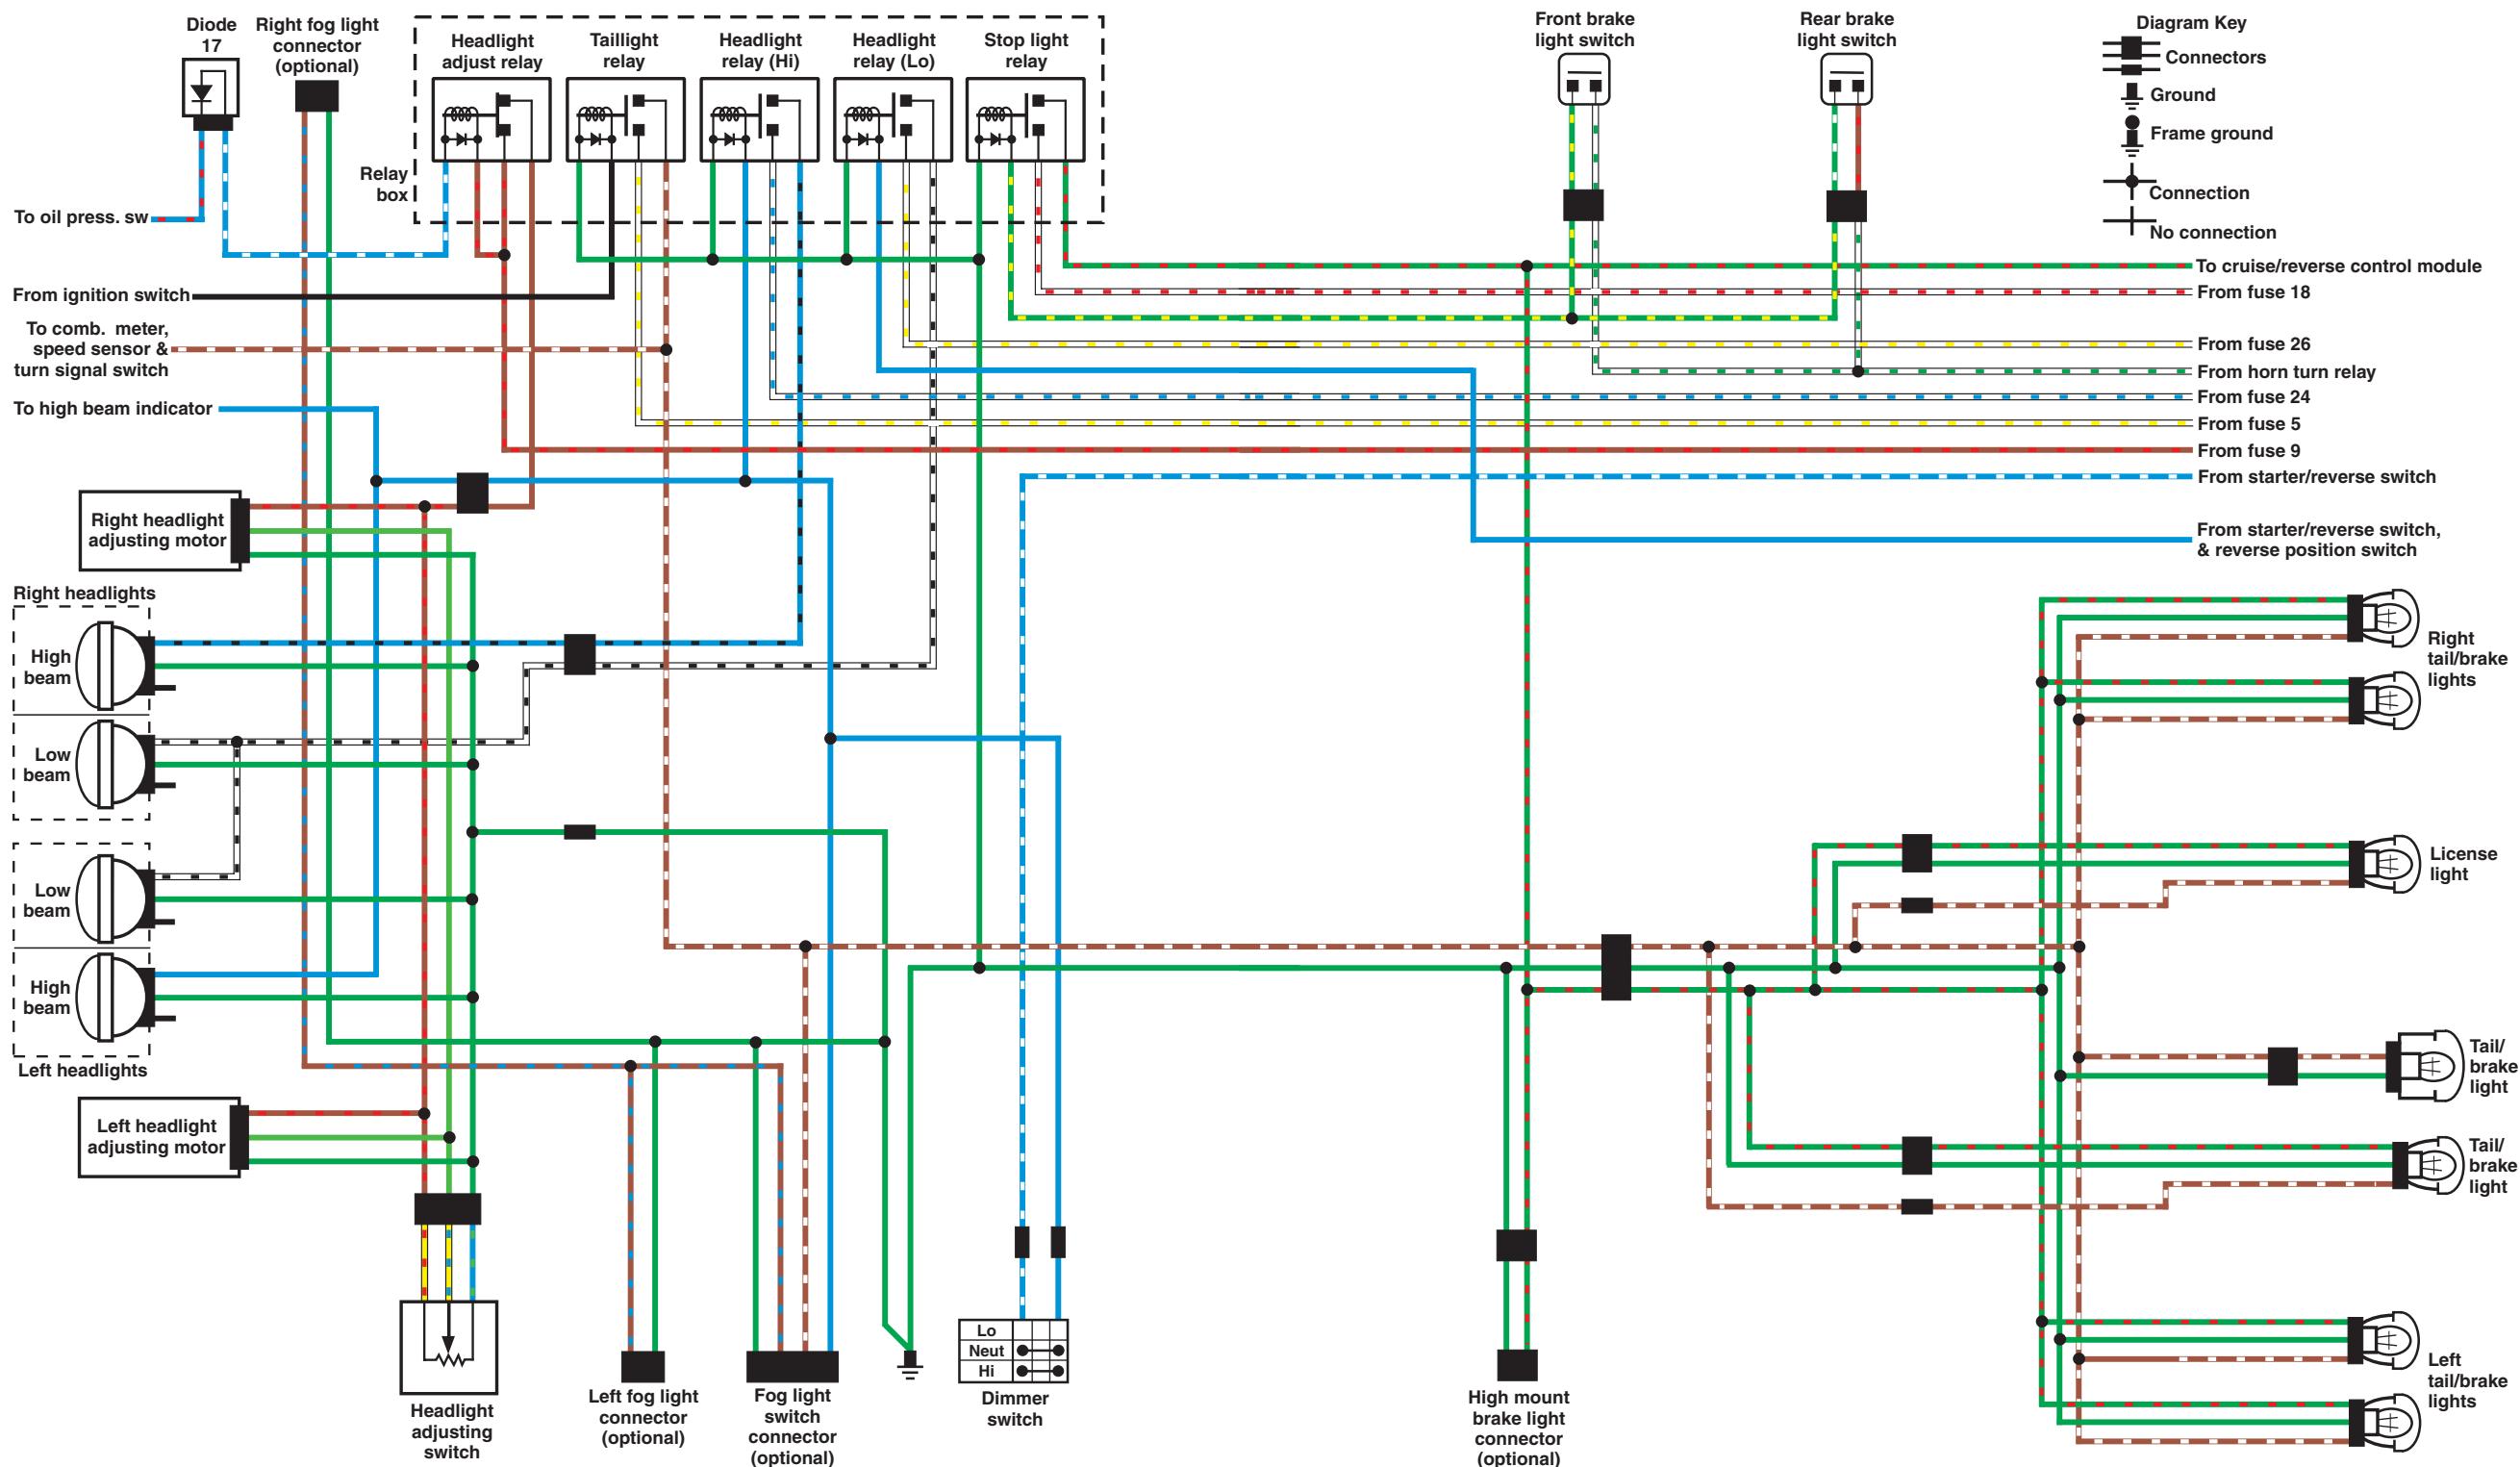


W-19

## LIGHTING SYSTEM (2006-2010 NON-AIRBAG MODELS)

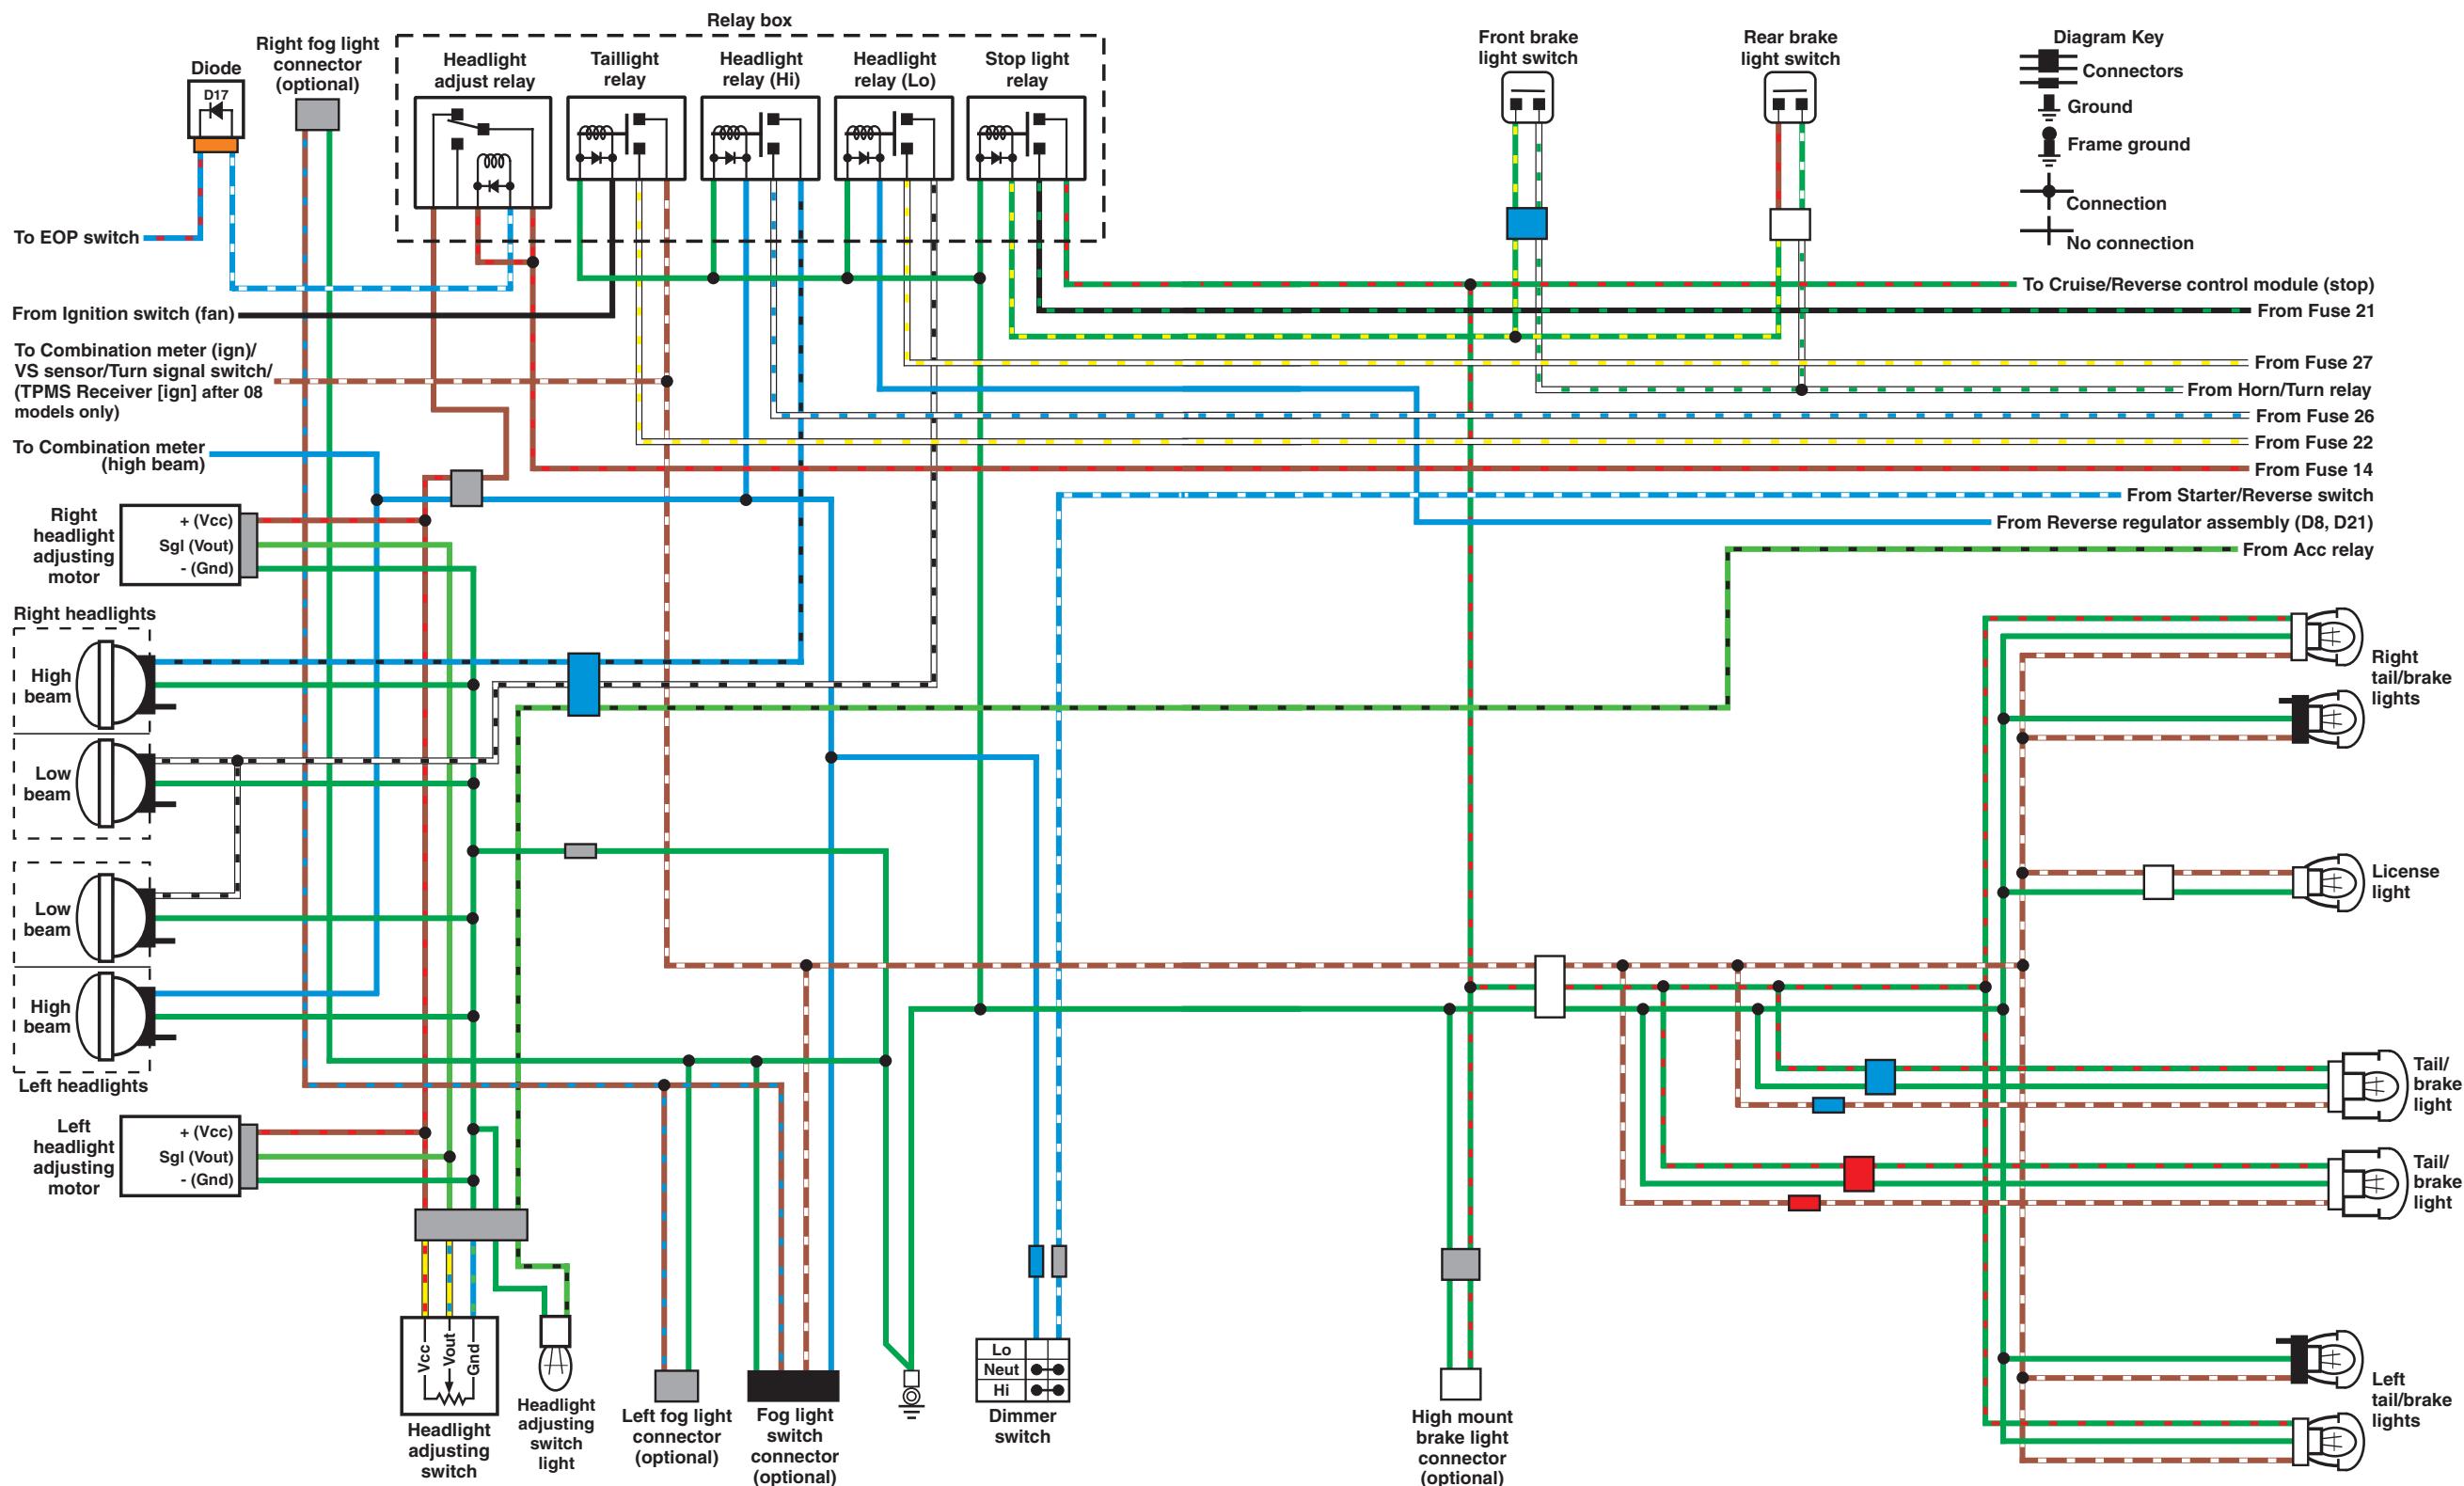


W-20

## LIGHTING SYSTEM (2006-2010 AIRBAG MODELS)

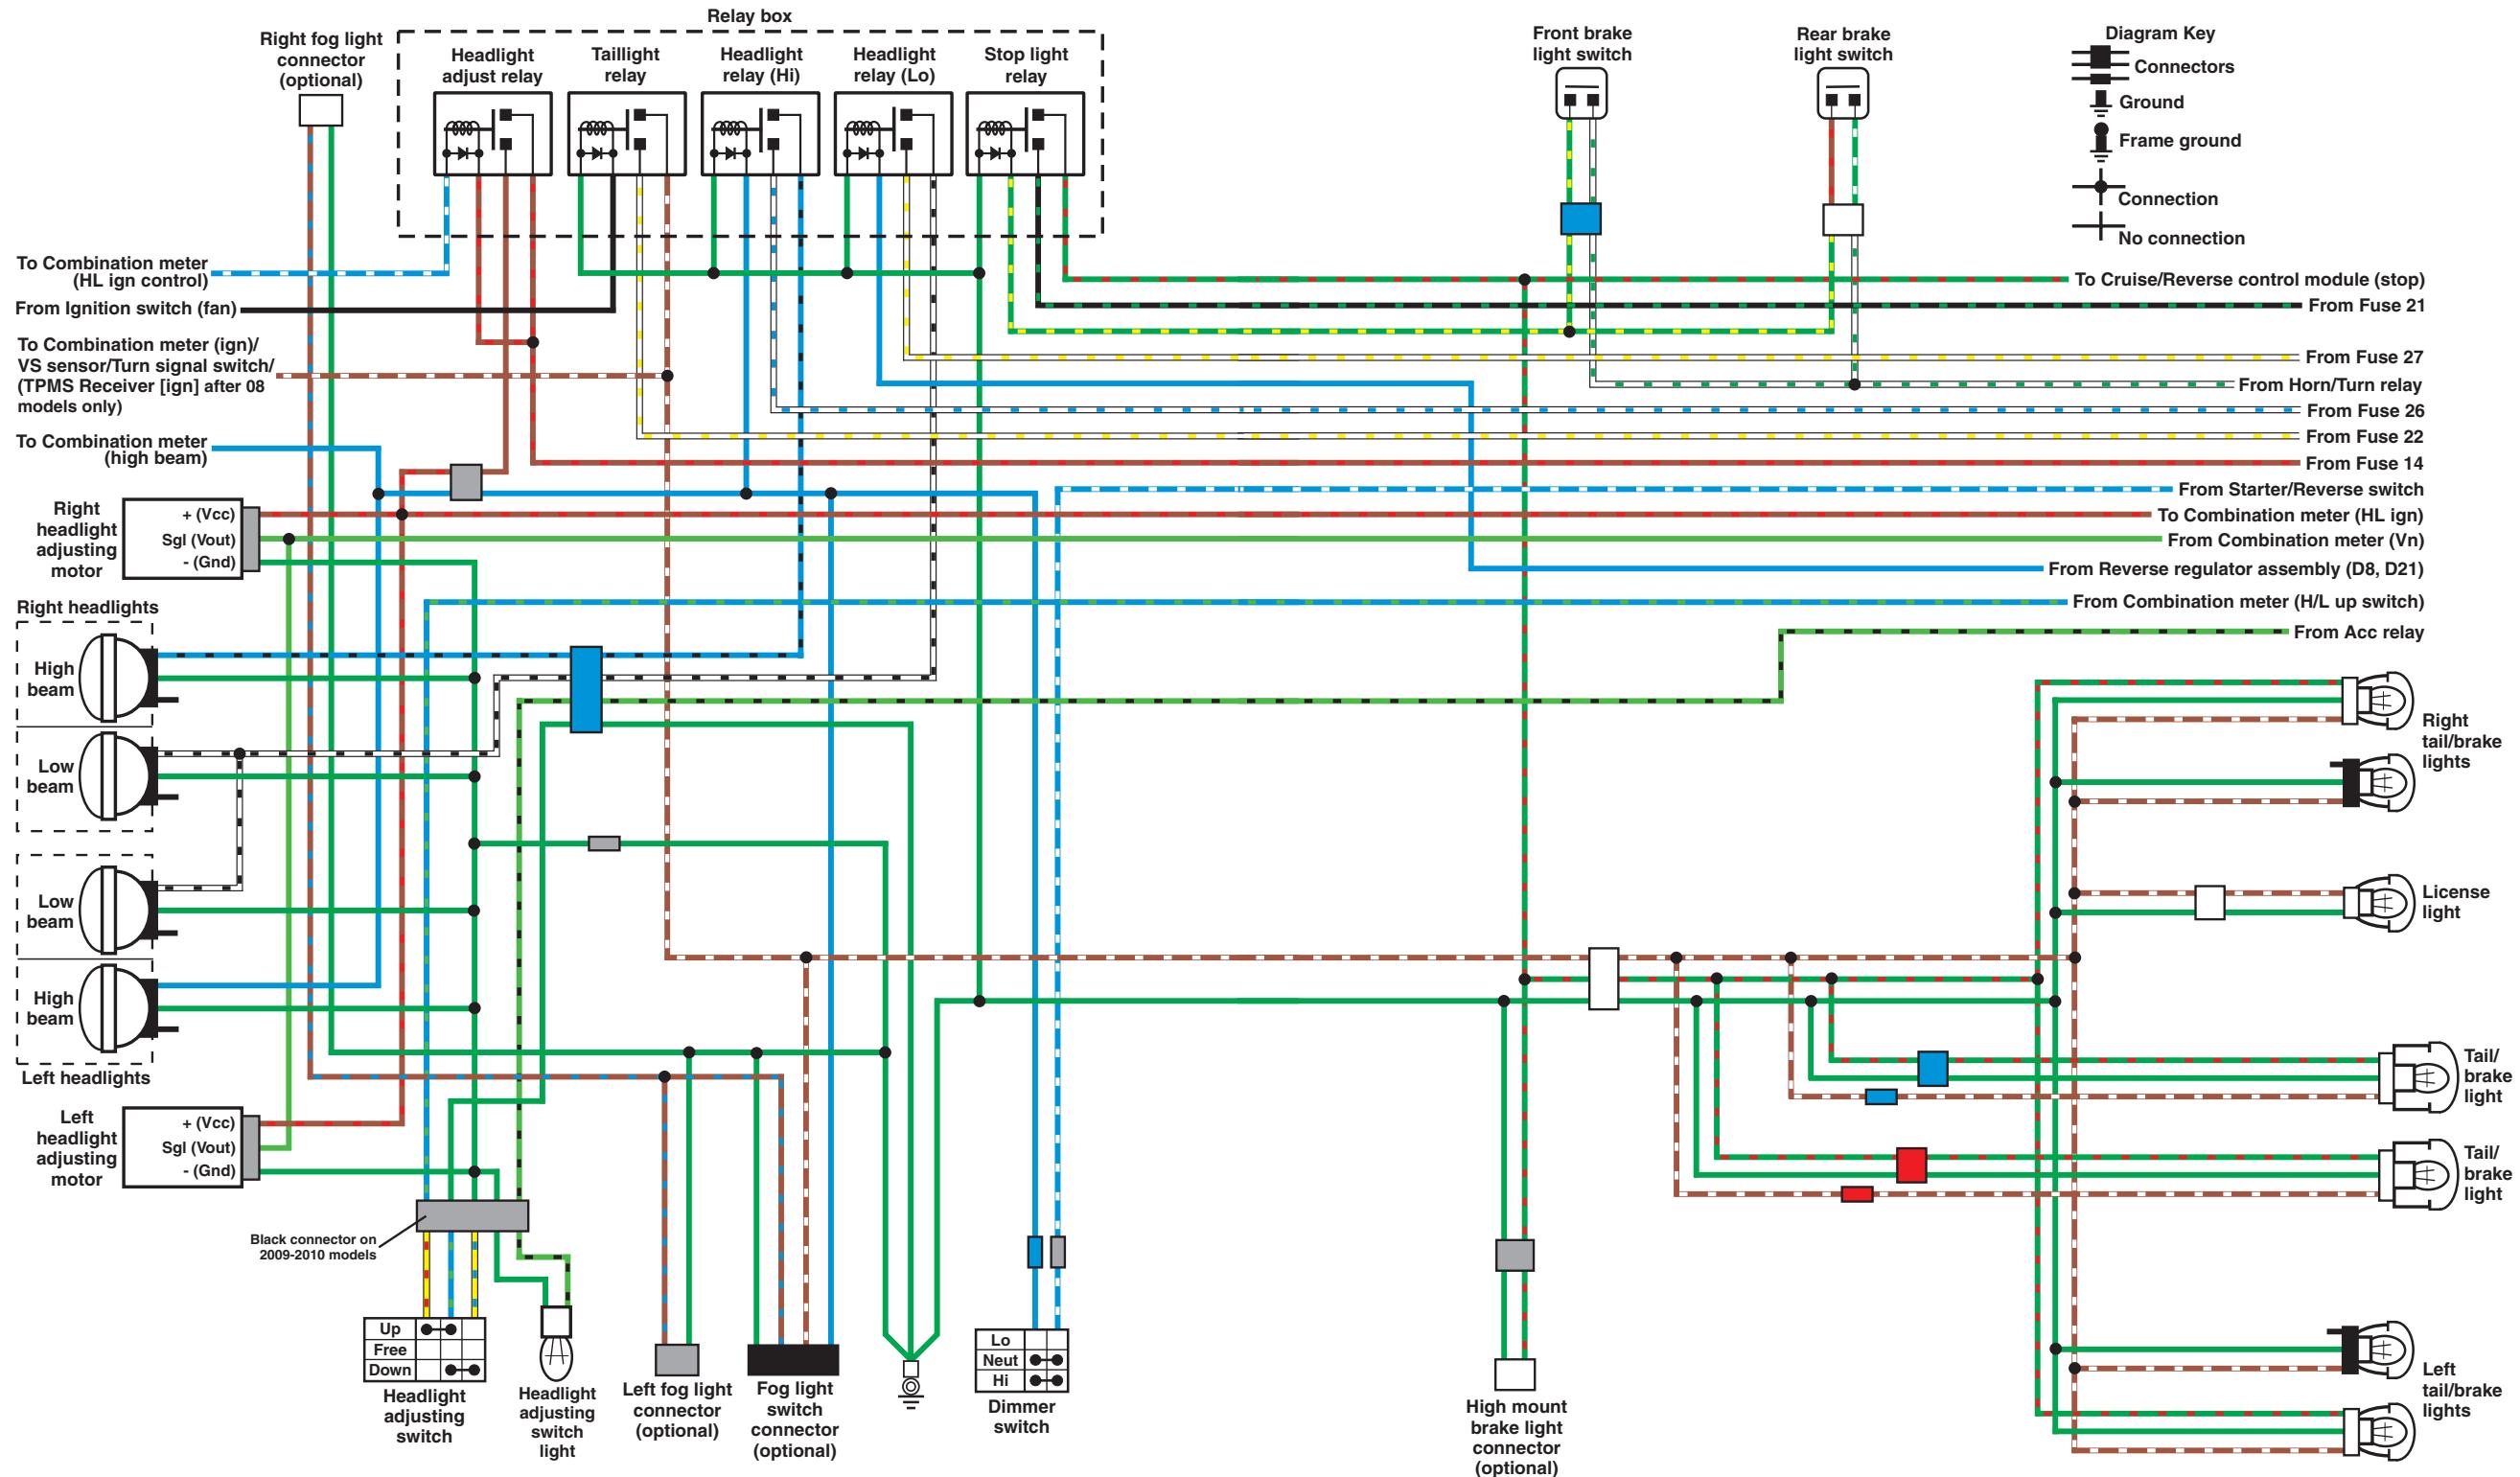


W-21

## TURN SIGNAL AND HORN SYSTEMS (2001-2005 MODELS)

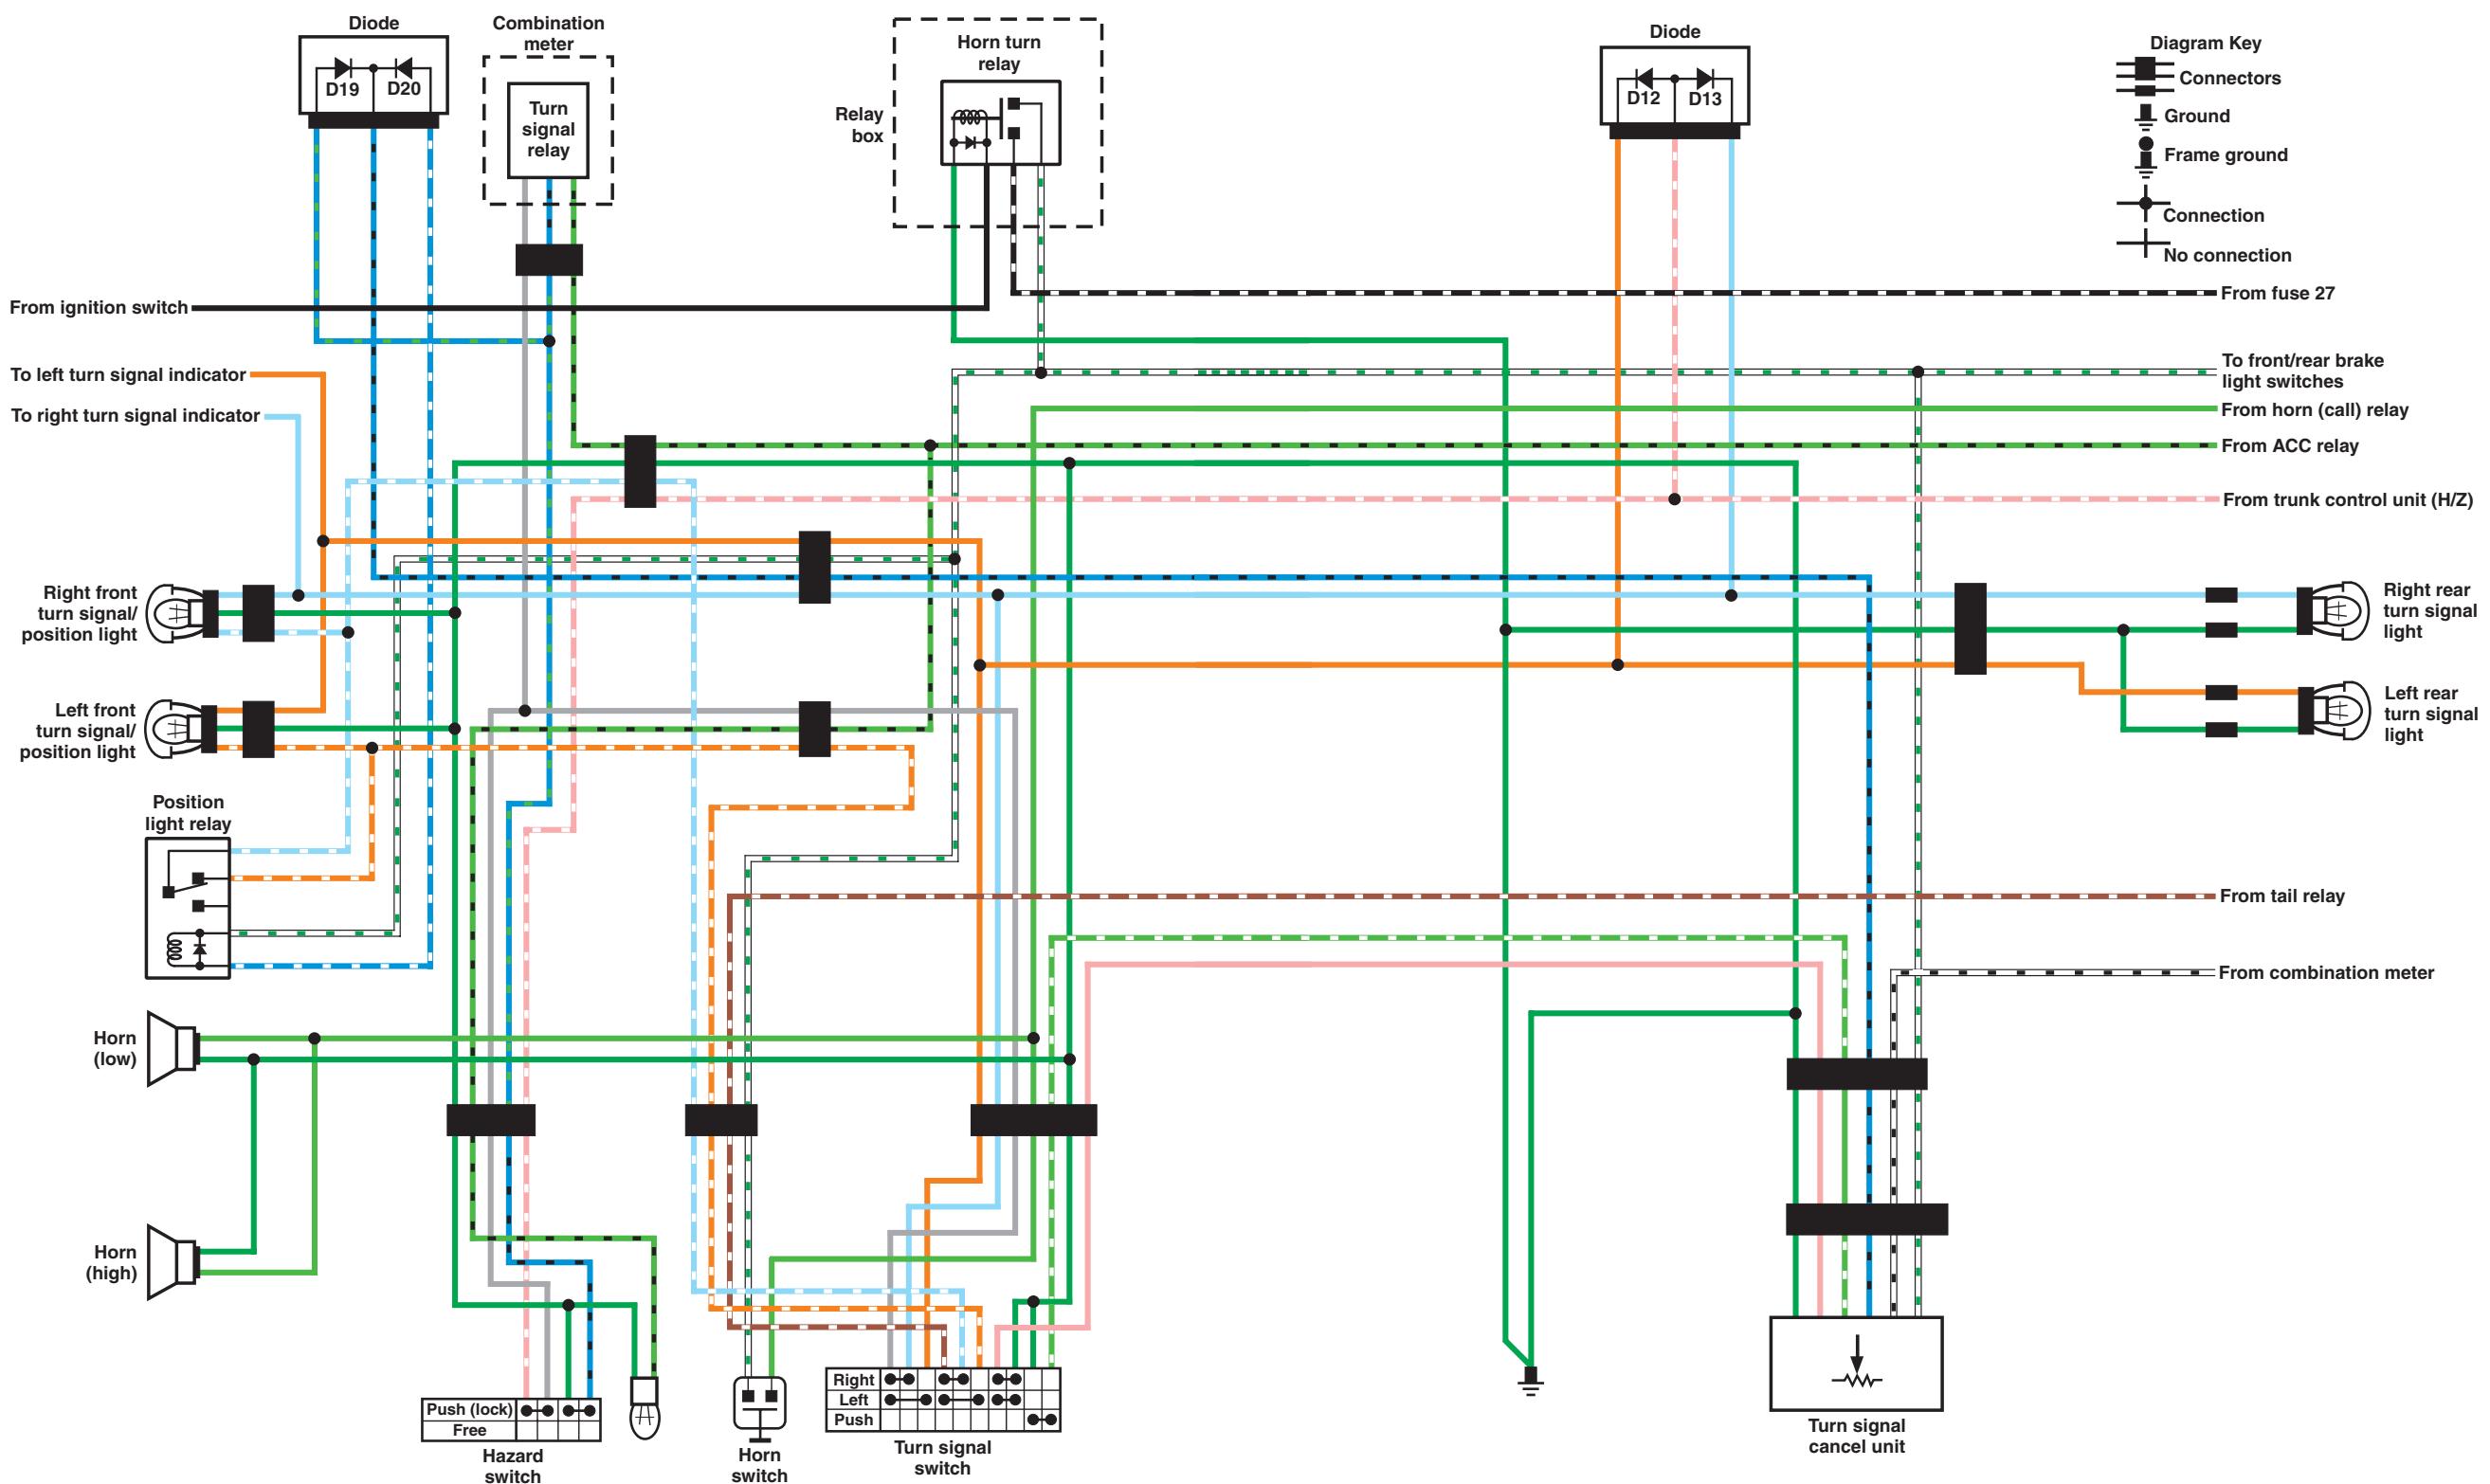


W-22

## TURN SIGNAL AND HORN SYSTEMS (2006-2010 NON-AIRBAG MODELS)

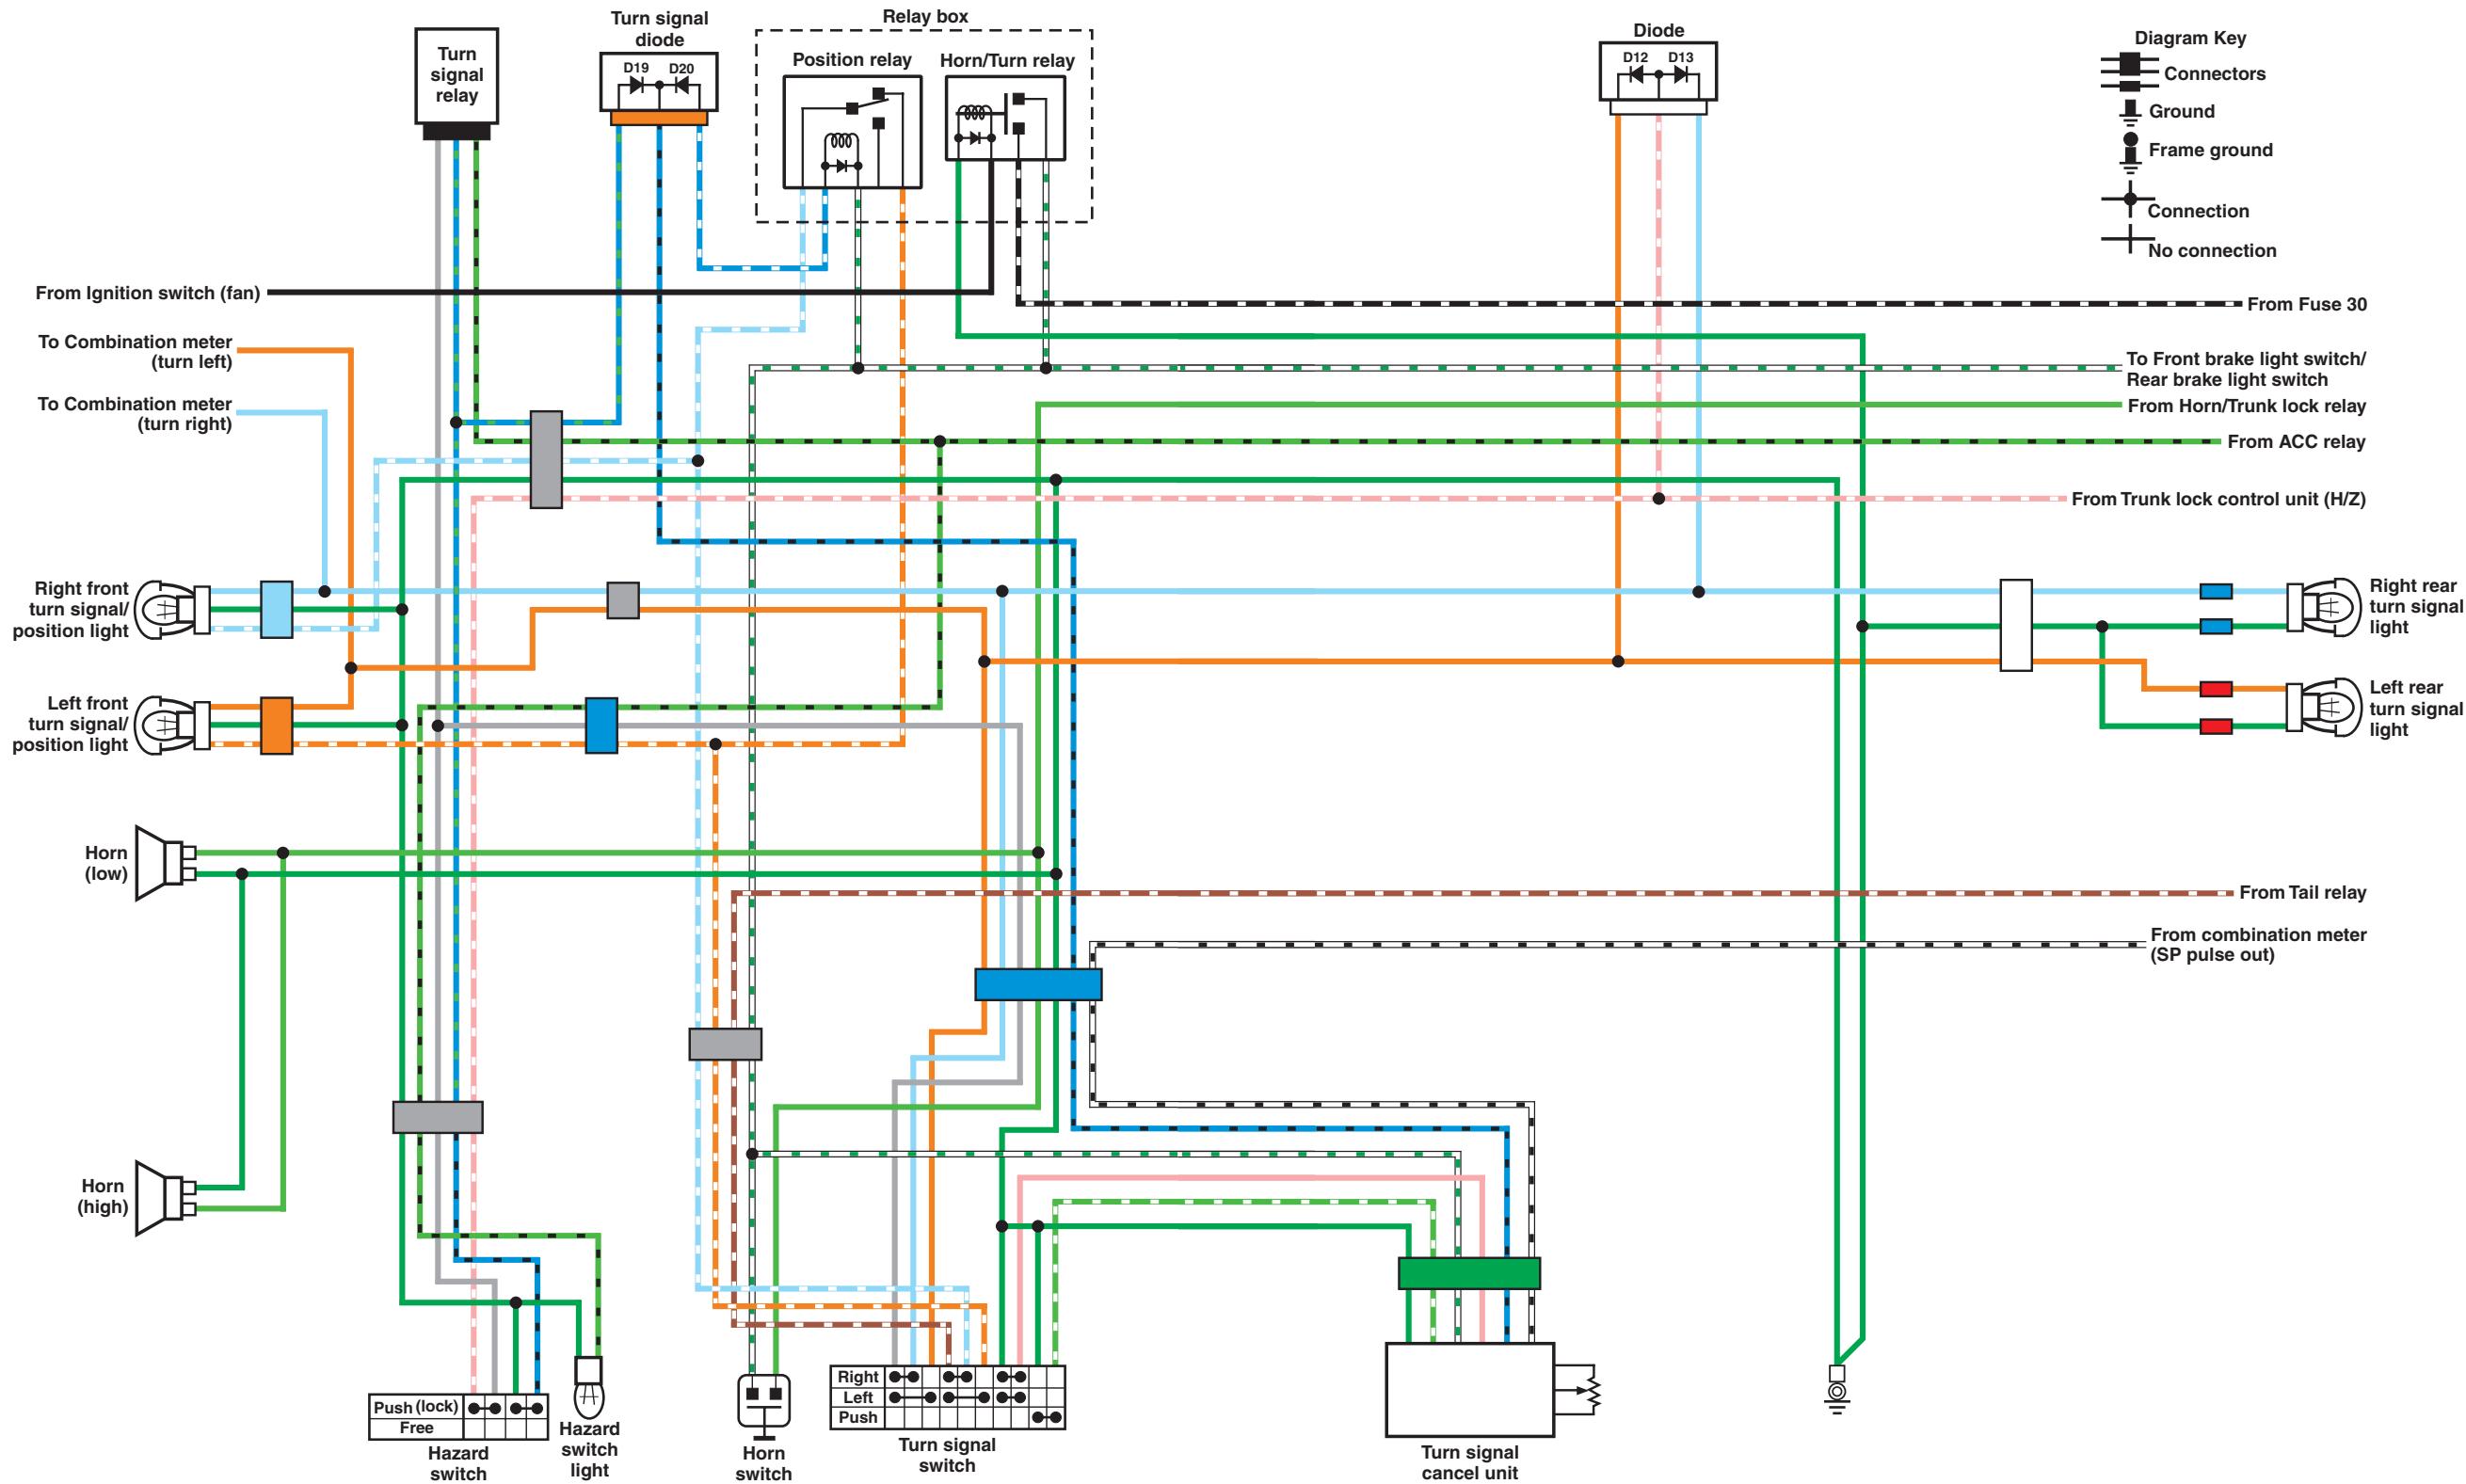


W-23


## TURN SIGNAL AND HORN SYSTEMS (2006-2010 AIRBAG MODELS)

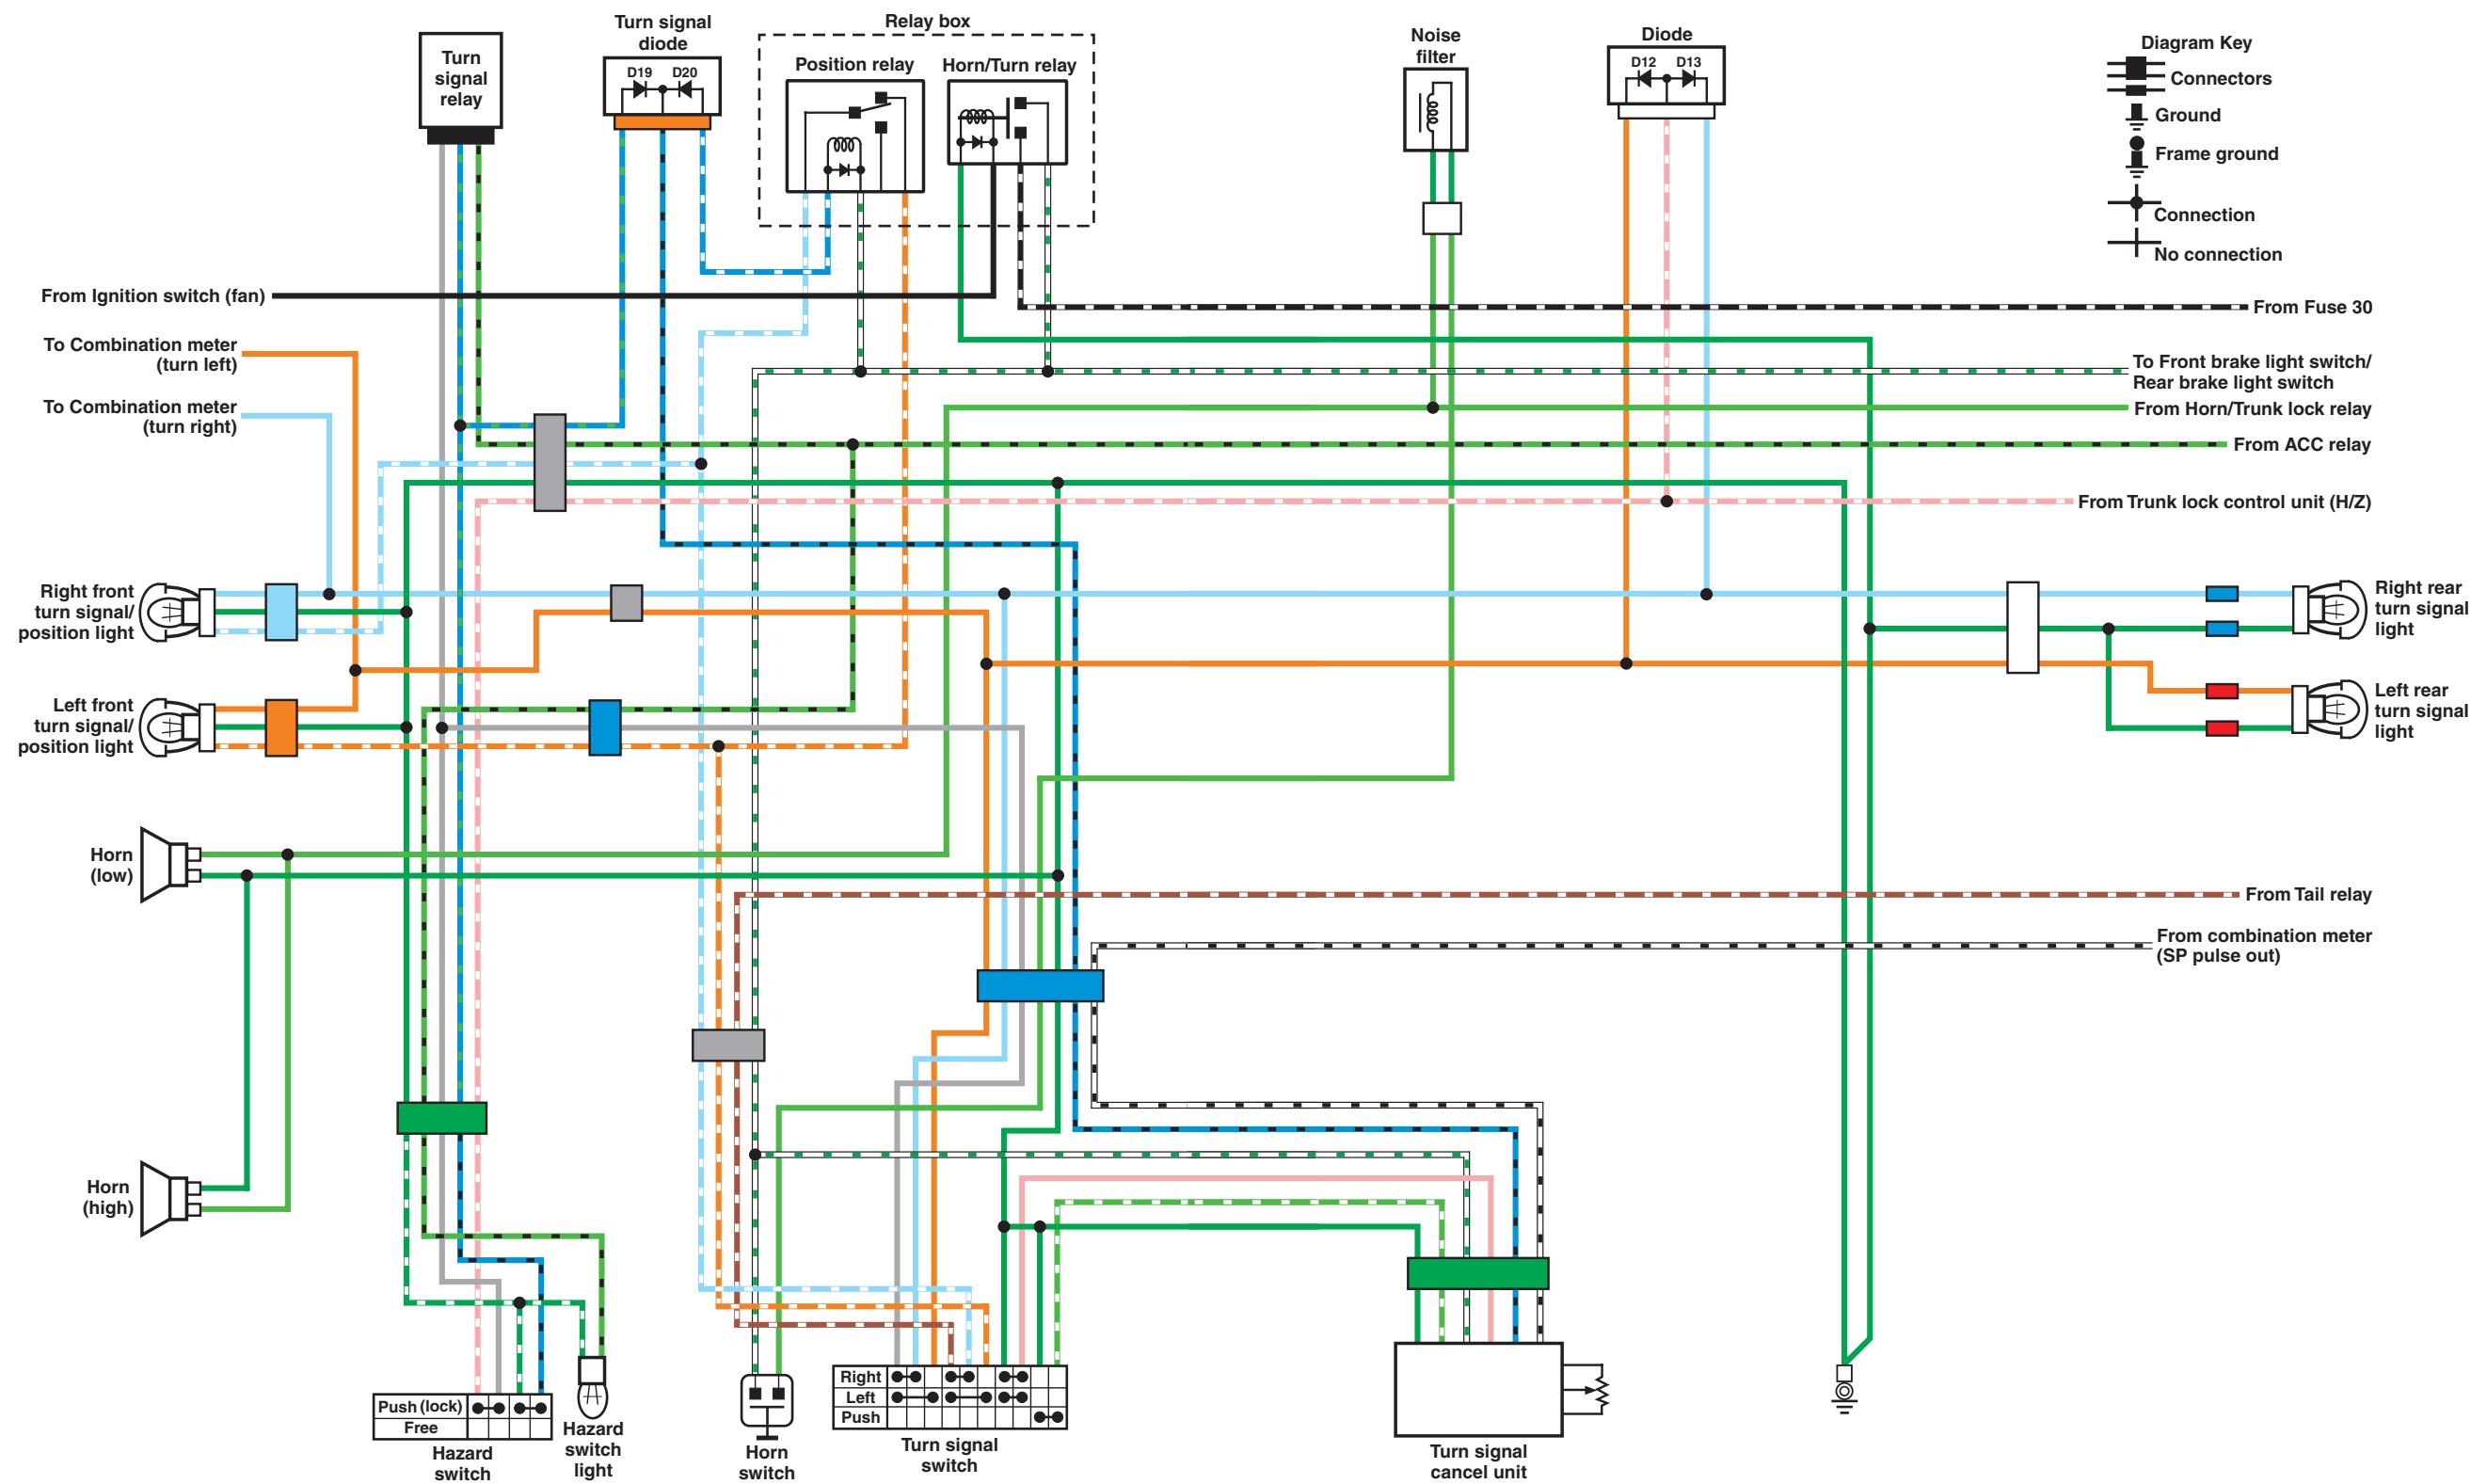

## COMBINATION METER (2001 MODELS)

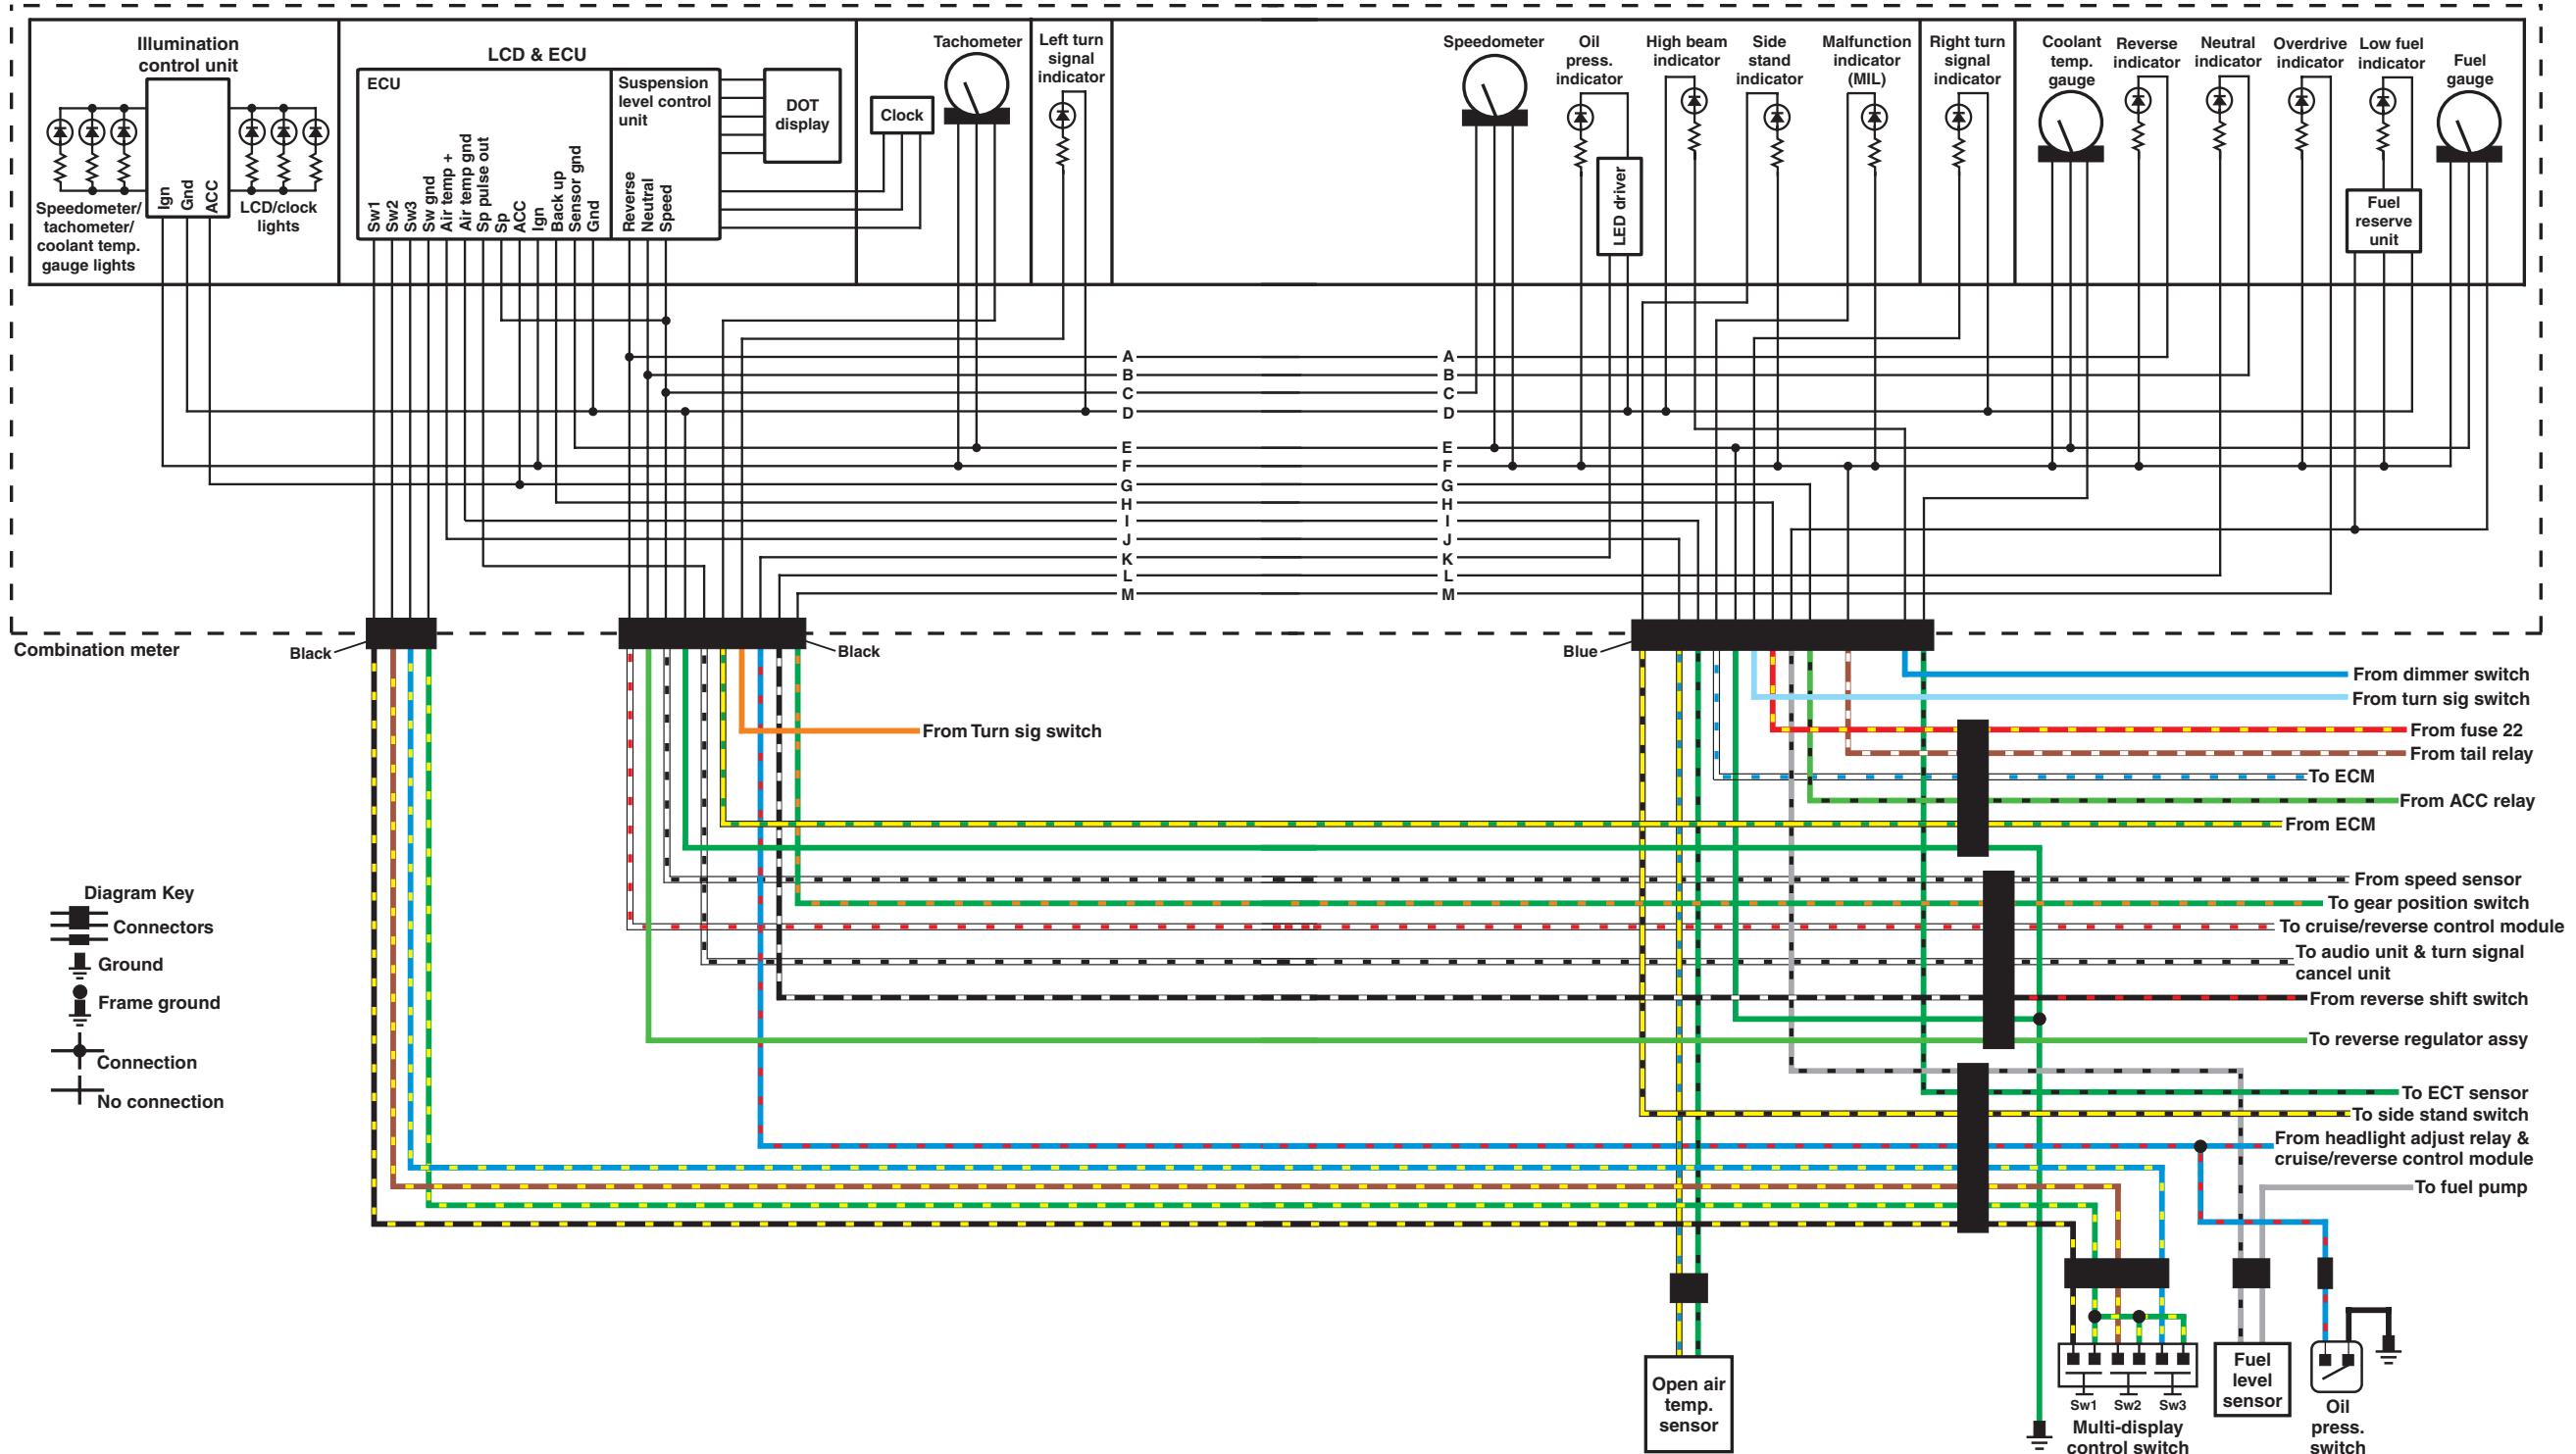


## COMBINATION METER (2002-2005 MODELS)

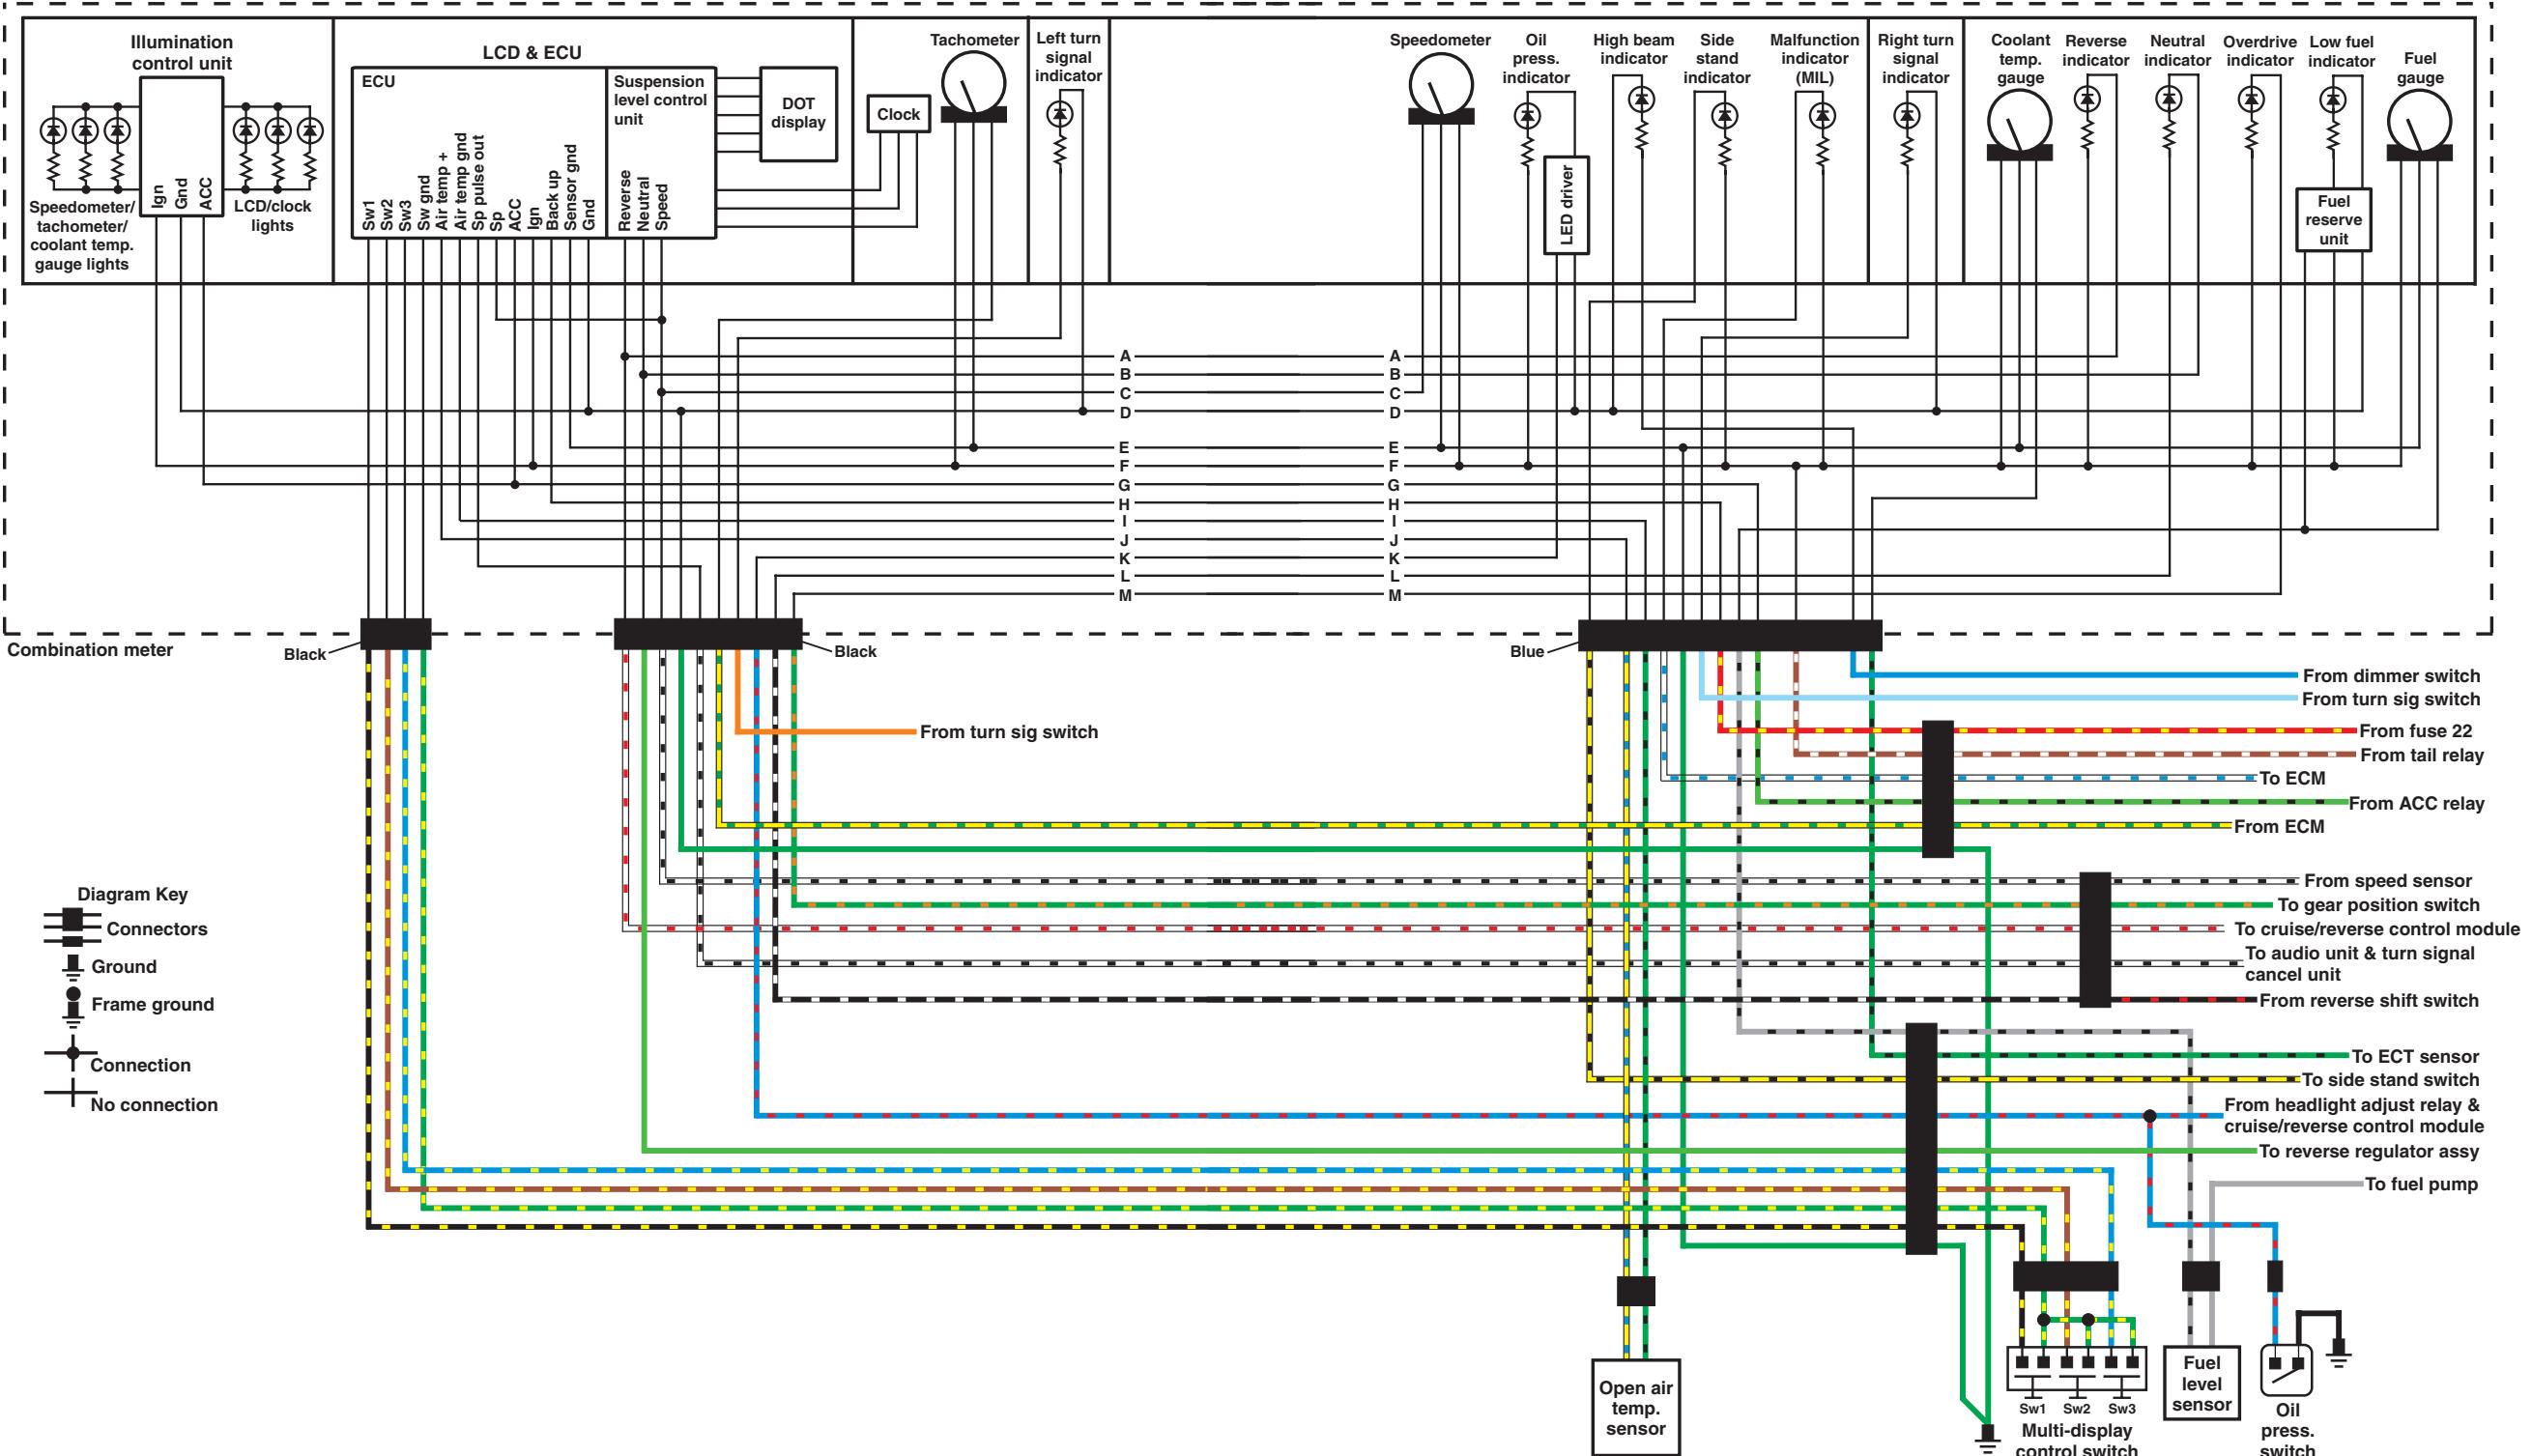


W-26

## COMBINATION METER (2006-2008 1A, 1B, 1C, 1E AND 2009-2010 2A MODELS)

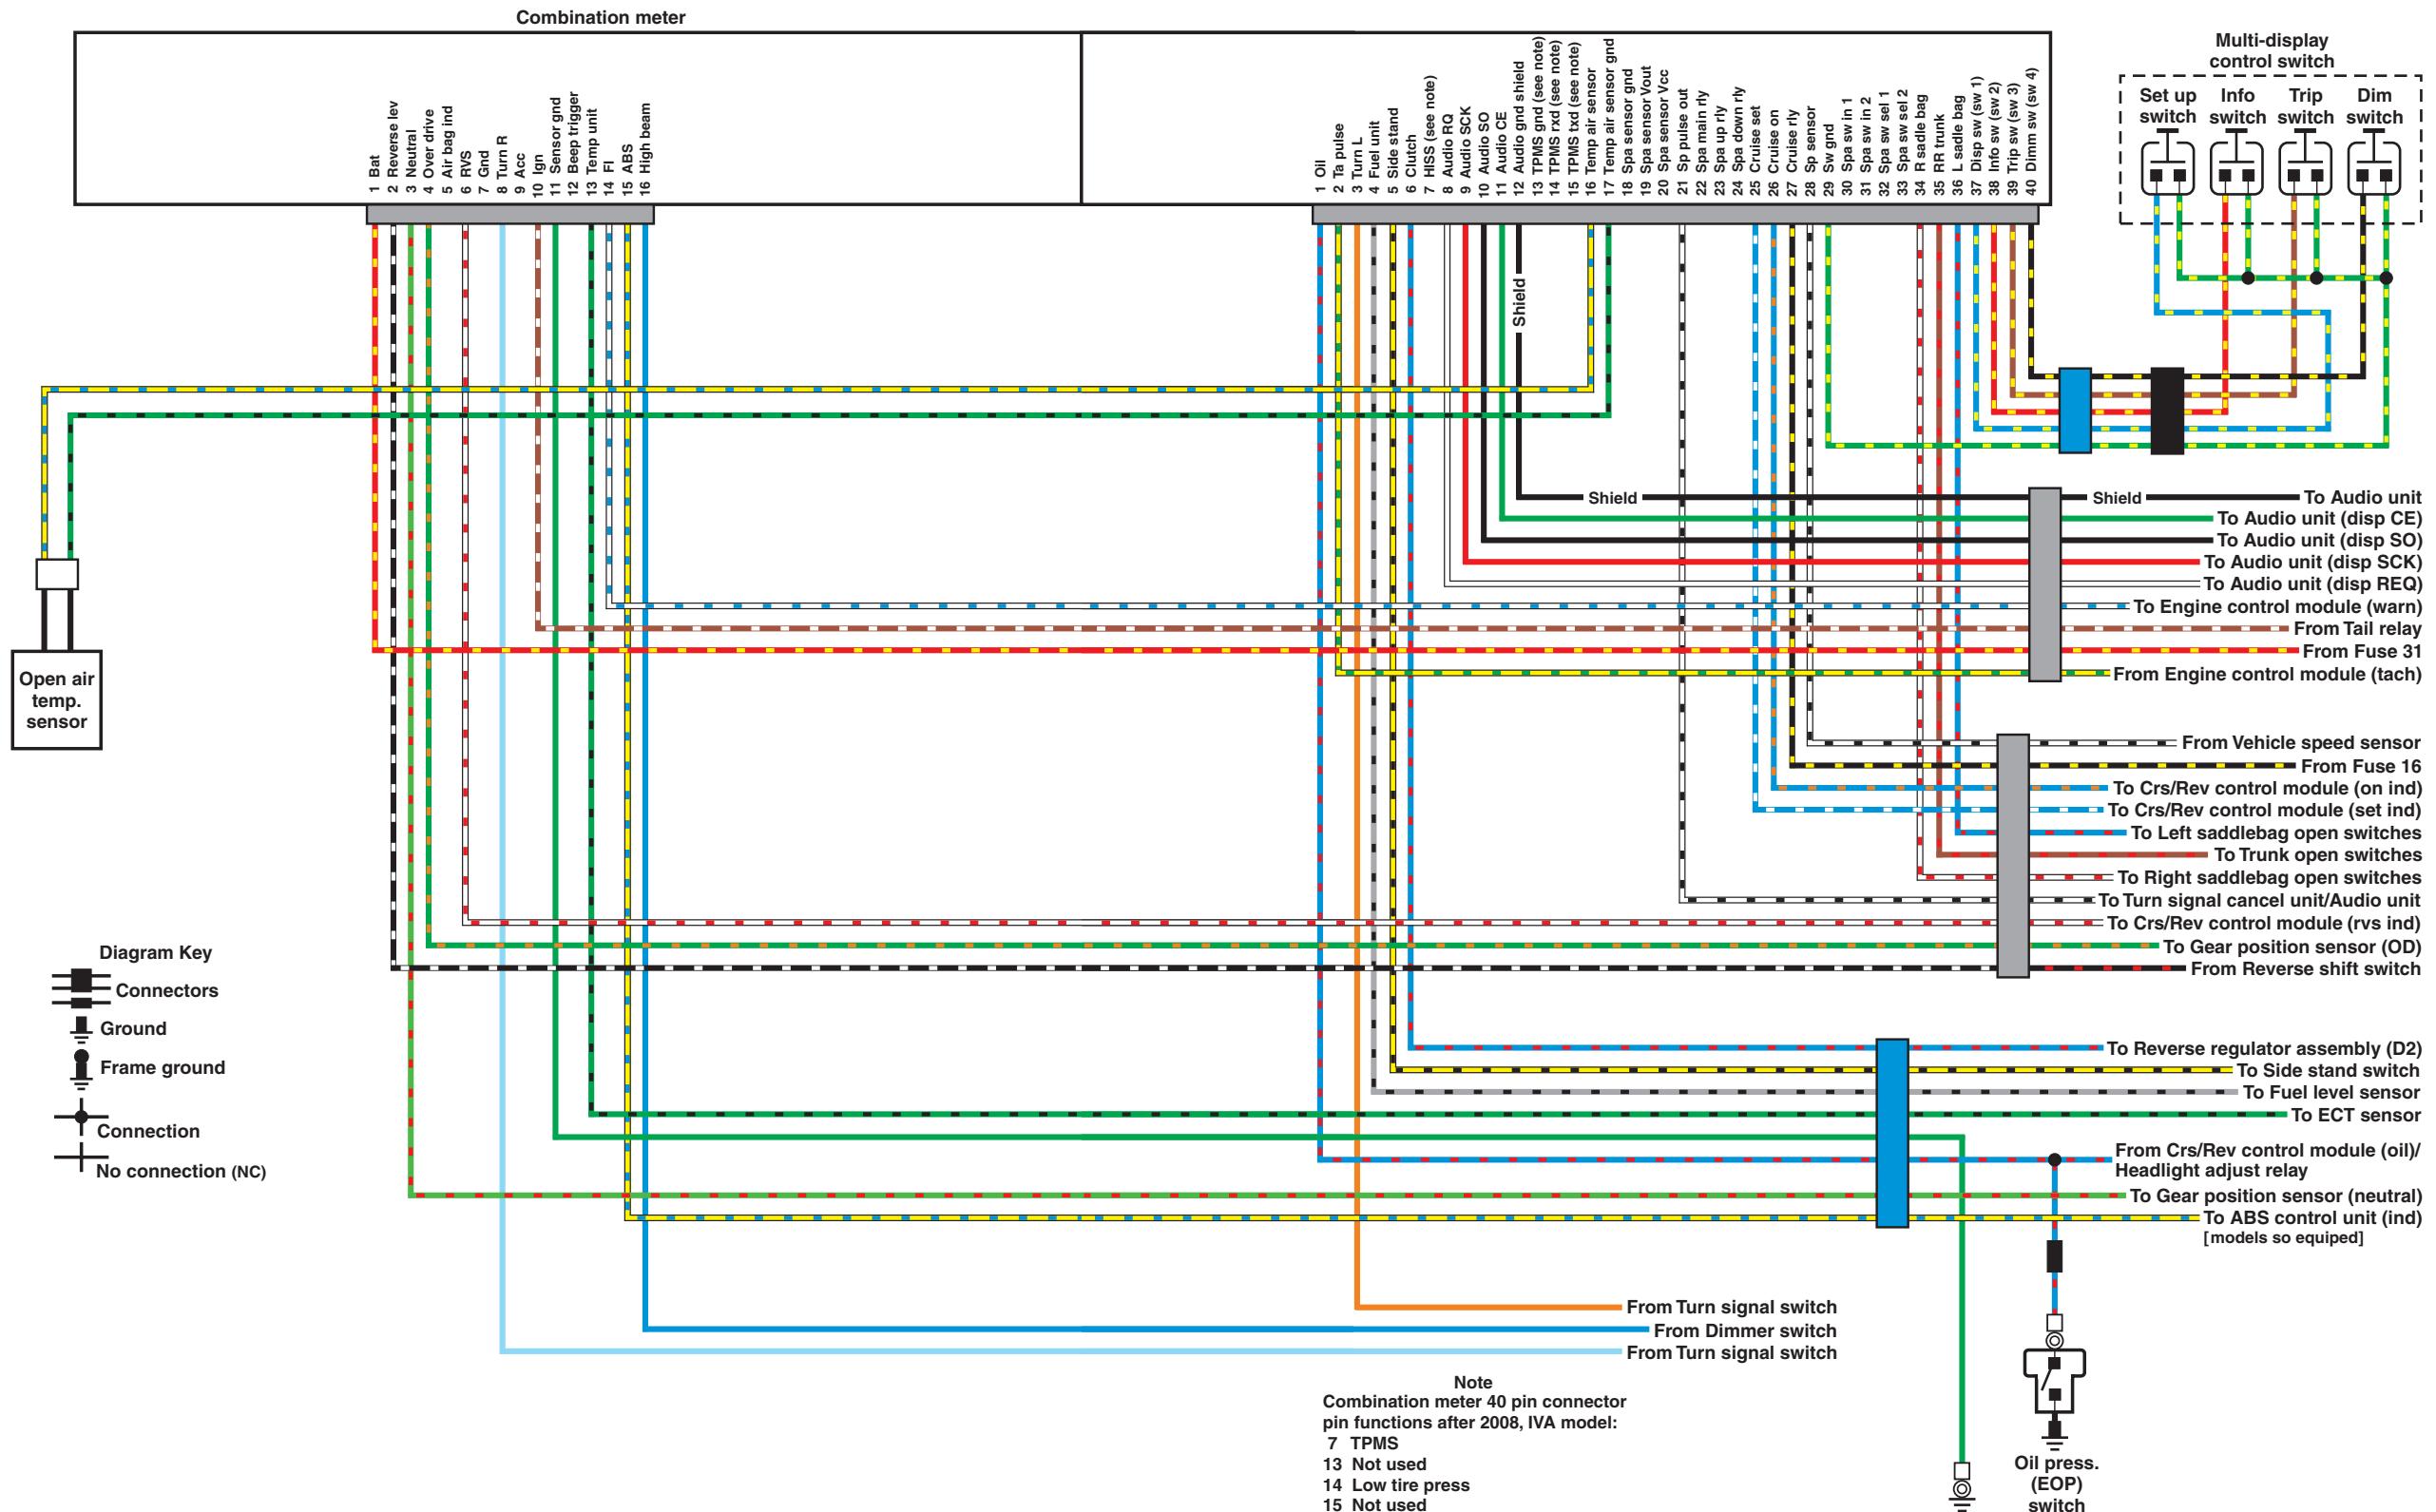


## COMBINATION METER (2006-2008 1D AND 1F MODELS)

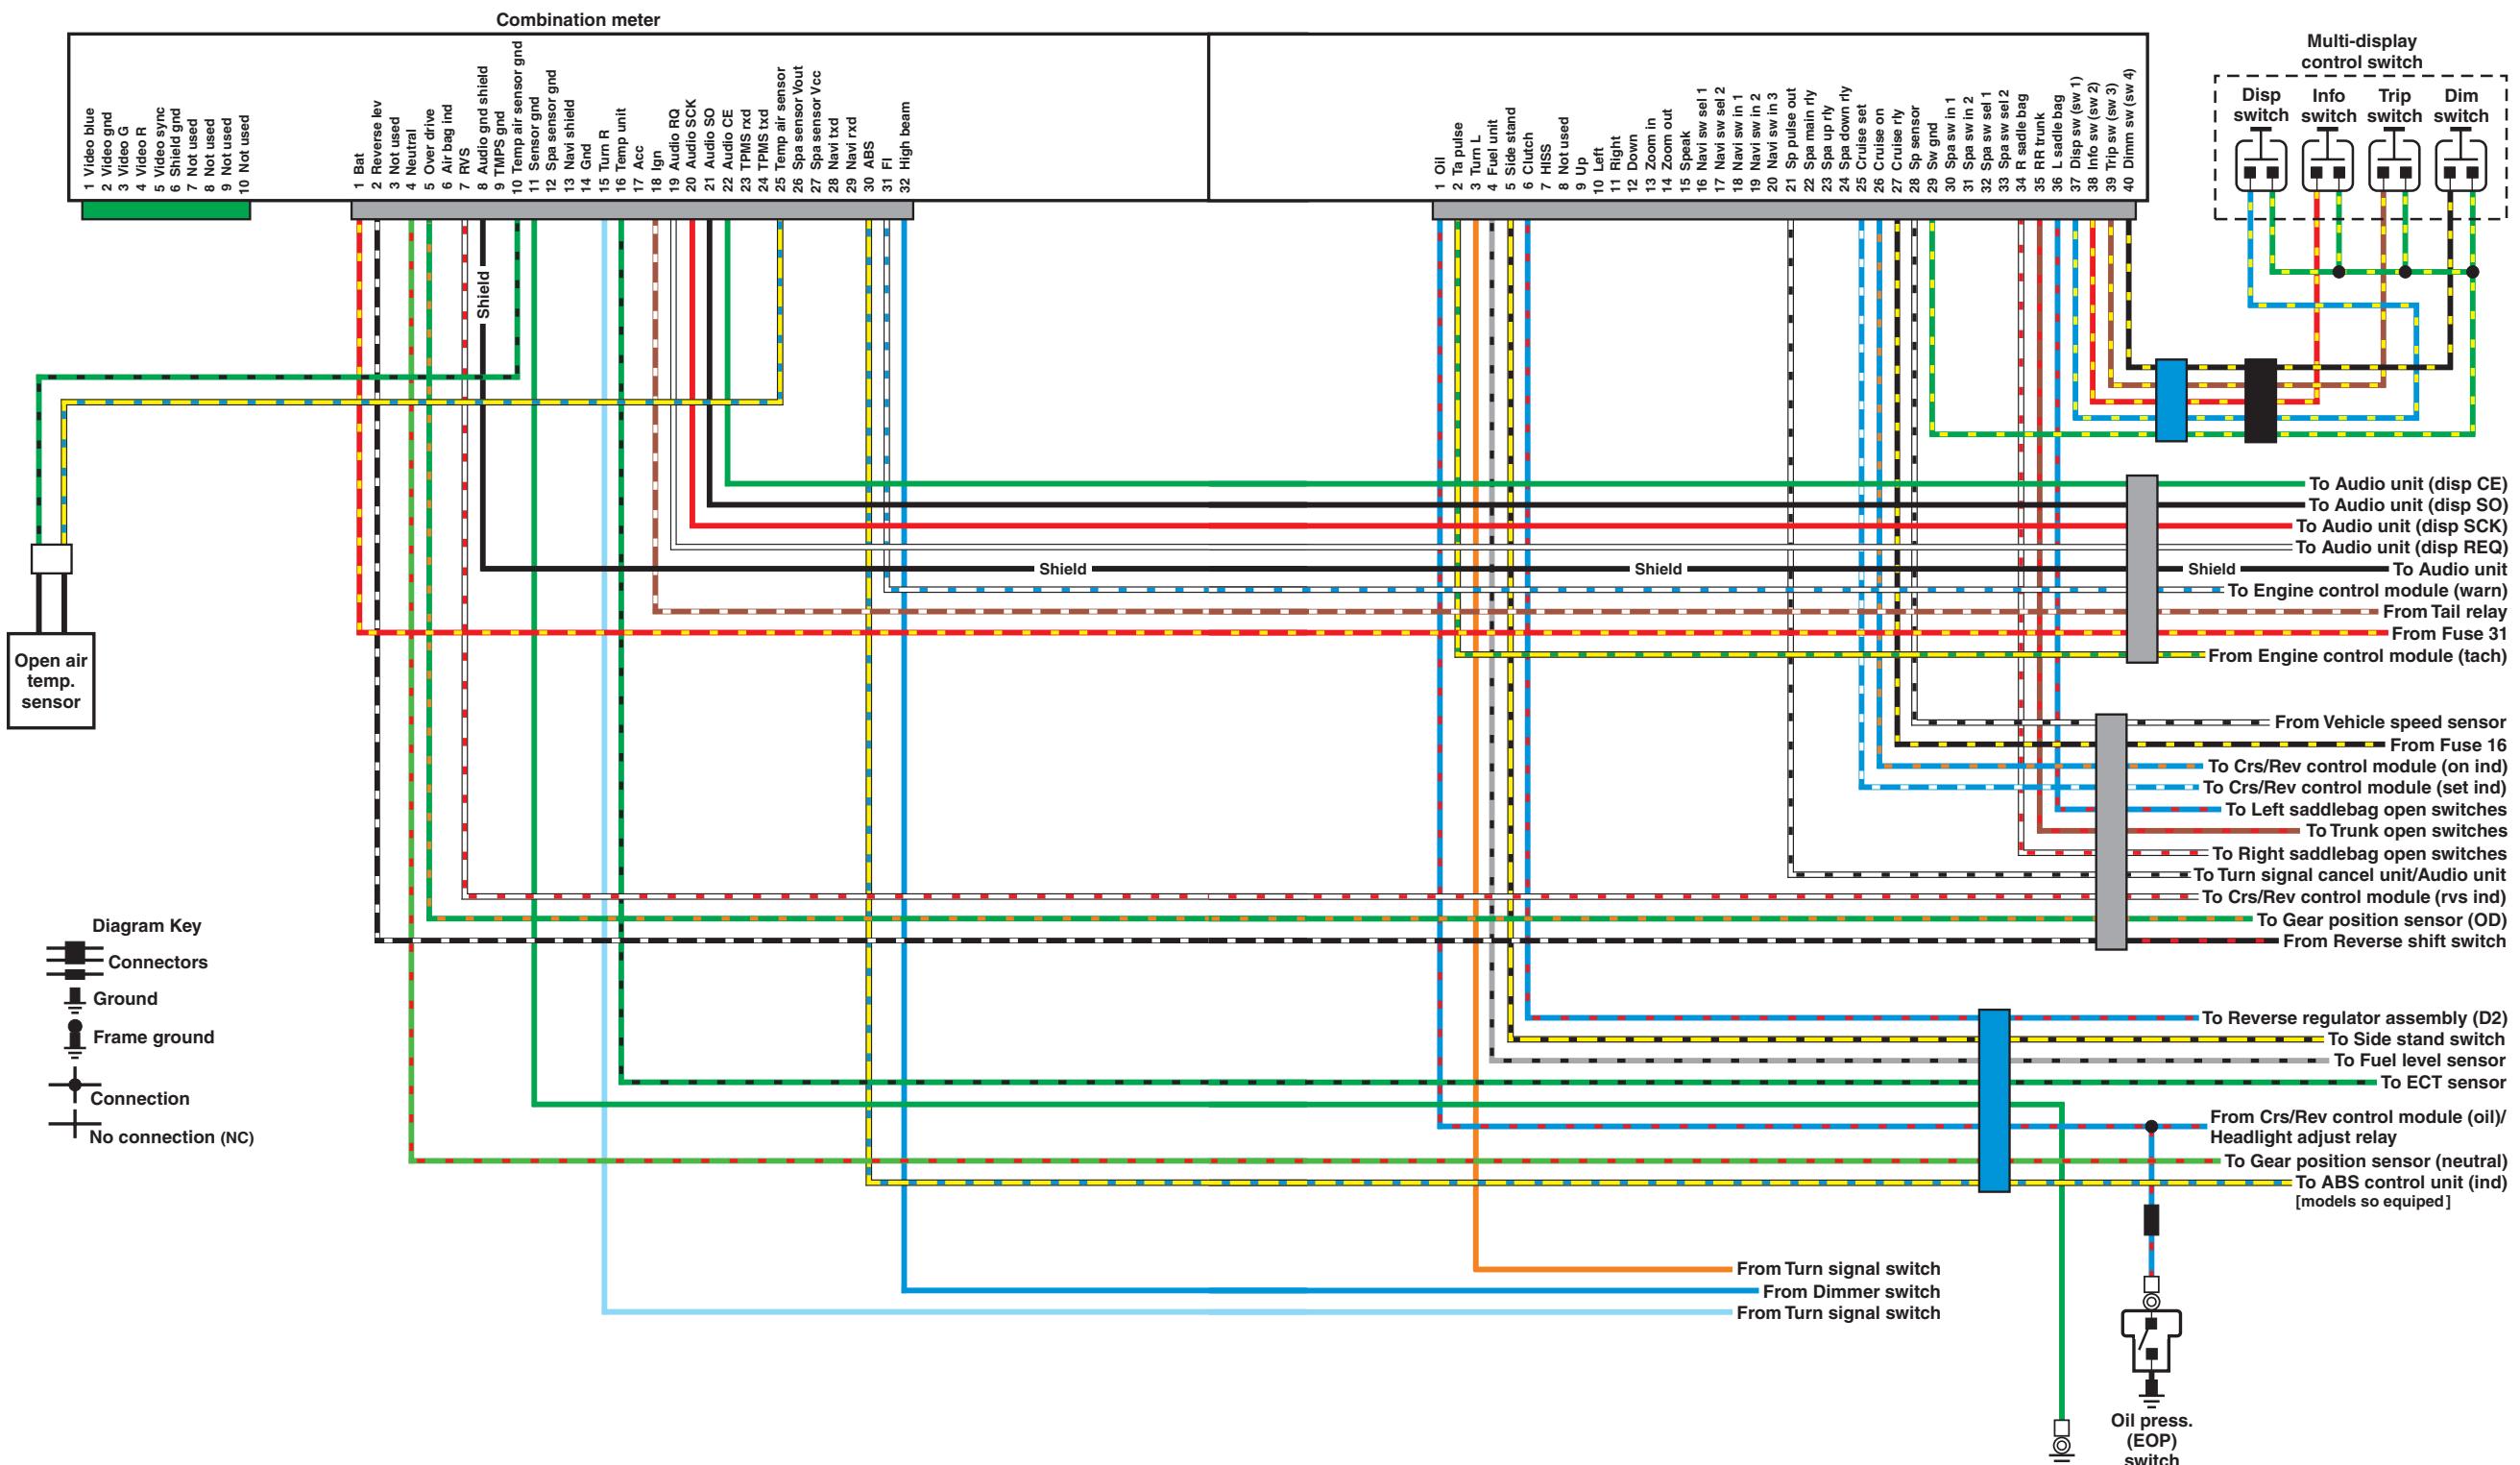


W-28

## **COMBINATION METER (2009-2010 2B, 2C AND 2E MODELS)**

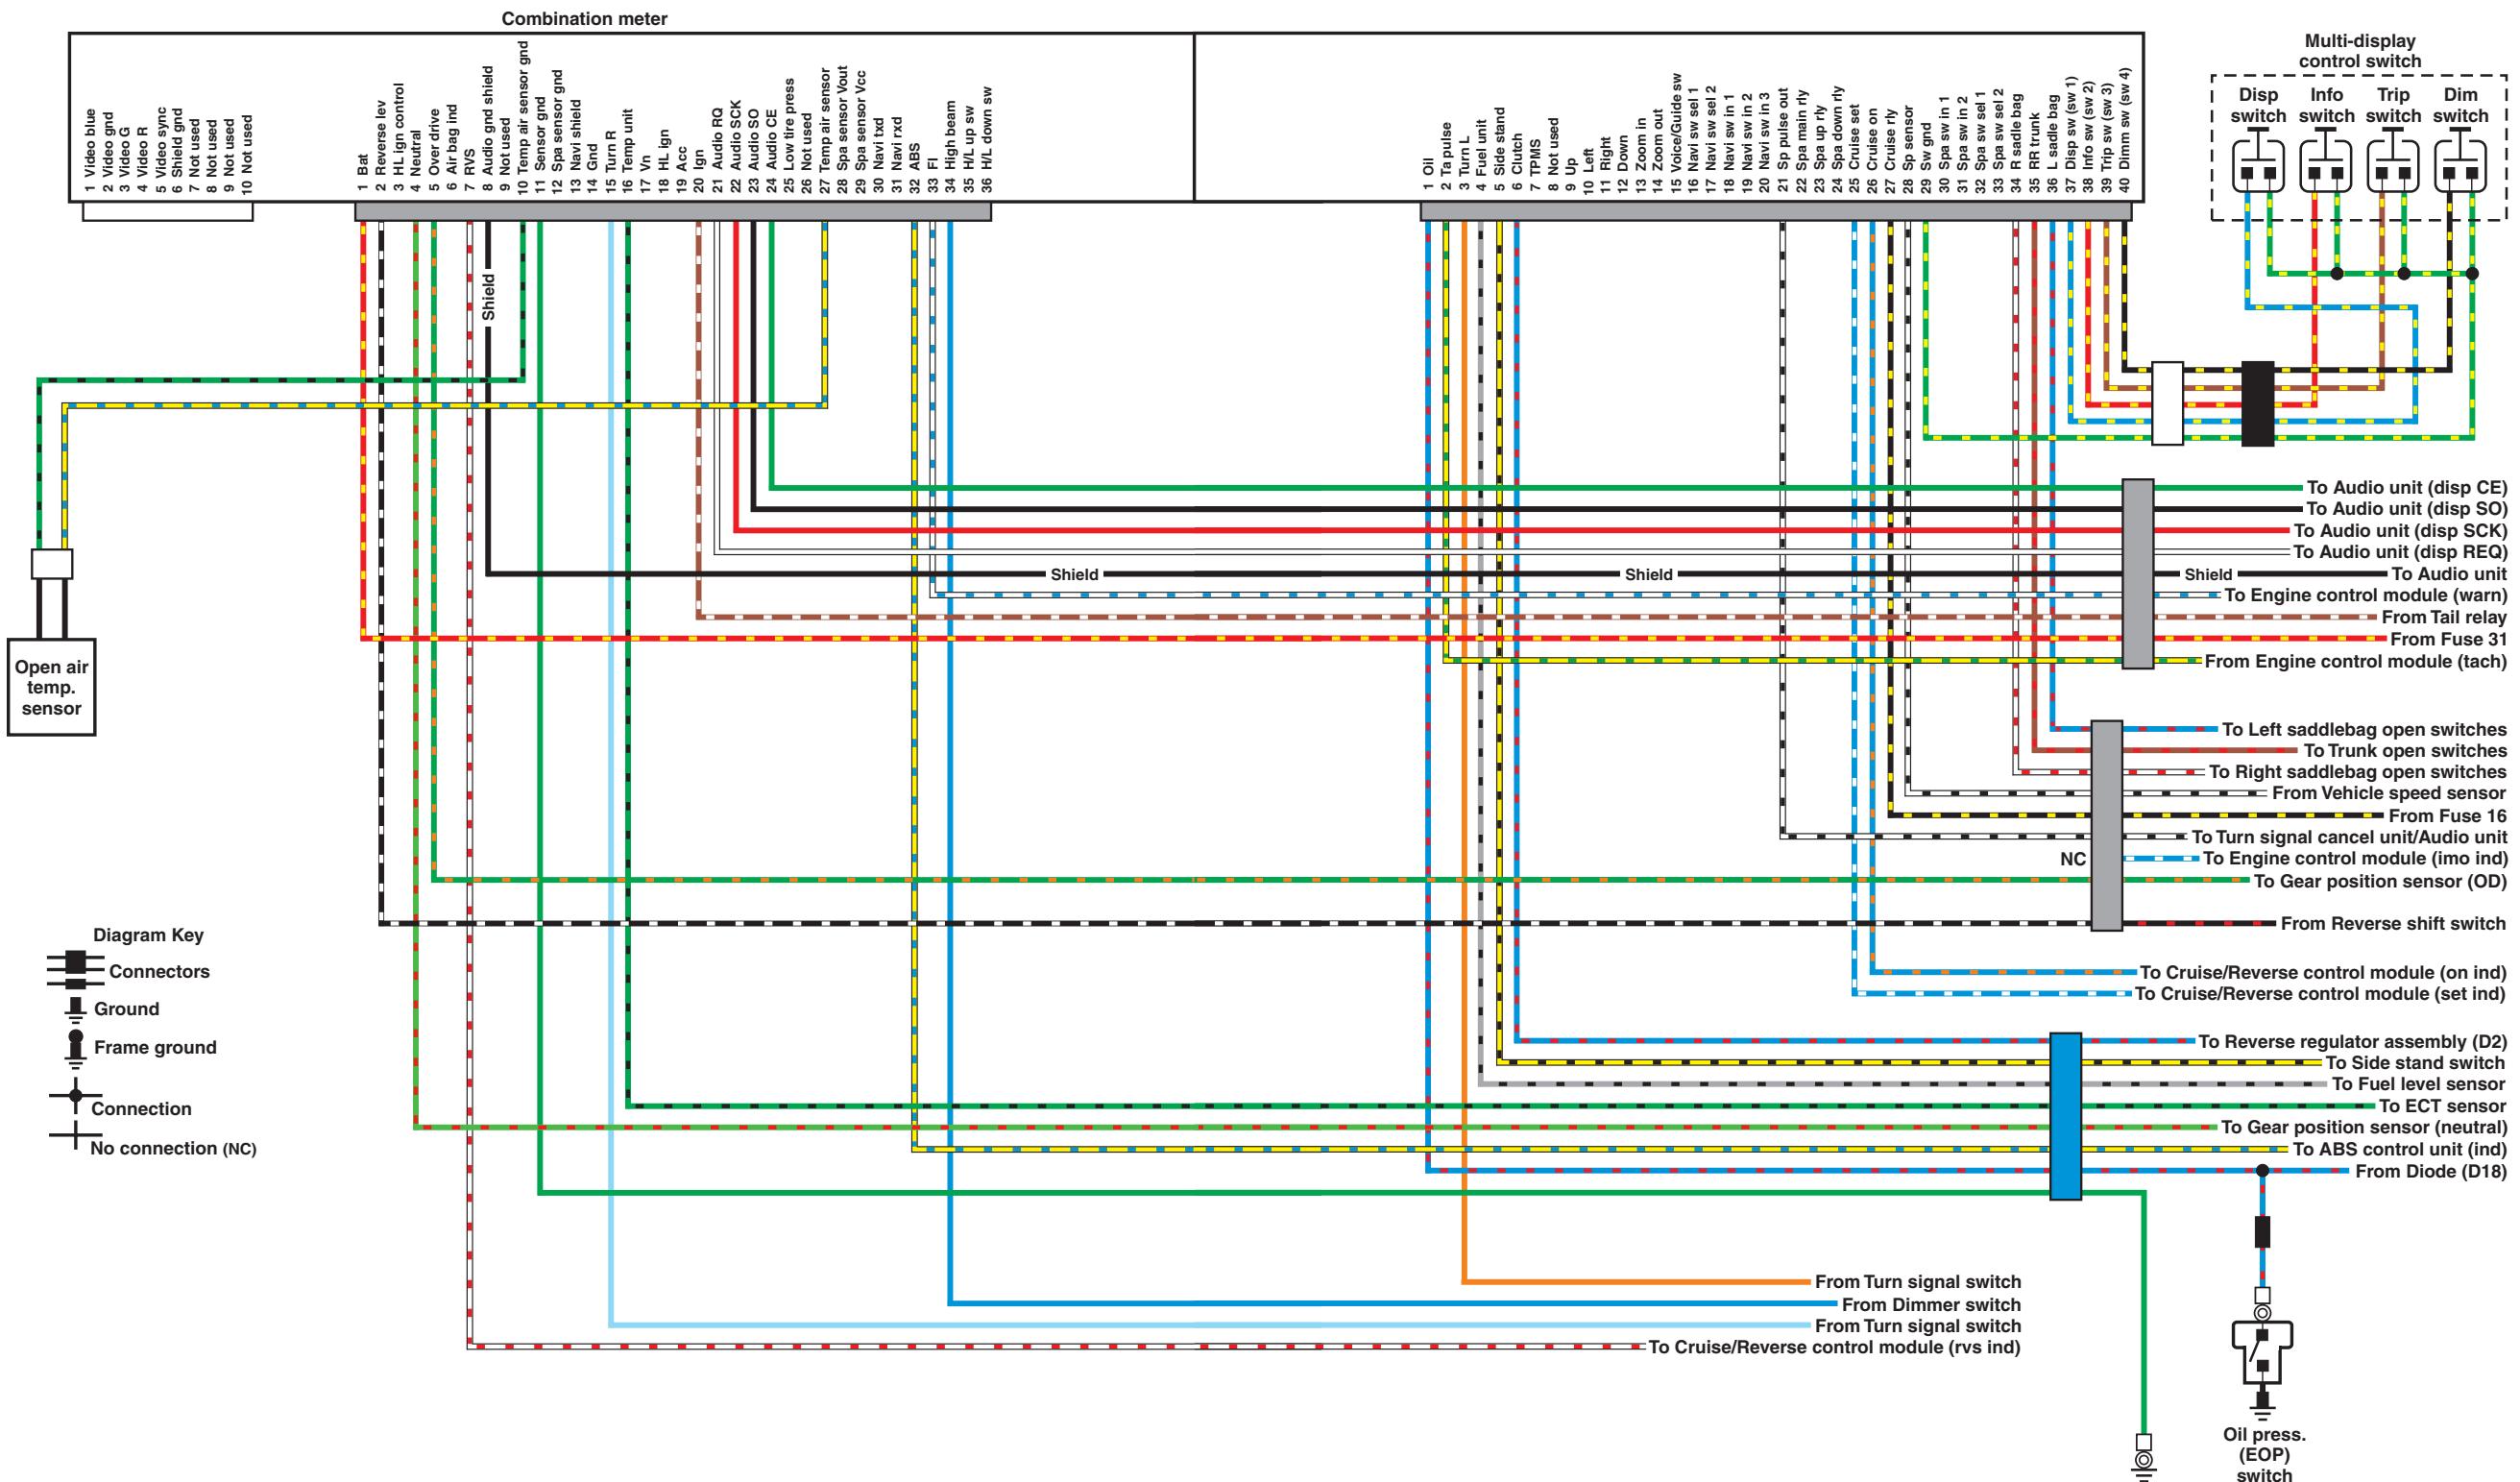


W-29

## COMBINATION METER (2006-2010 AIRBAG MODELS)

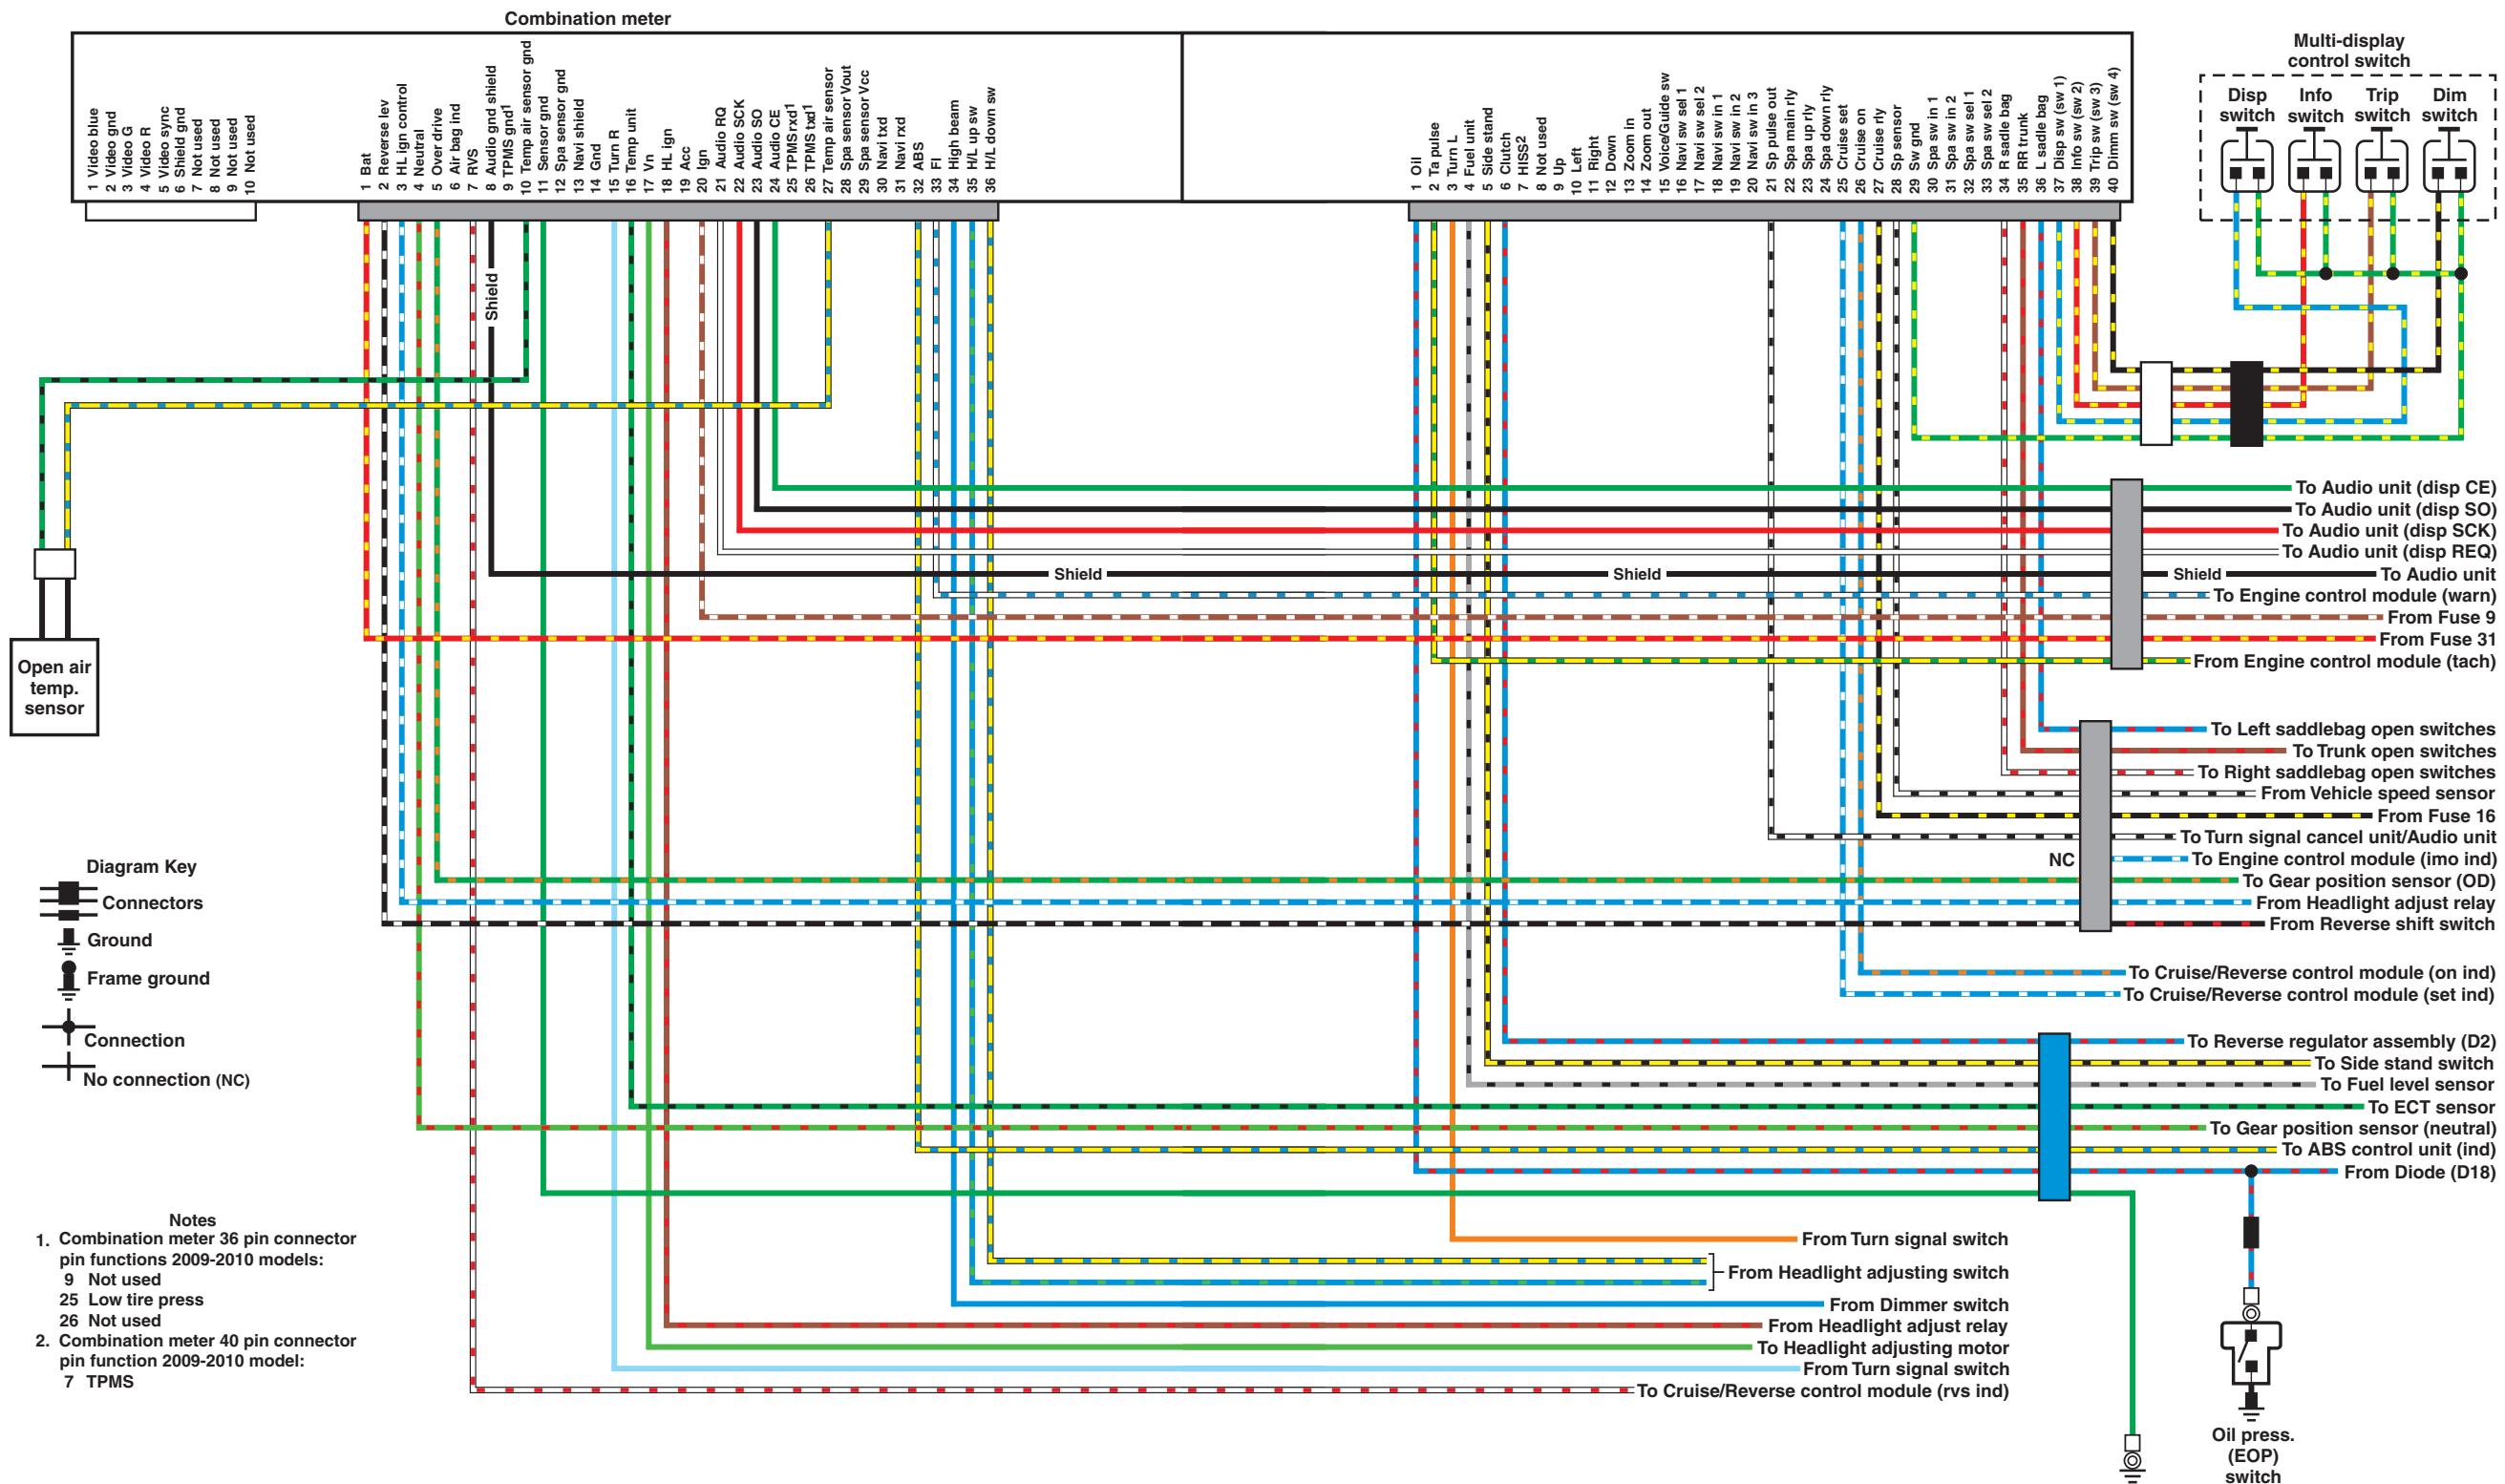


W-30

## CRUISE CONTROL SYSTEM (2001-2003 MODELS)

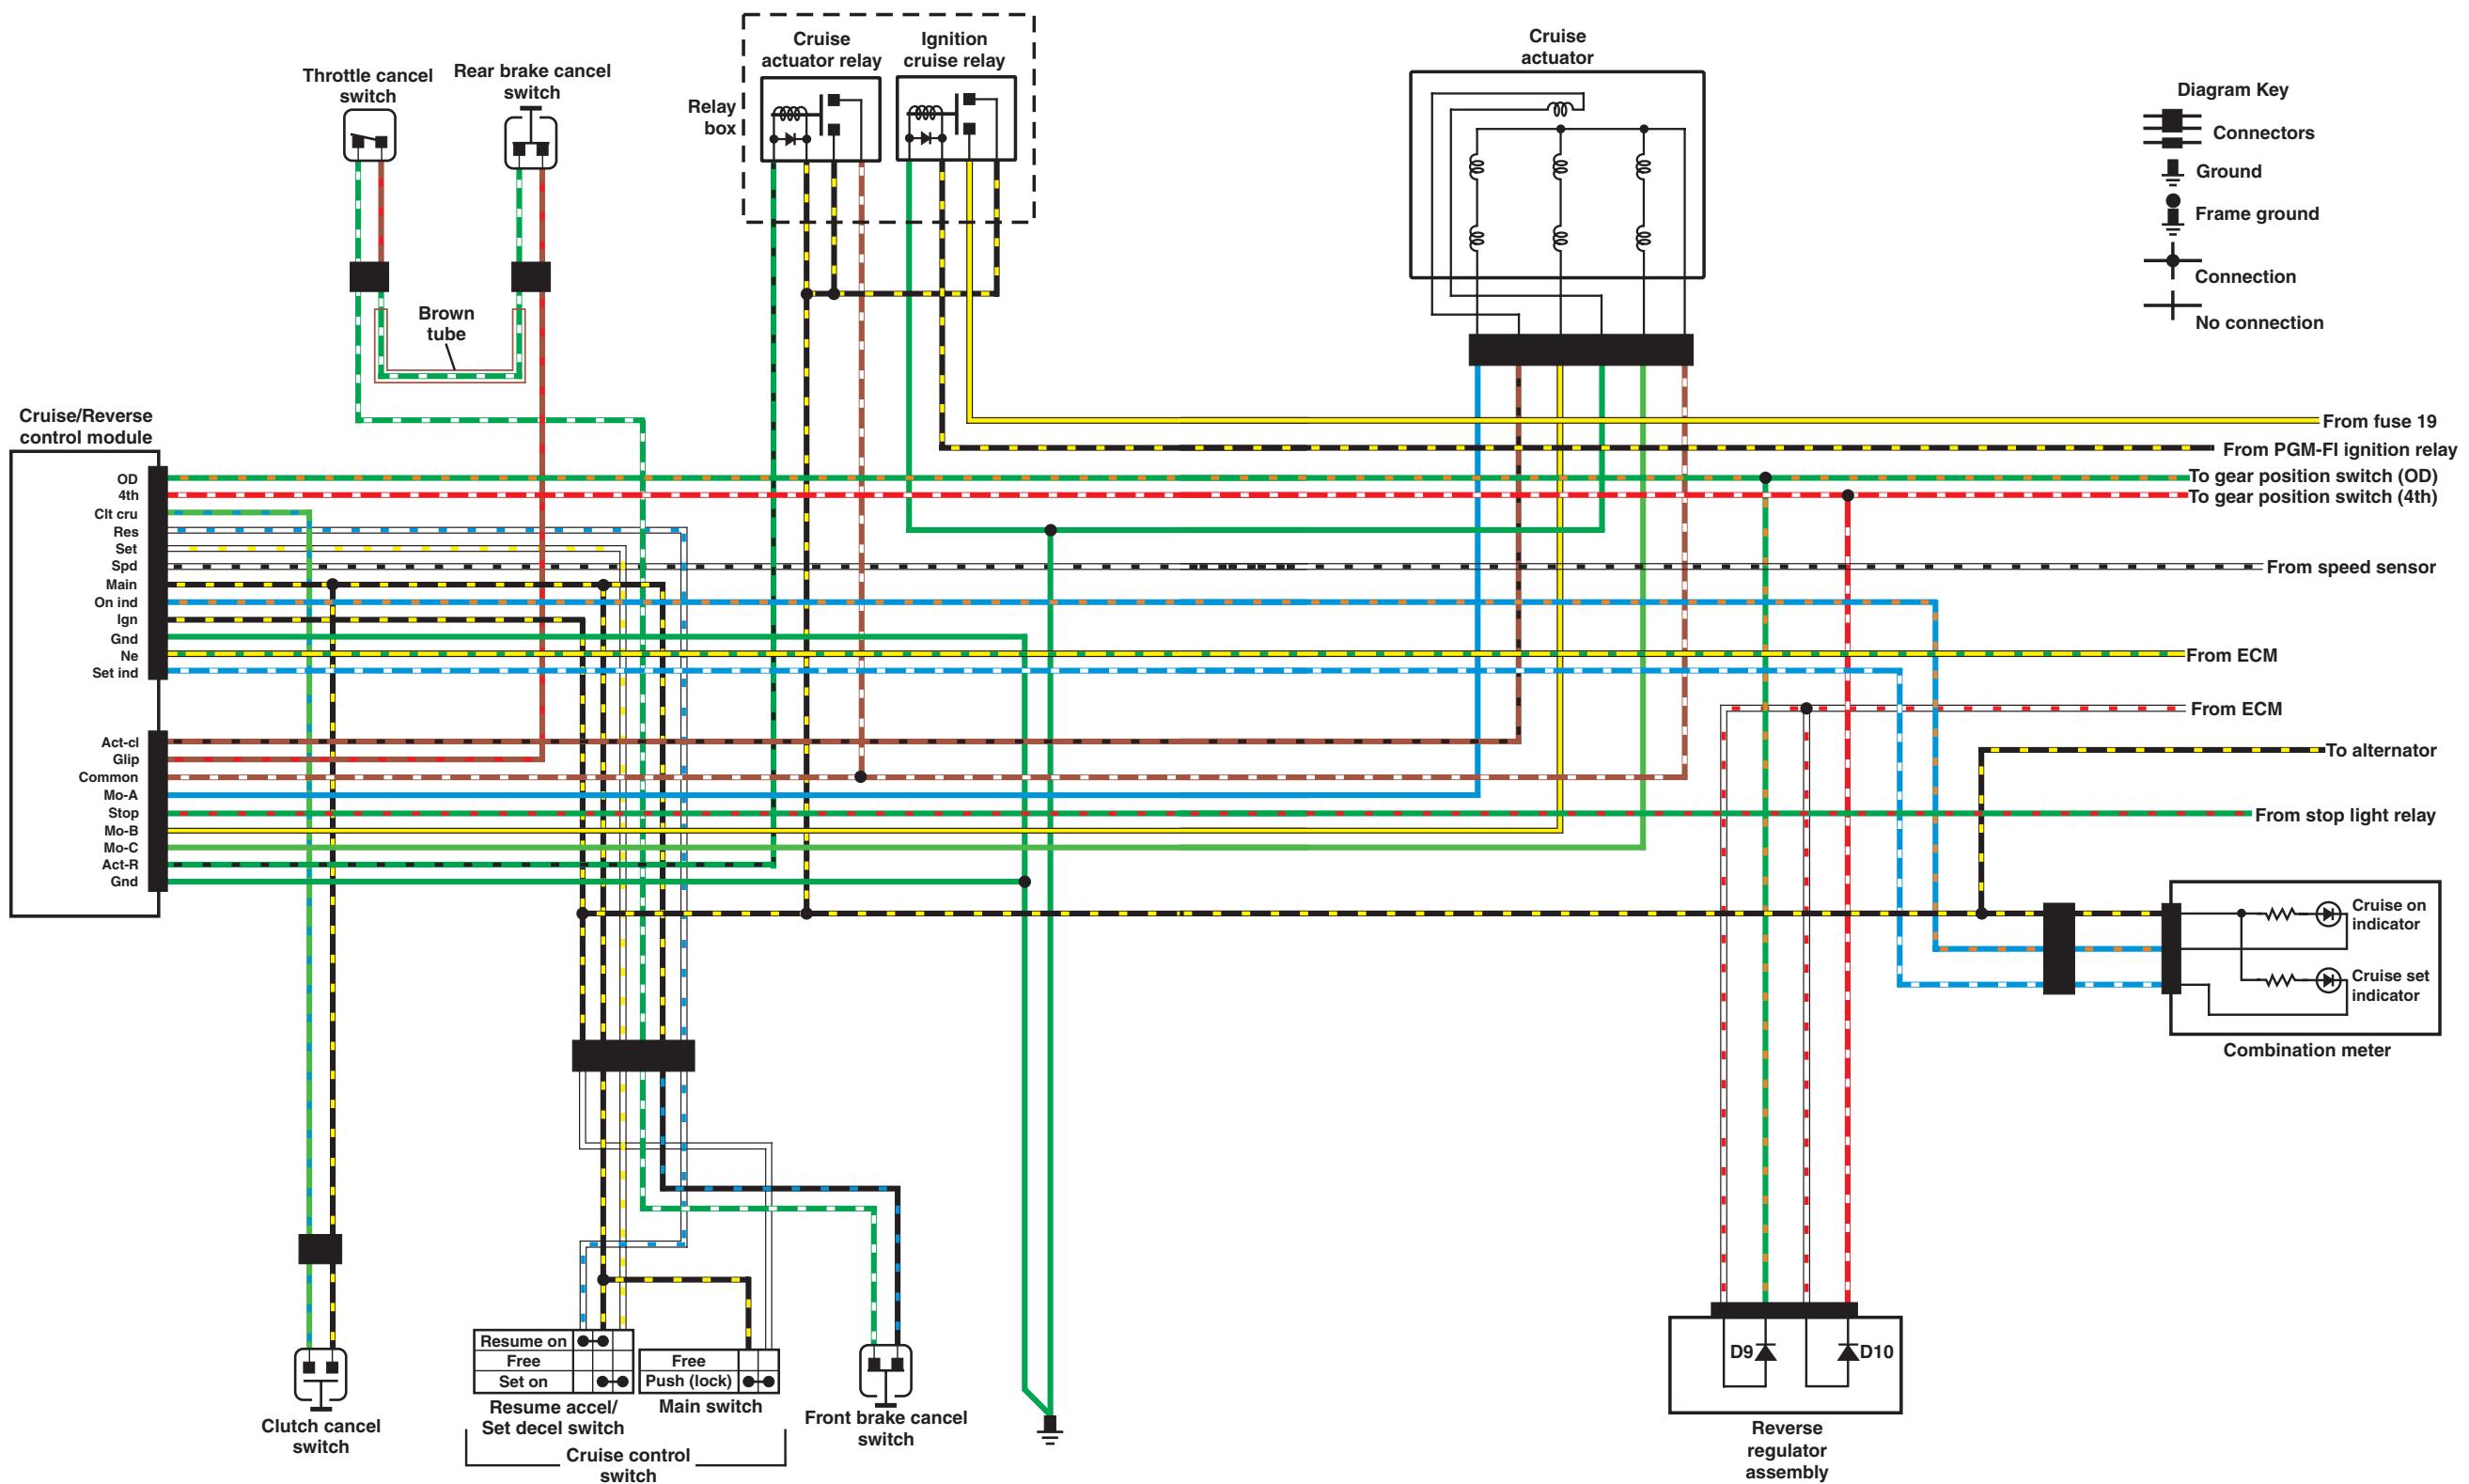


W-31


## CRUISE CONTROL SYSTEM (2004-2005 MODELS)

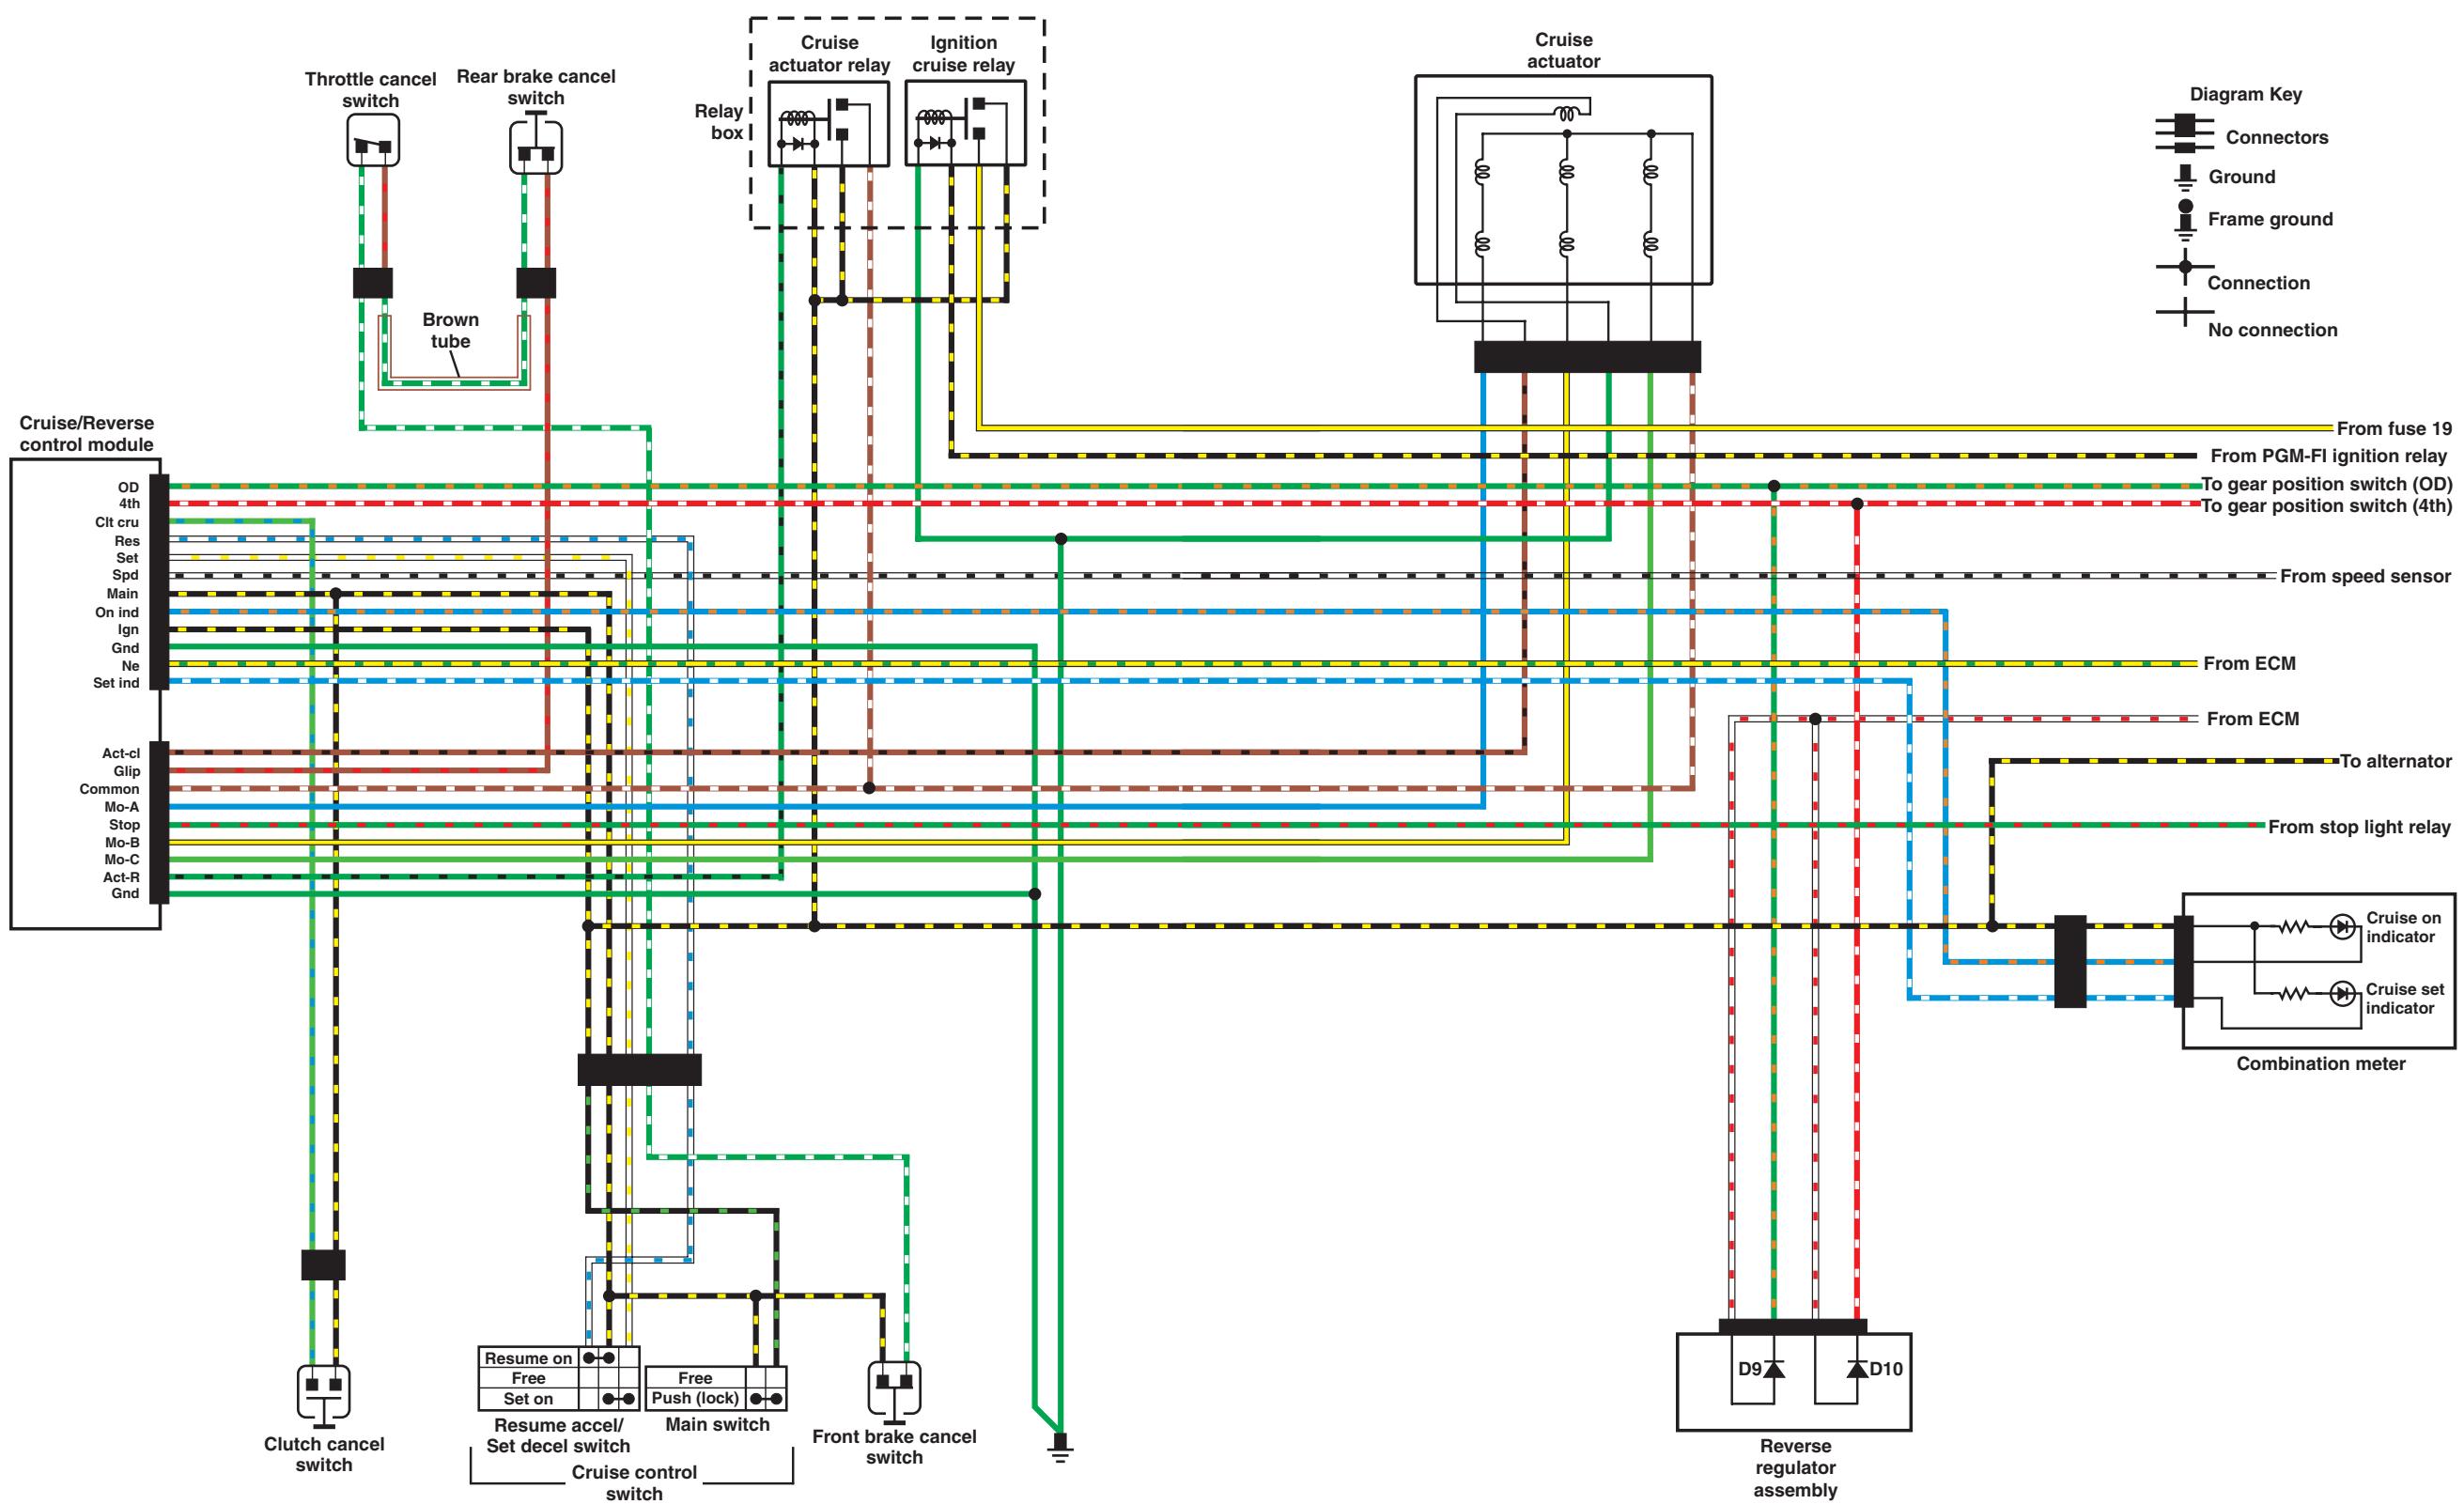


## CRUISE CONTROL SYSTEM (2006-2010 NON-AIRBAG MODELS)

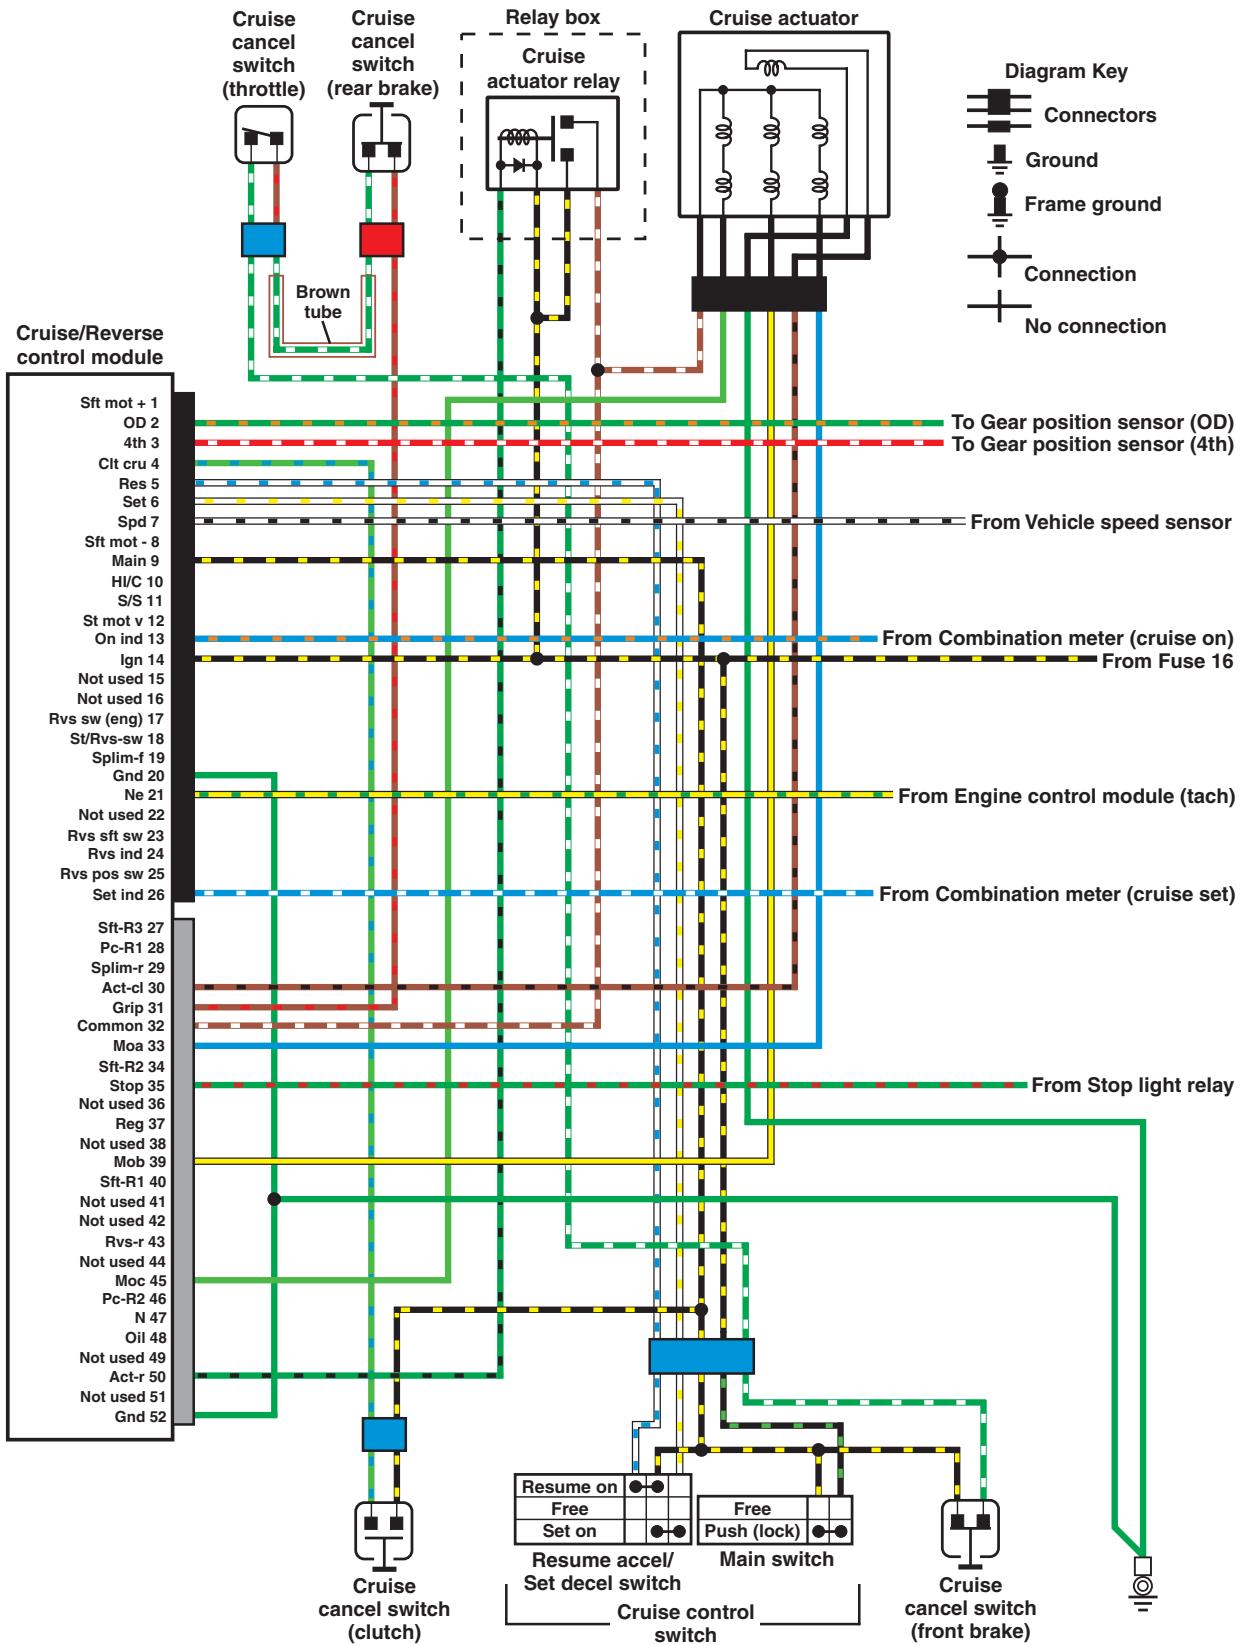


## CRUISE CONTROL SYSTEM (2006-2010 AIRBAG MODELS)

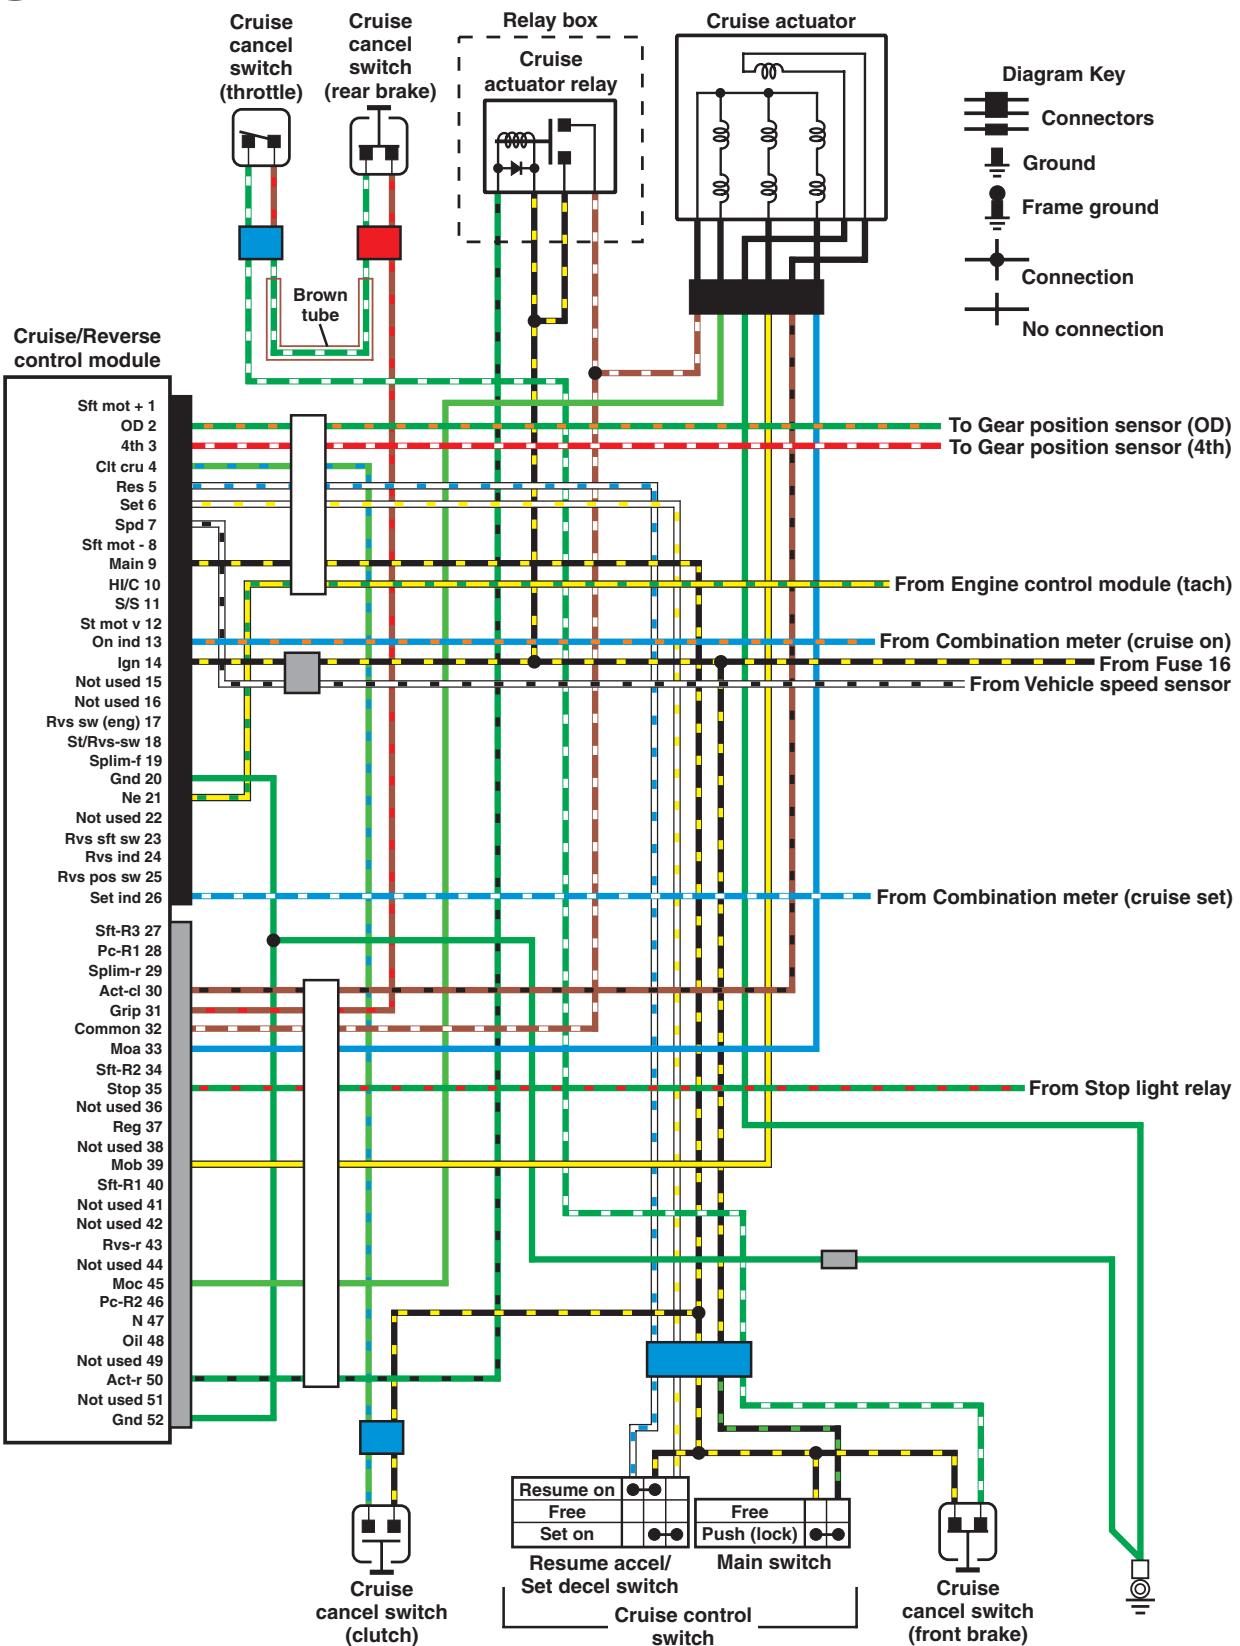


## ACCESSORY AND TRUNK LOCK CONTROL SYSTEMS (2001-2002 MODELS)

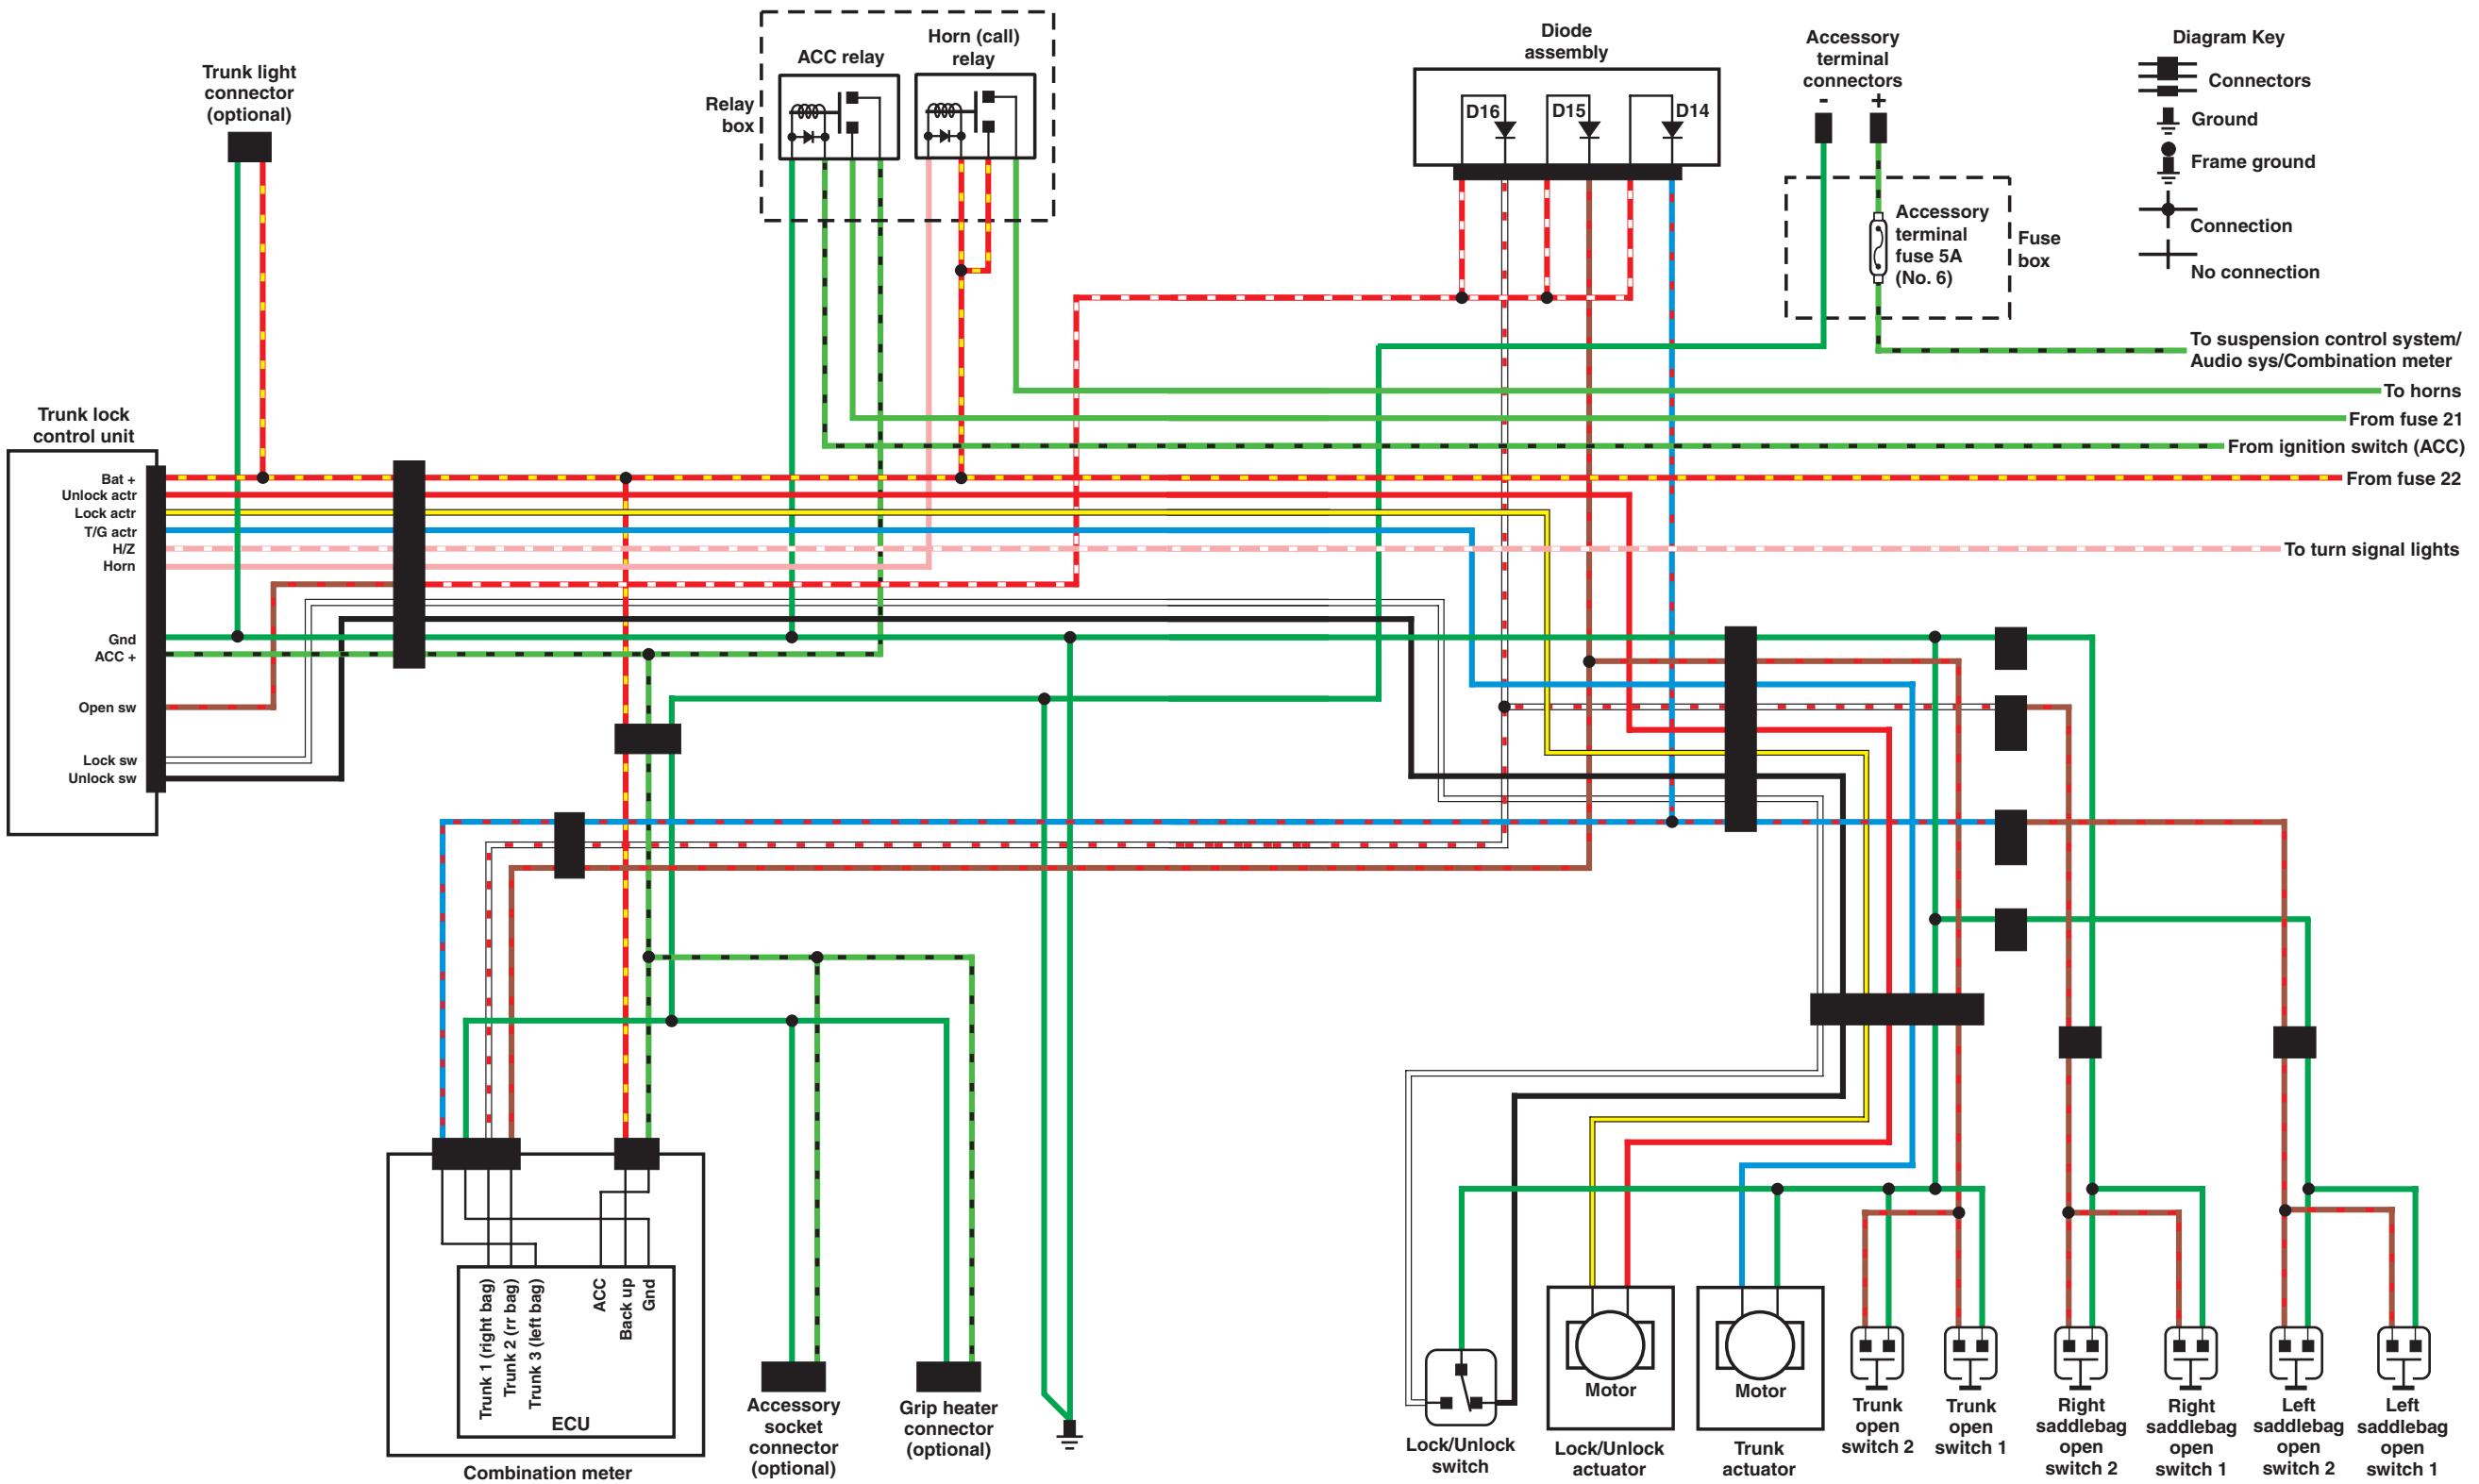

## ACCESSORY AND TRUNK LOCK CONTROL SYSTEMS (2003-2005 MODELS)

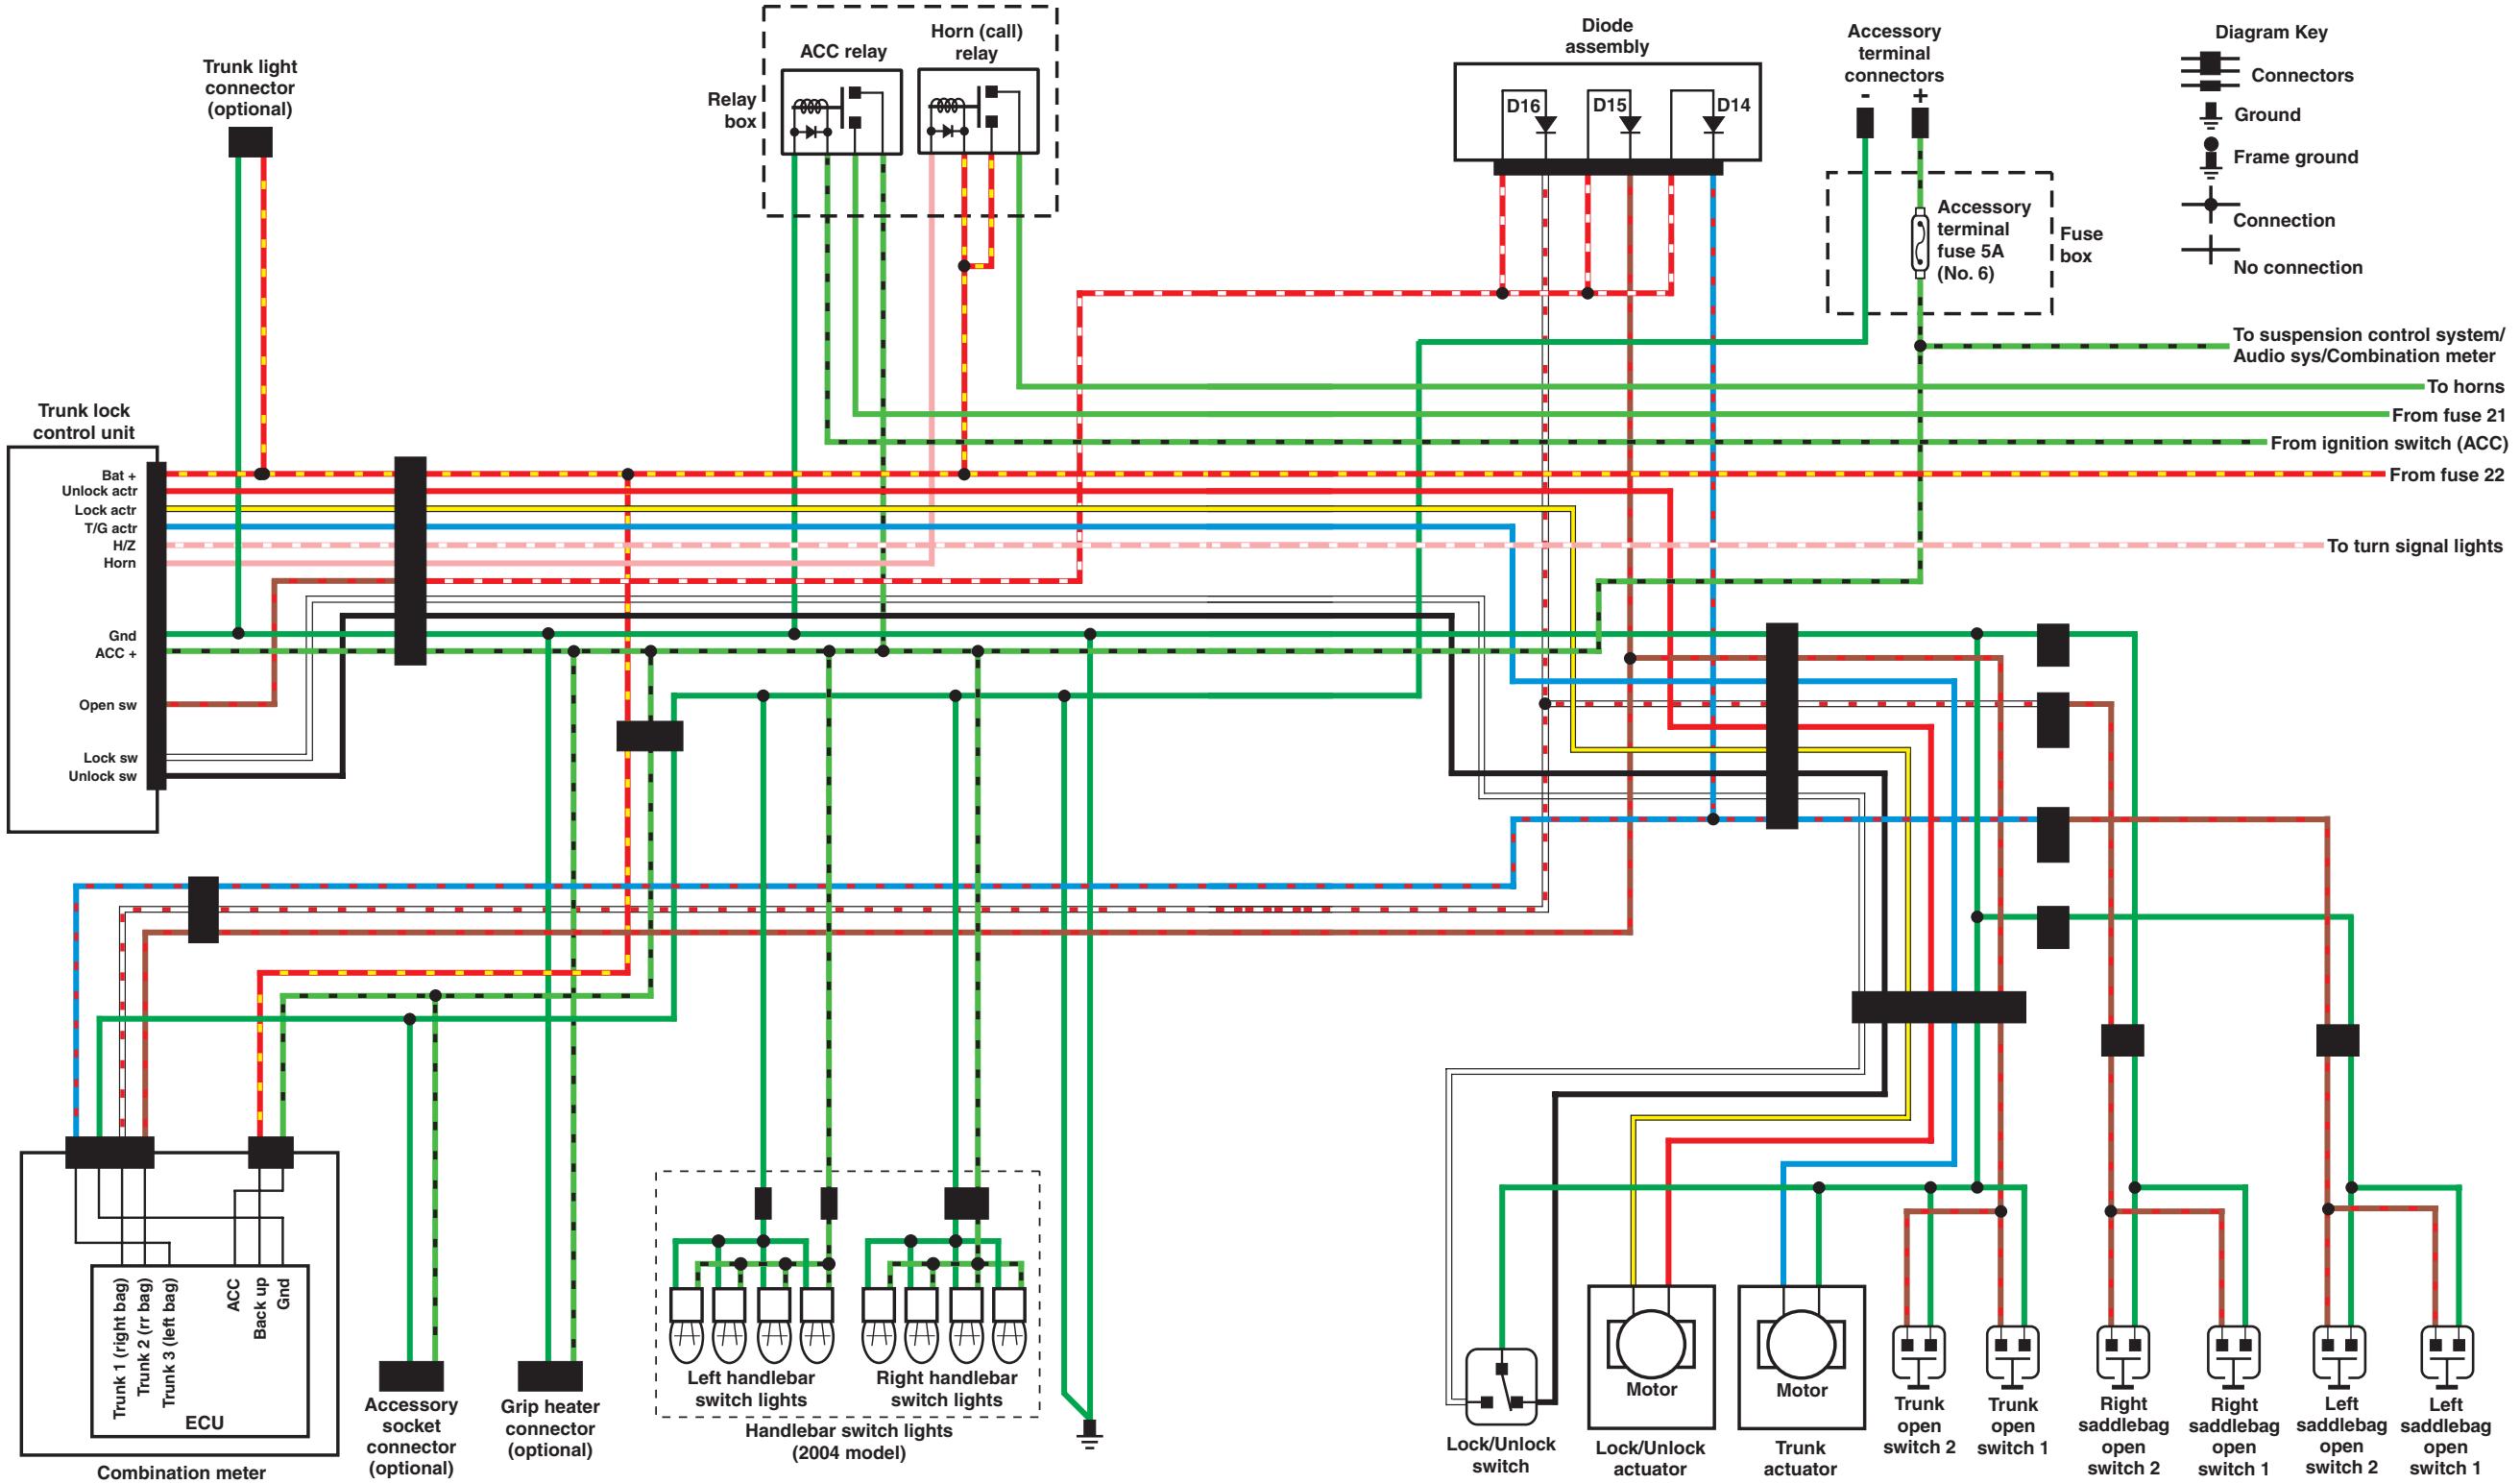


## ACCESSORY AND TRUNK LOCK CONTROL SYSTEMS (2006-2010 MODELS)

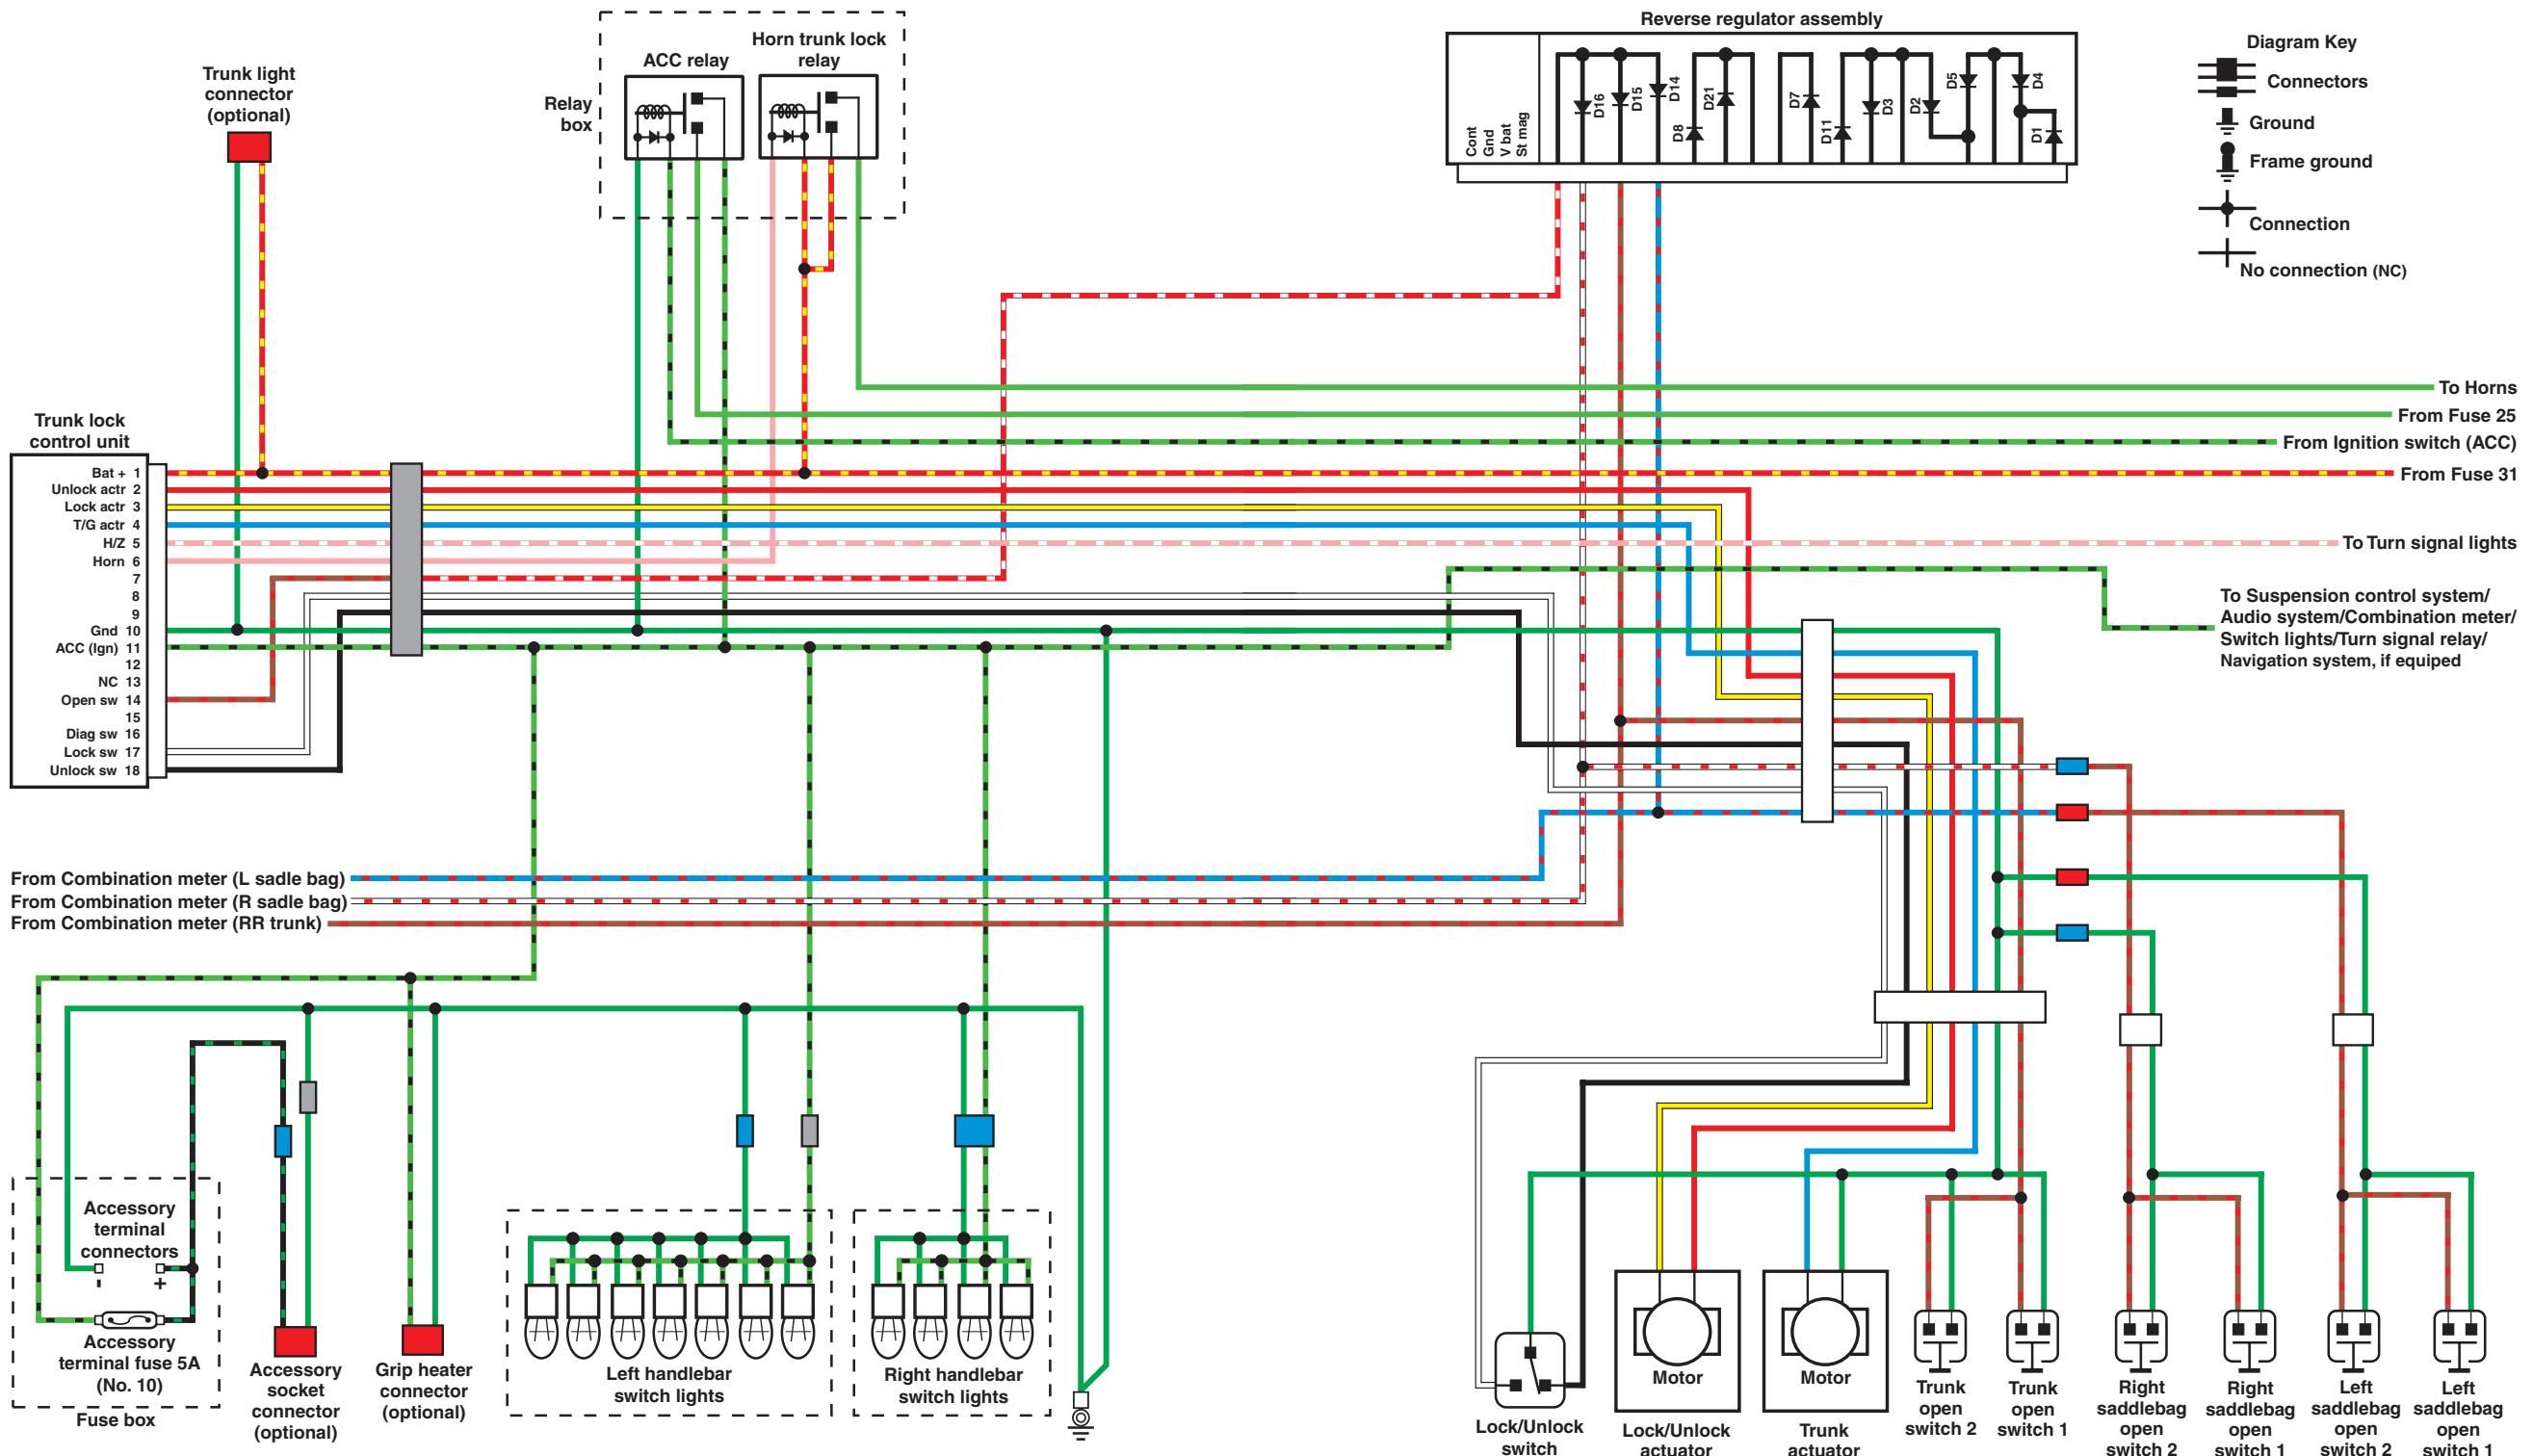


W-37

## AUDIO SYSTEM (2001-2002 MODELS)

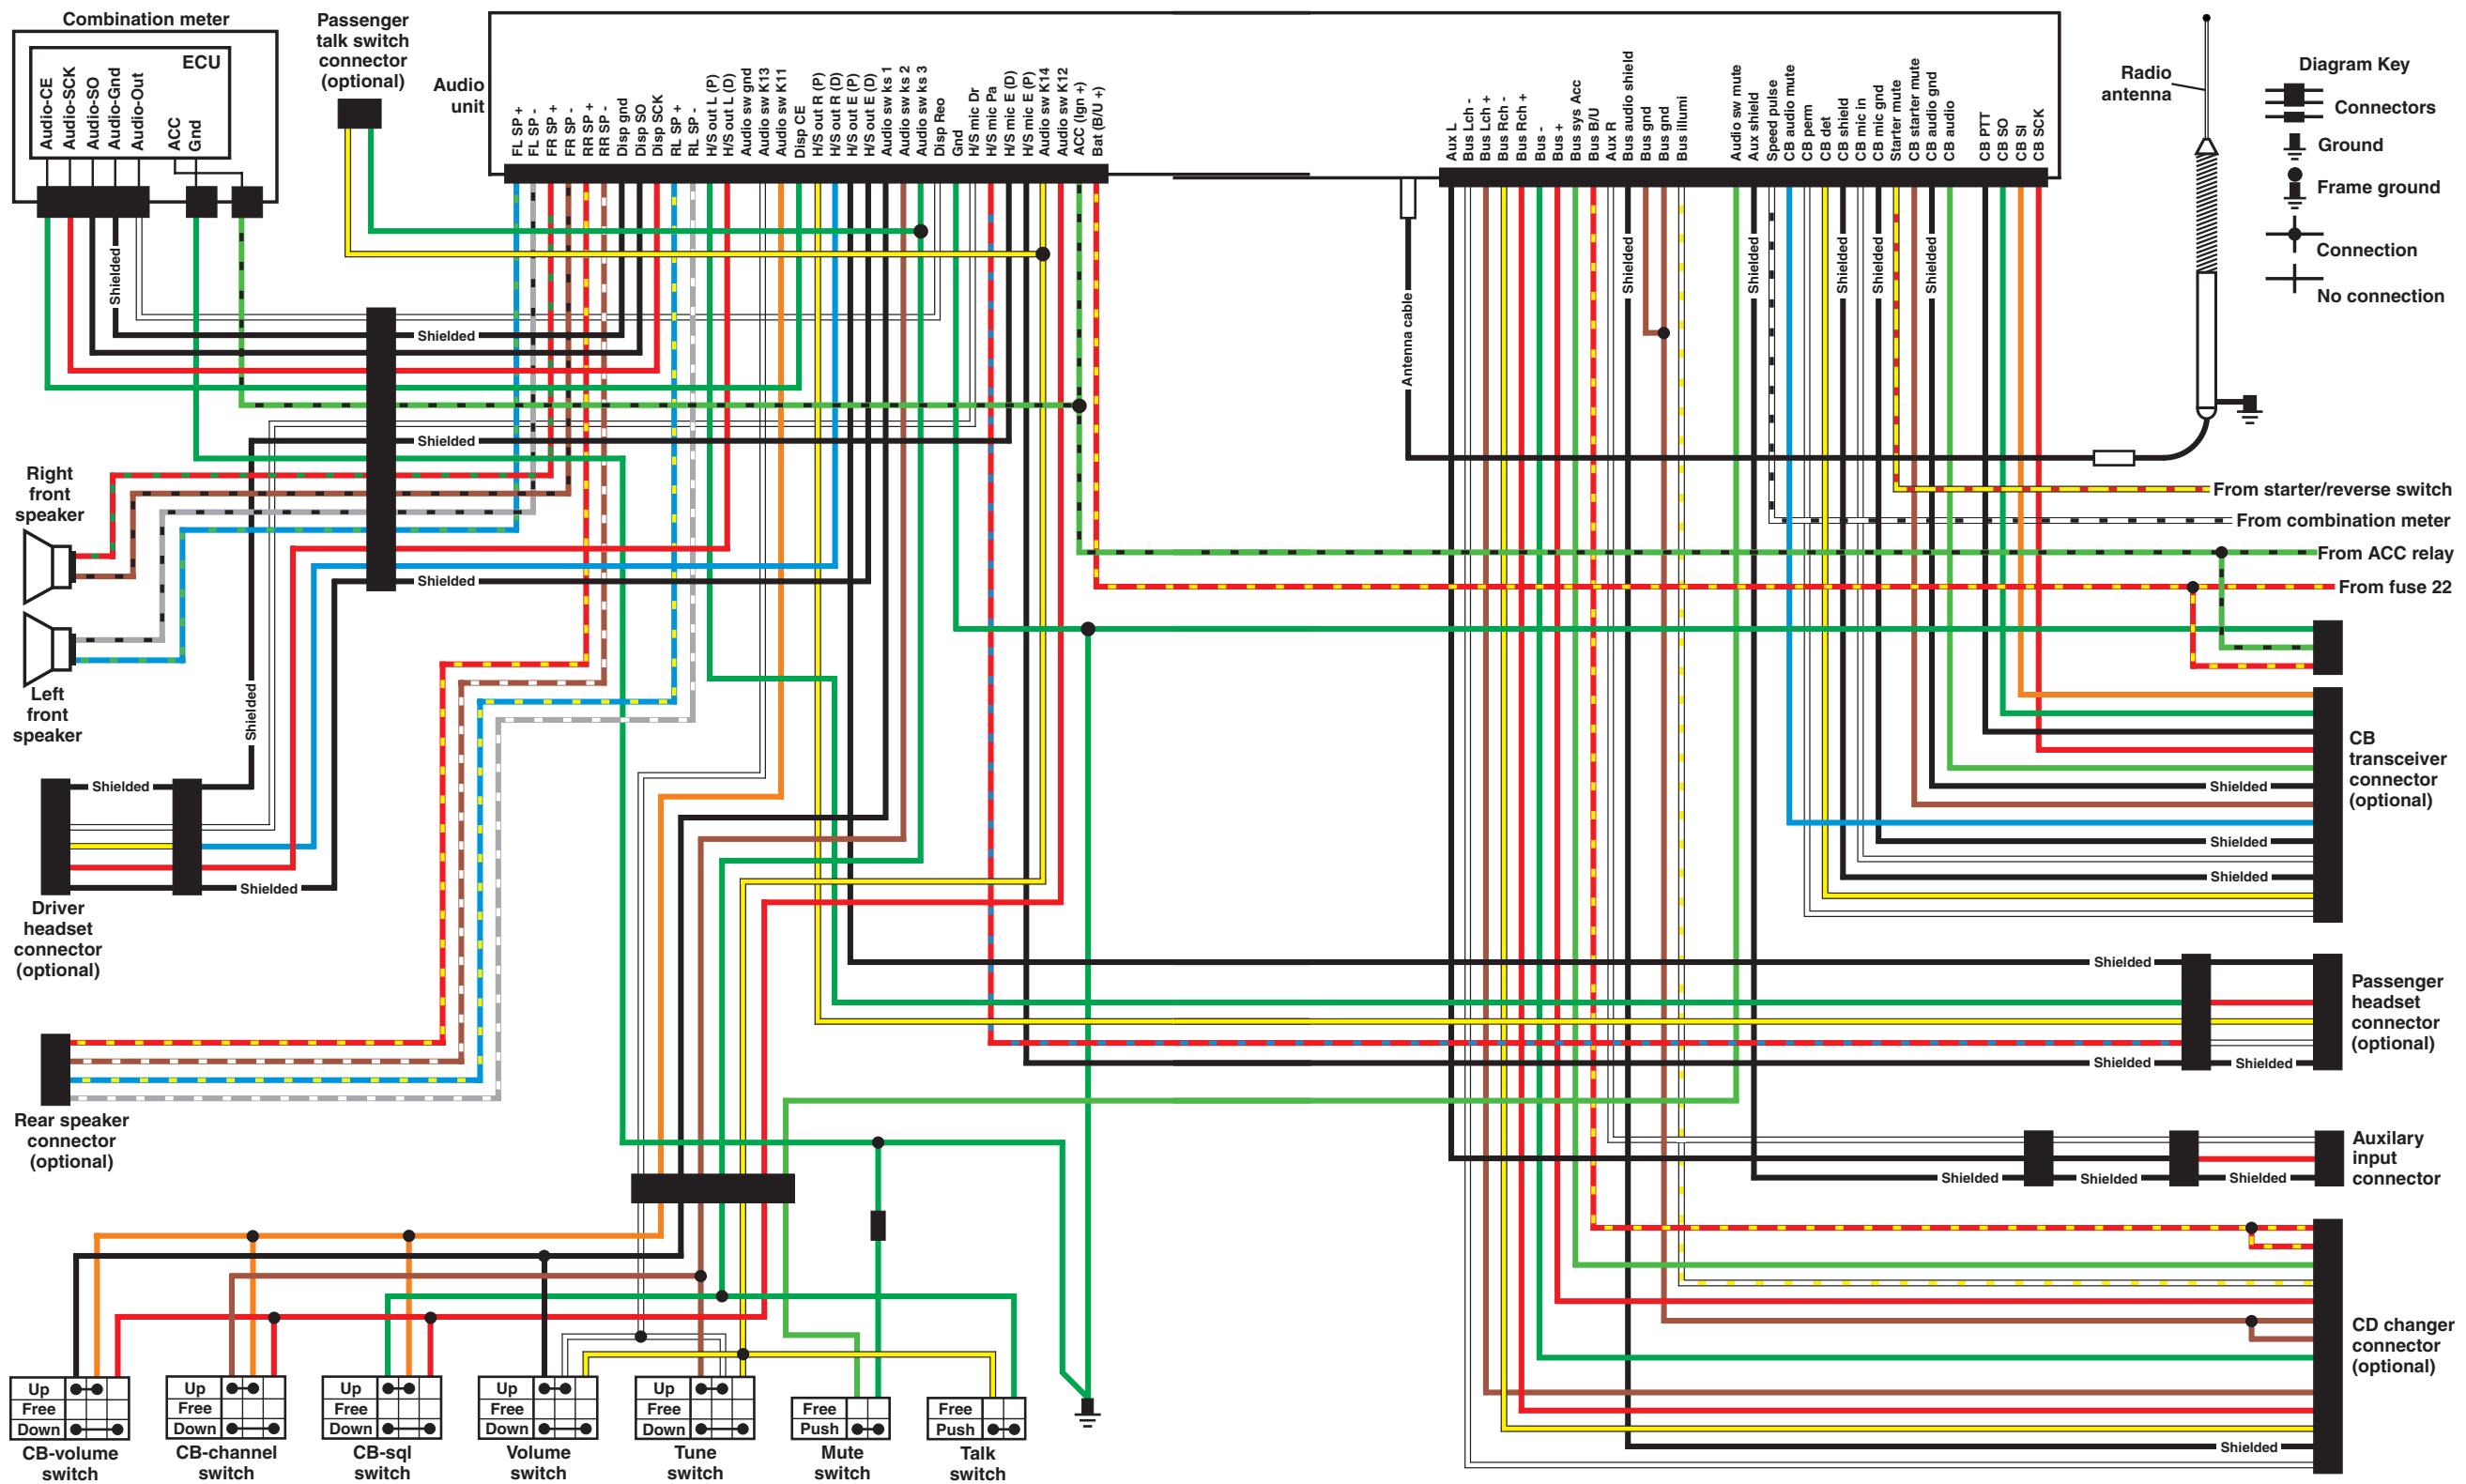


W-38

## AUDIO SYSTEM (2003 MODELS)

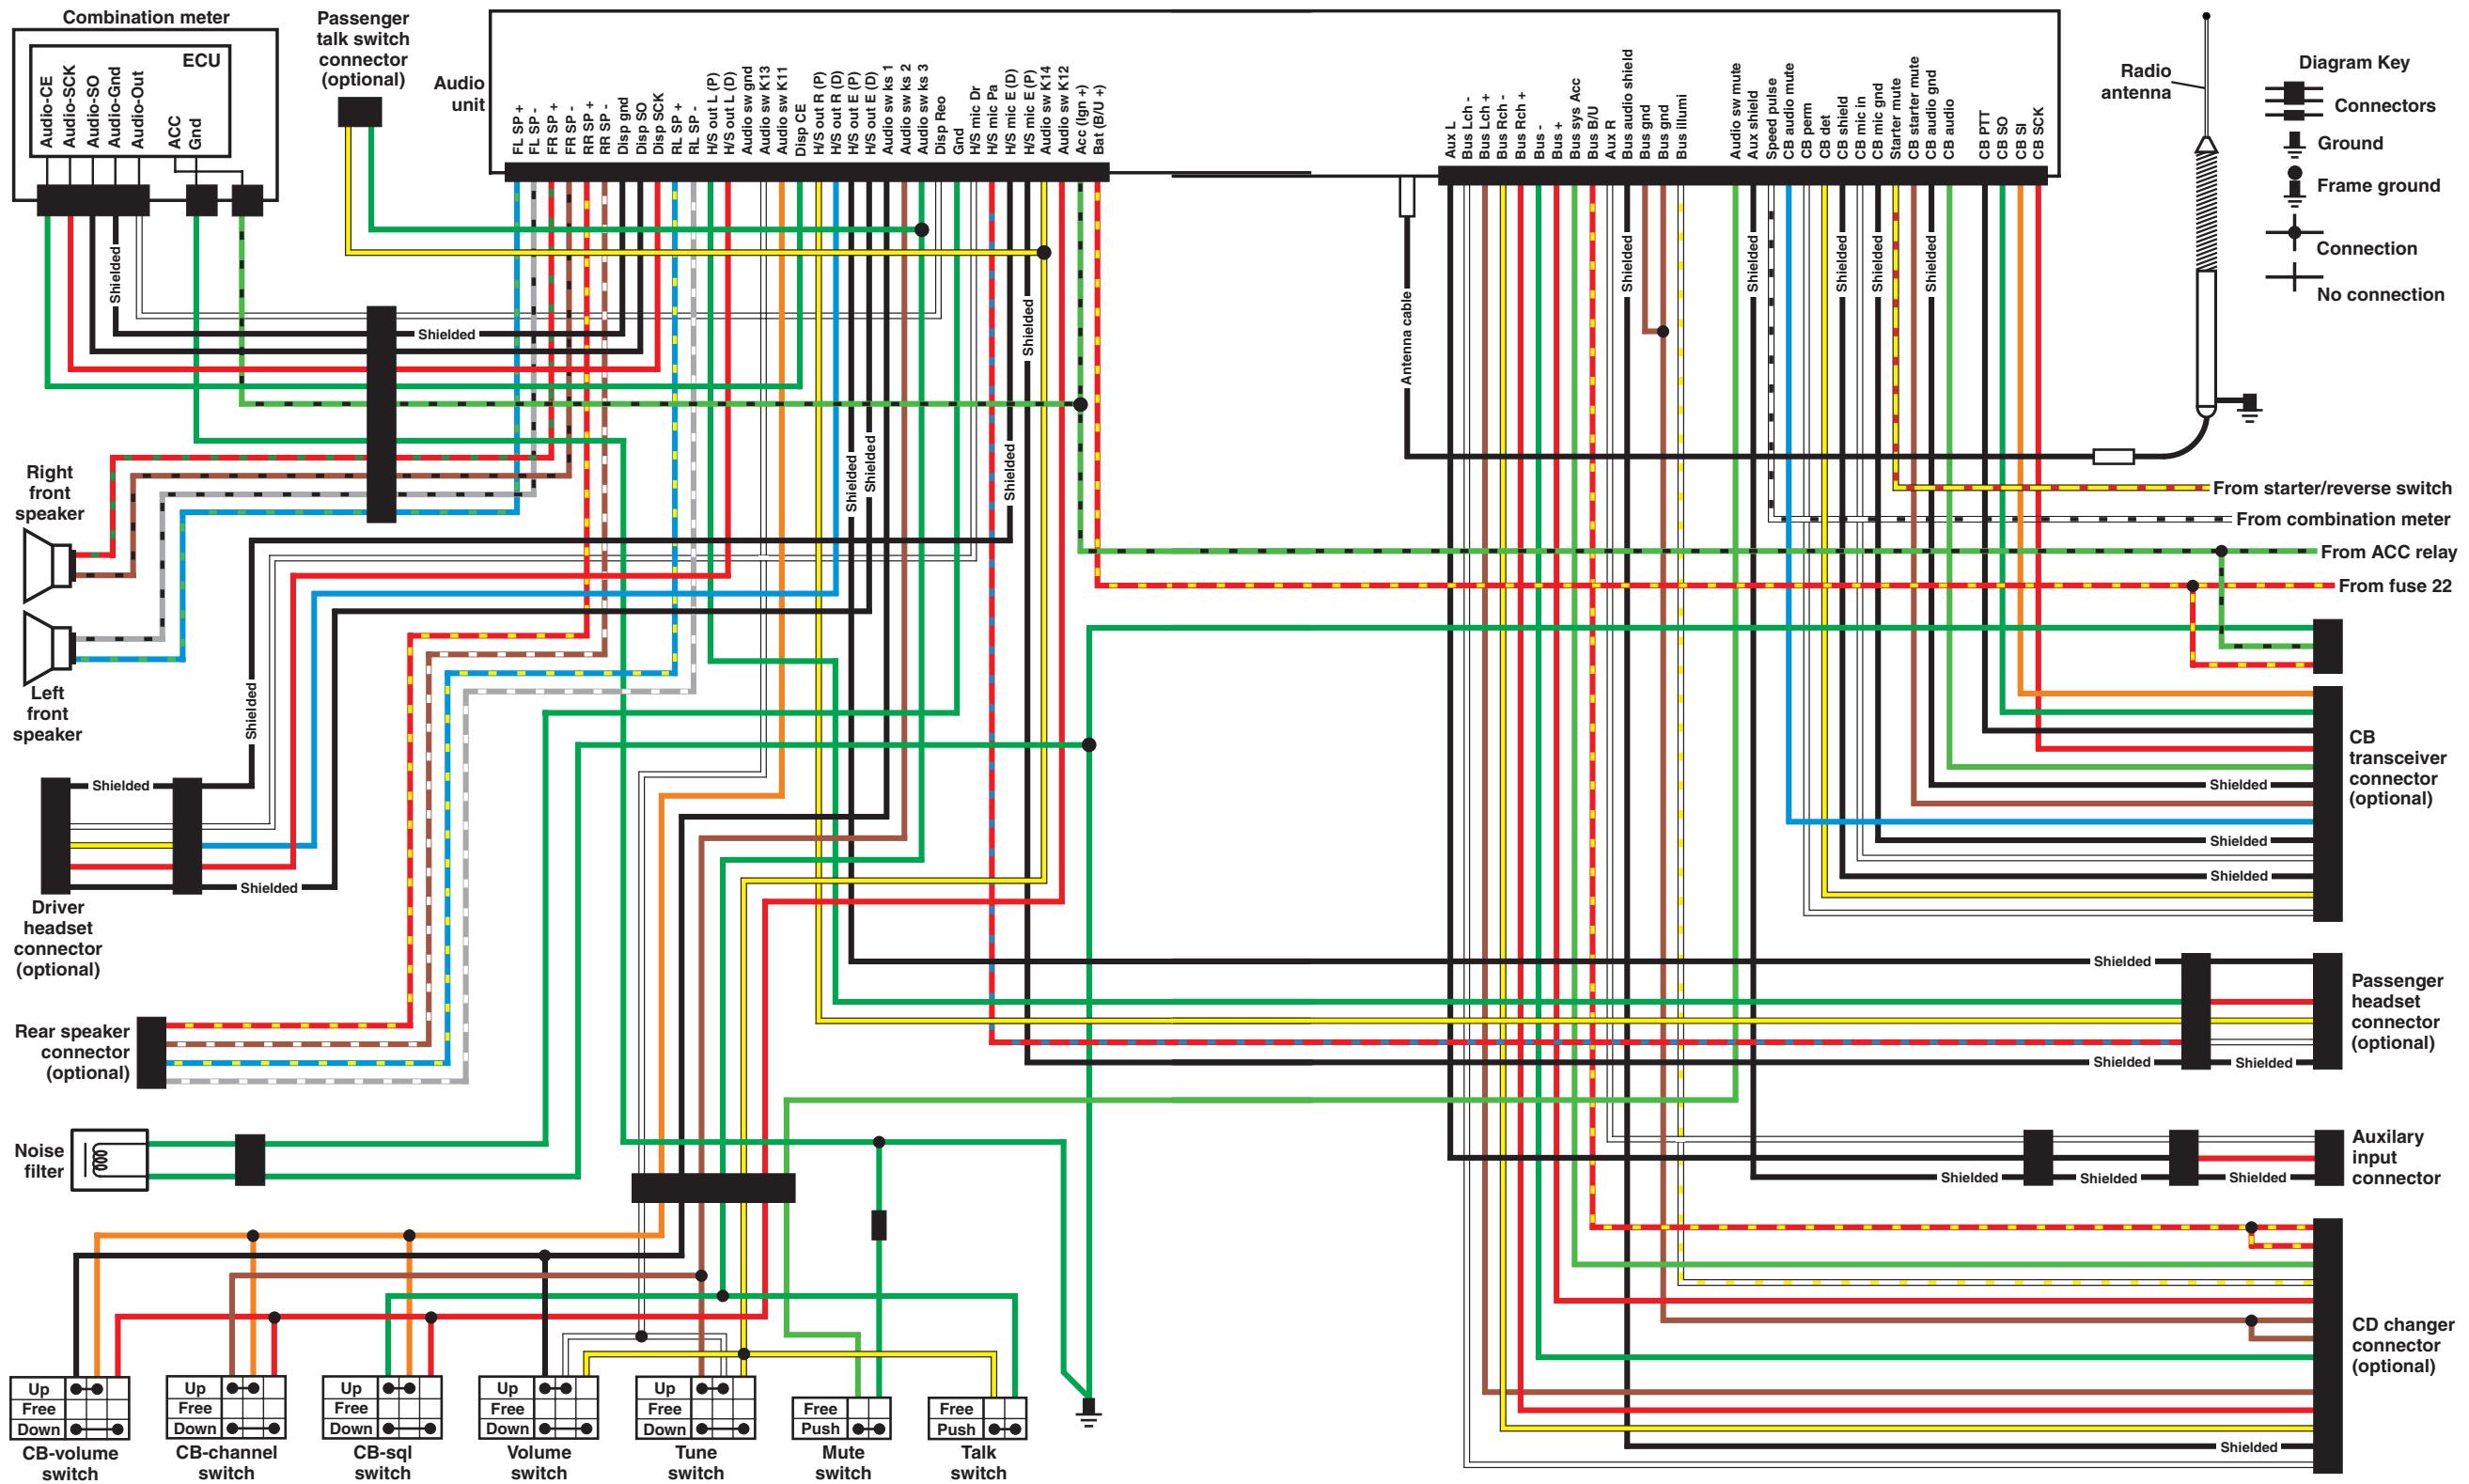


(W-39)

#### **AUDIO SYSTEM (2004-2005 MODELS)**

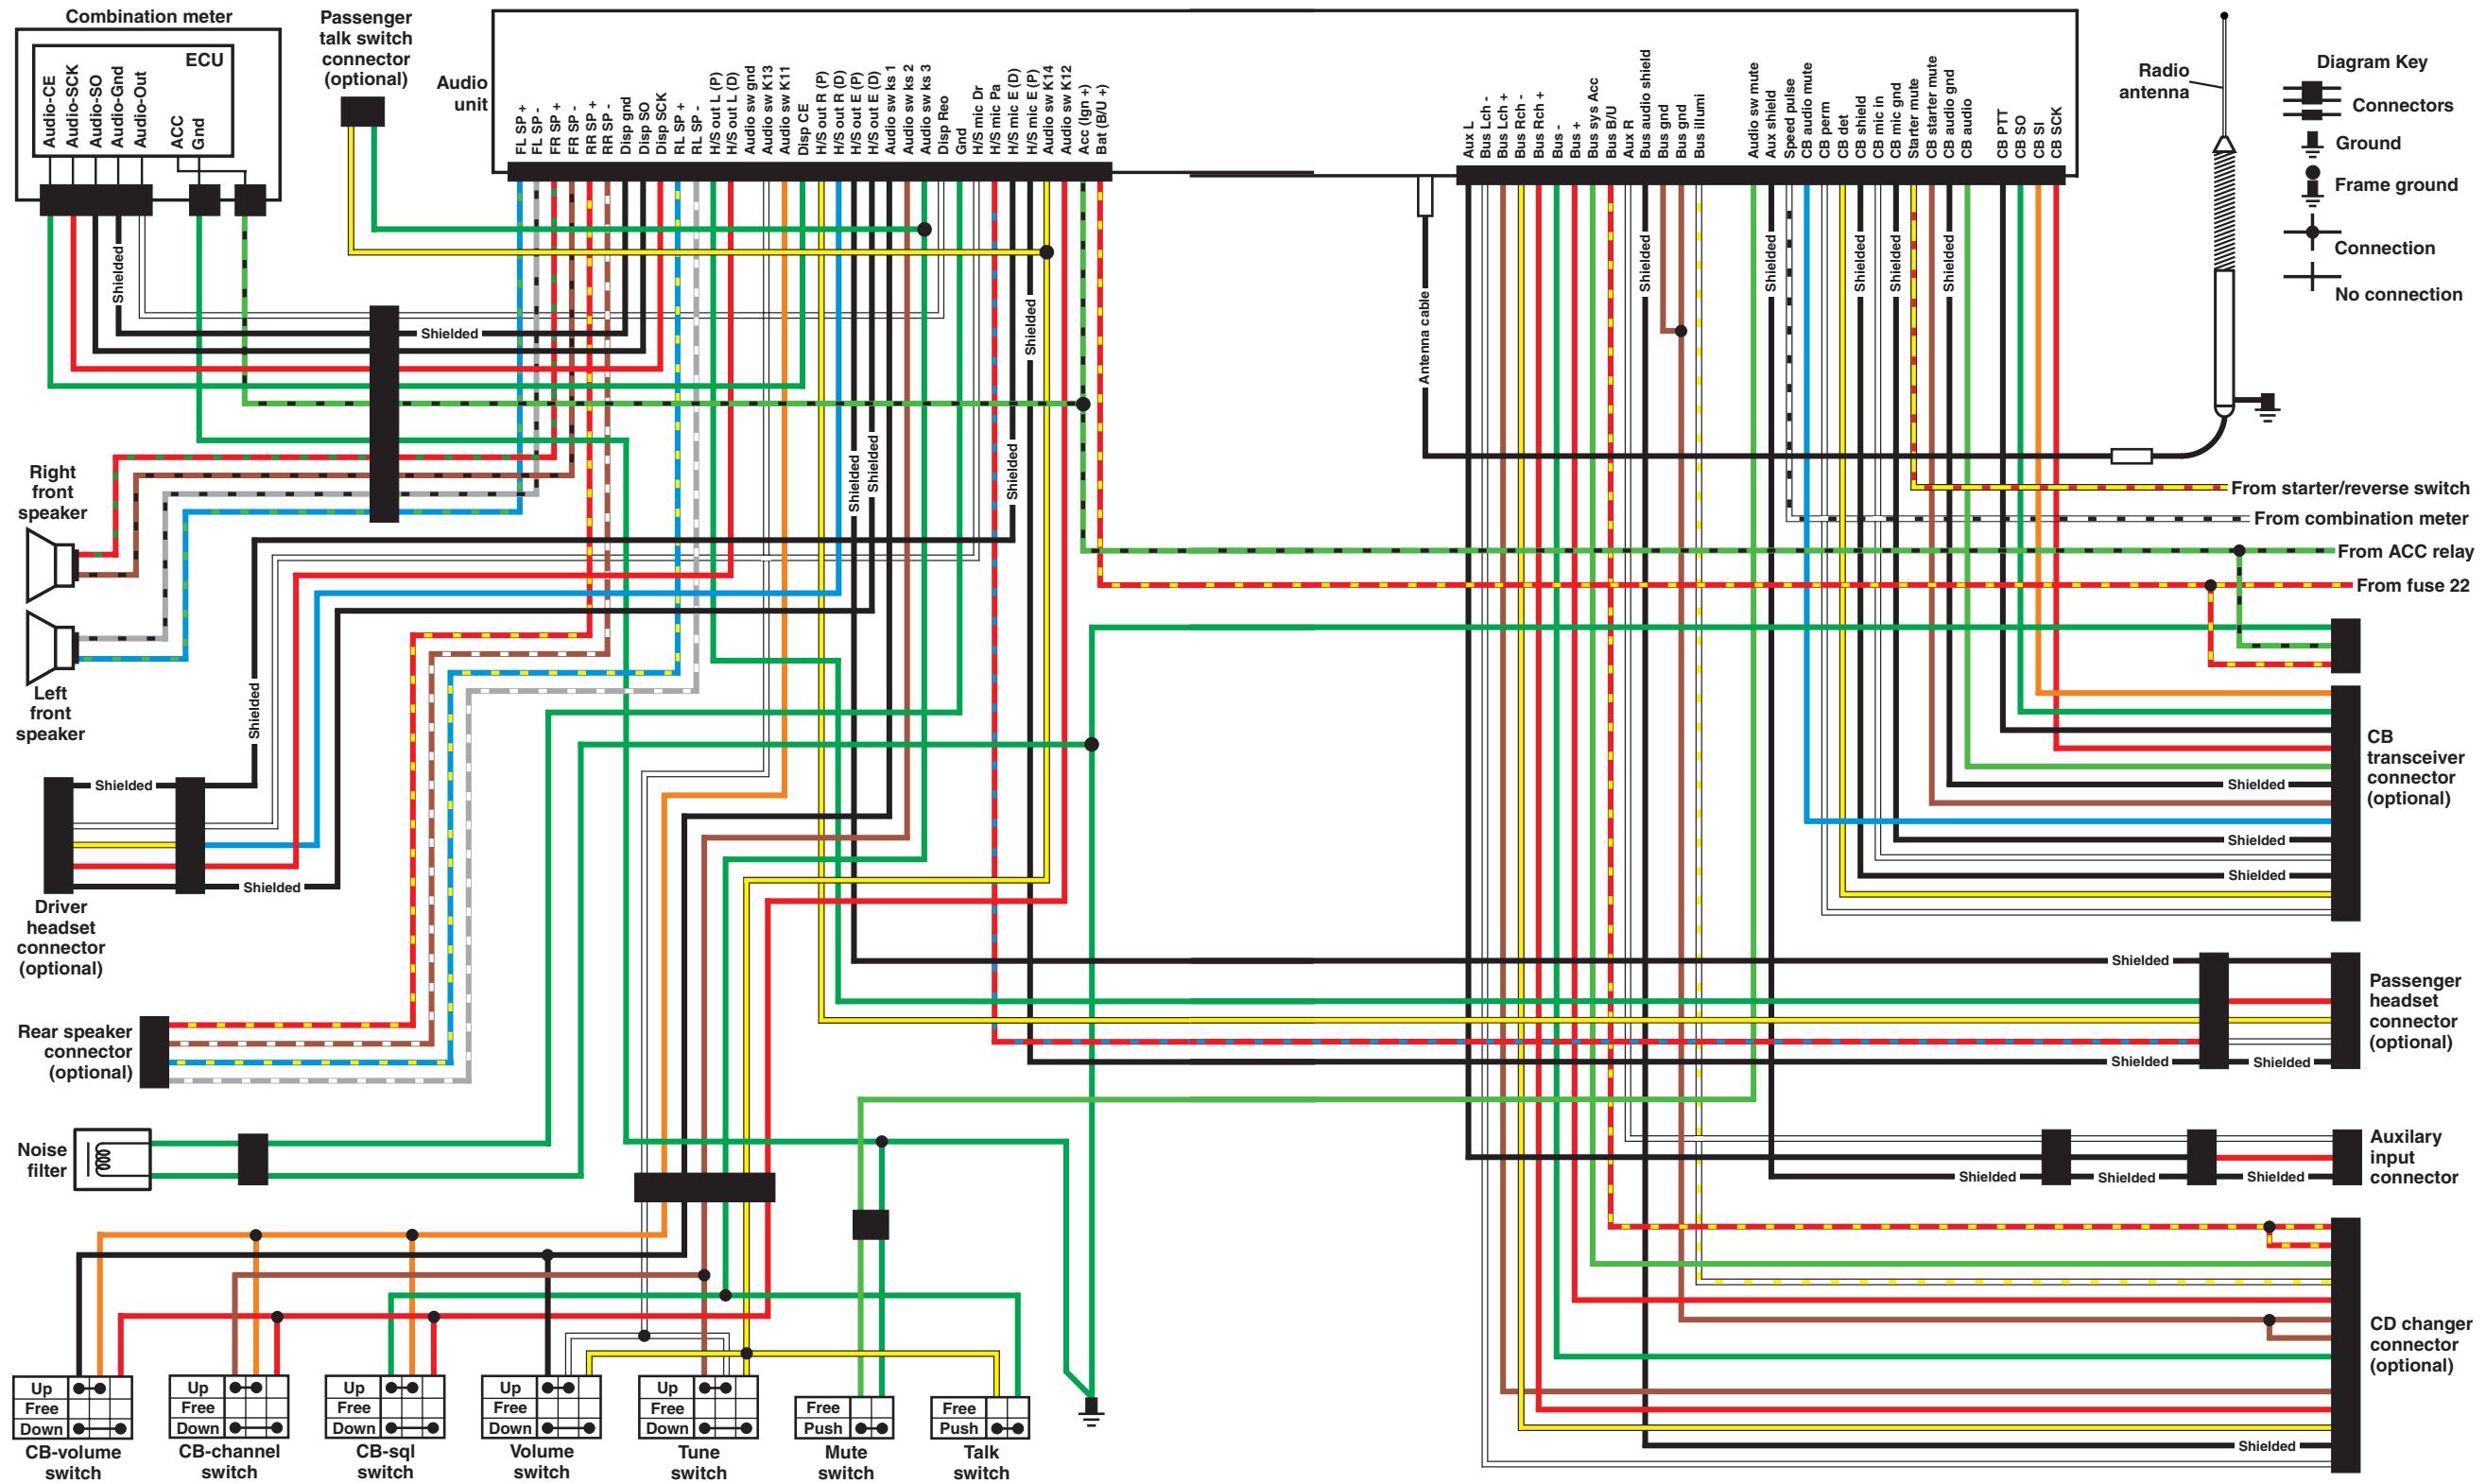


**W-40**

### AUDIO SYSTEM (2006-2008 1A MODELS)

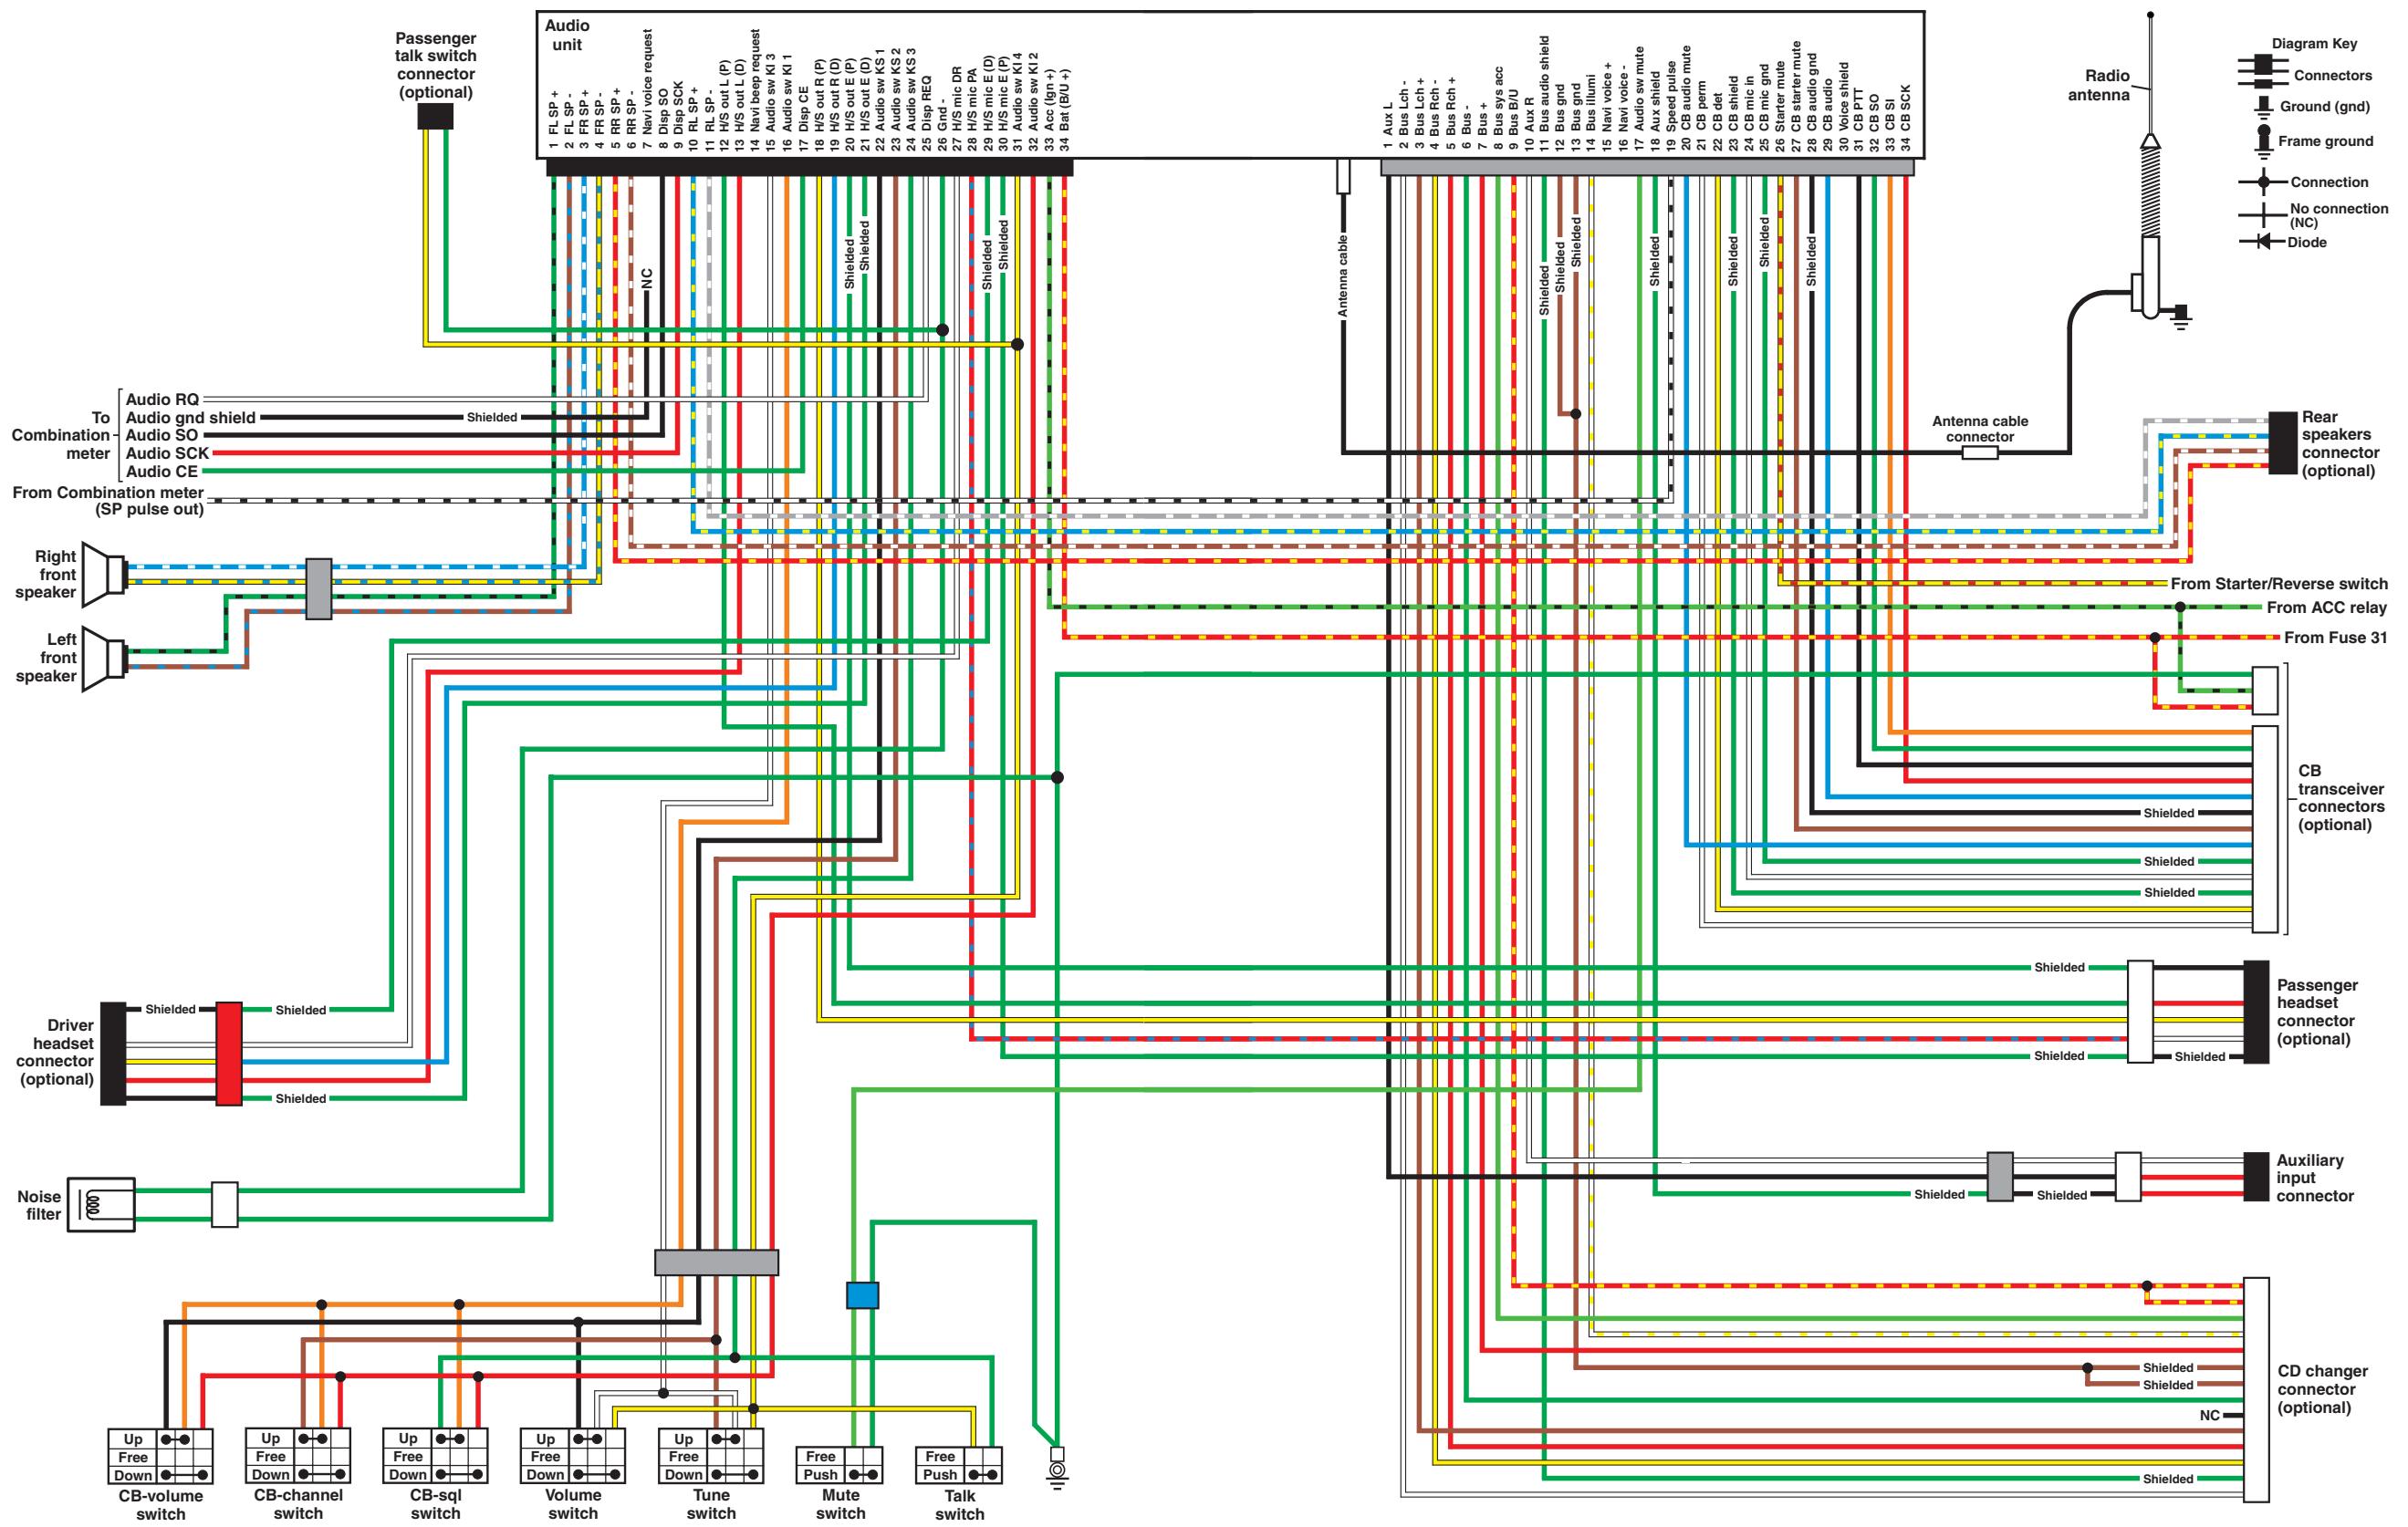


W-41

## AUDIO SYSTEM (2006-2008 1B, 1C, 1D, 1E, 1F AND 2009-2010 2A, 2B, 2C, 2E MODELS)

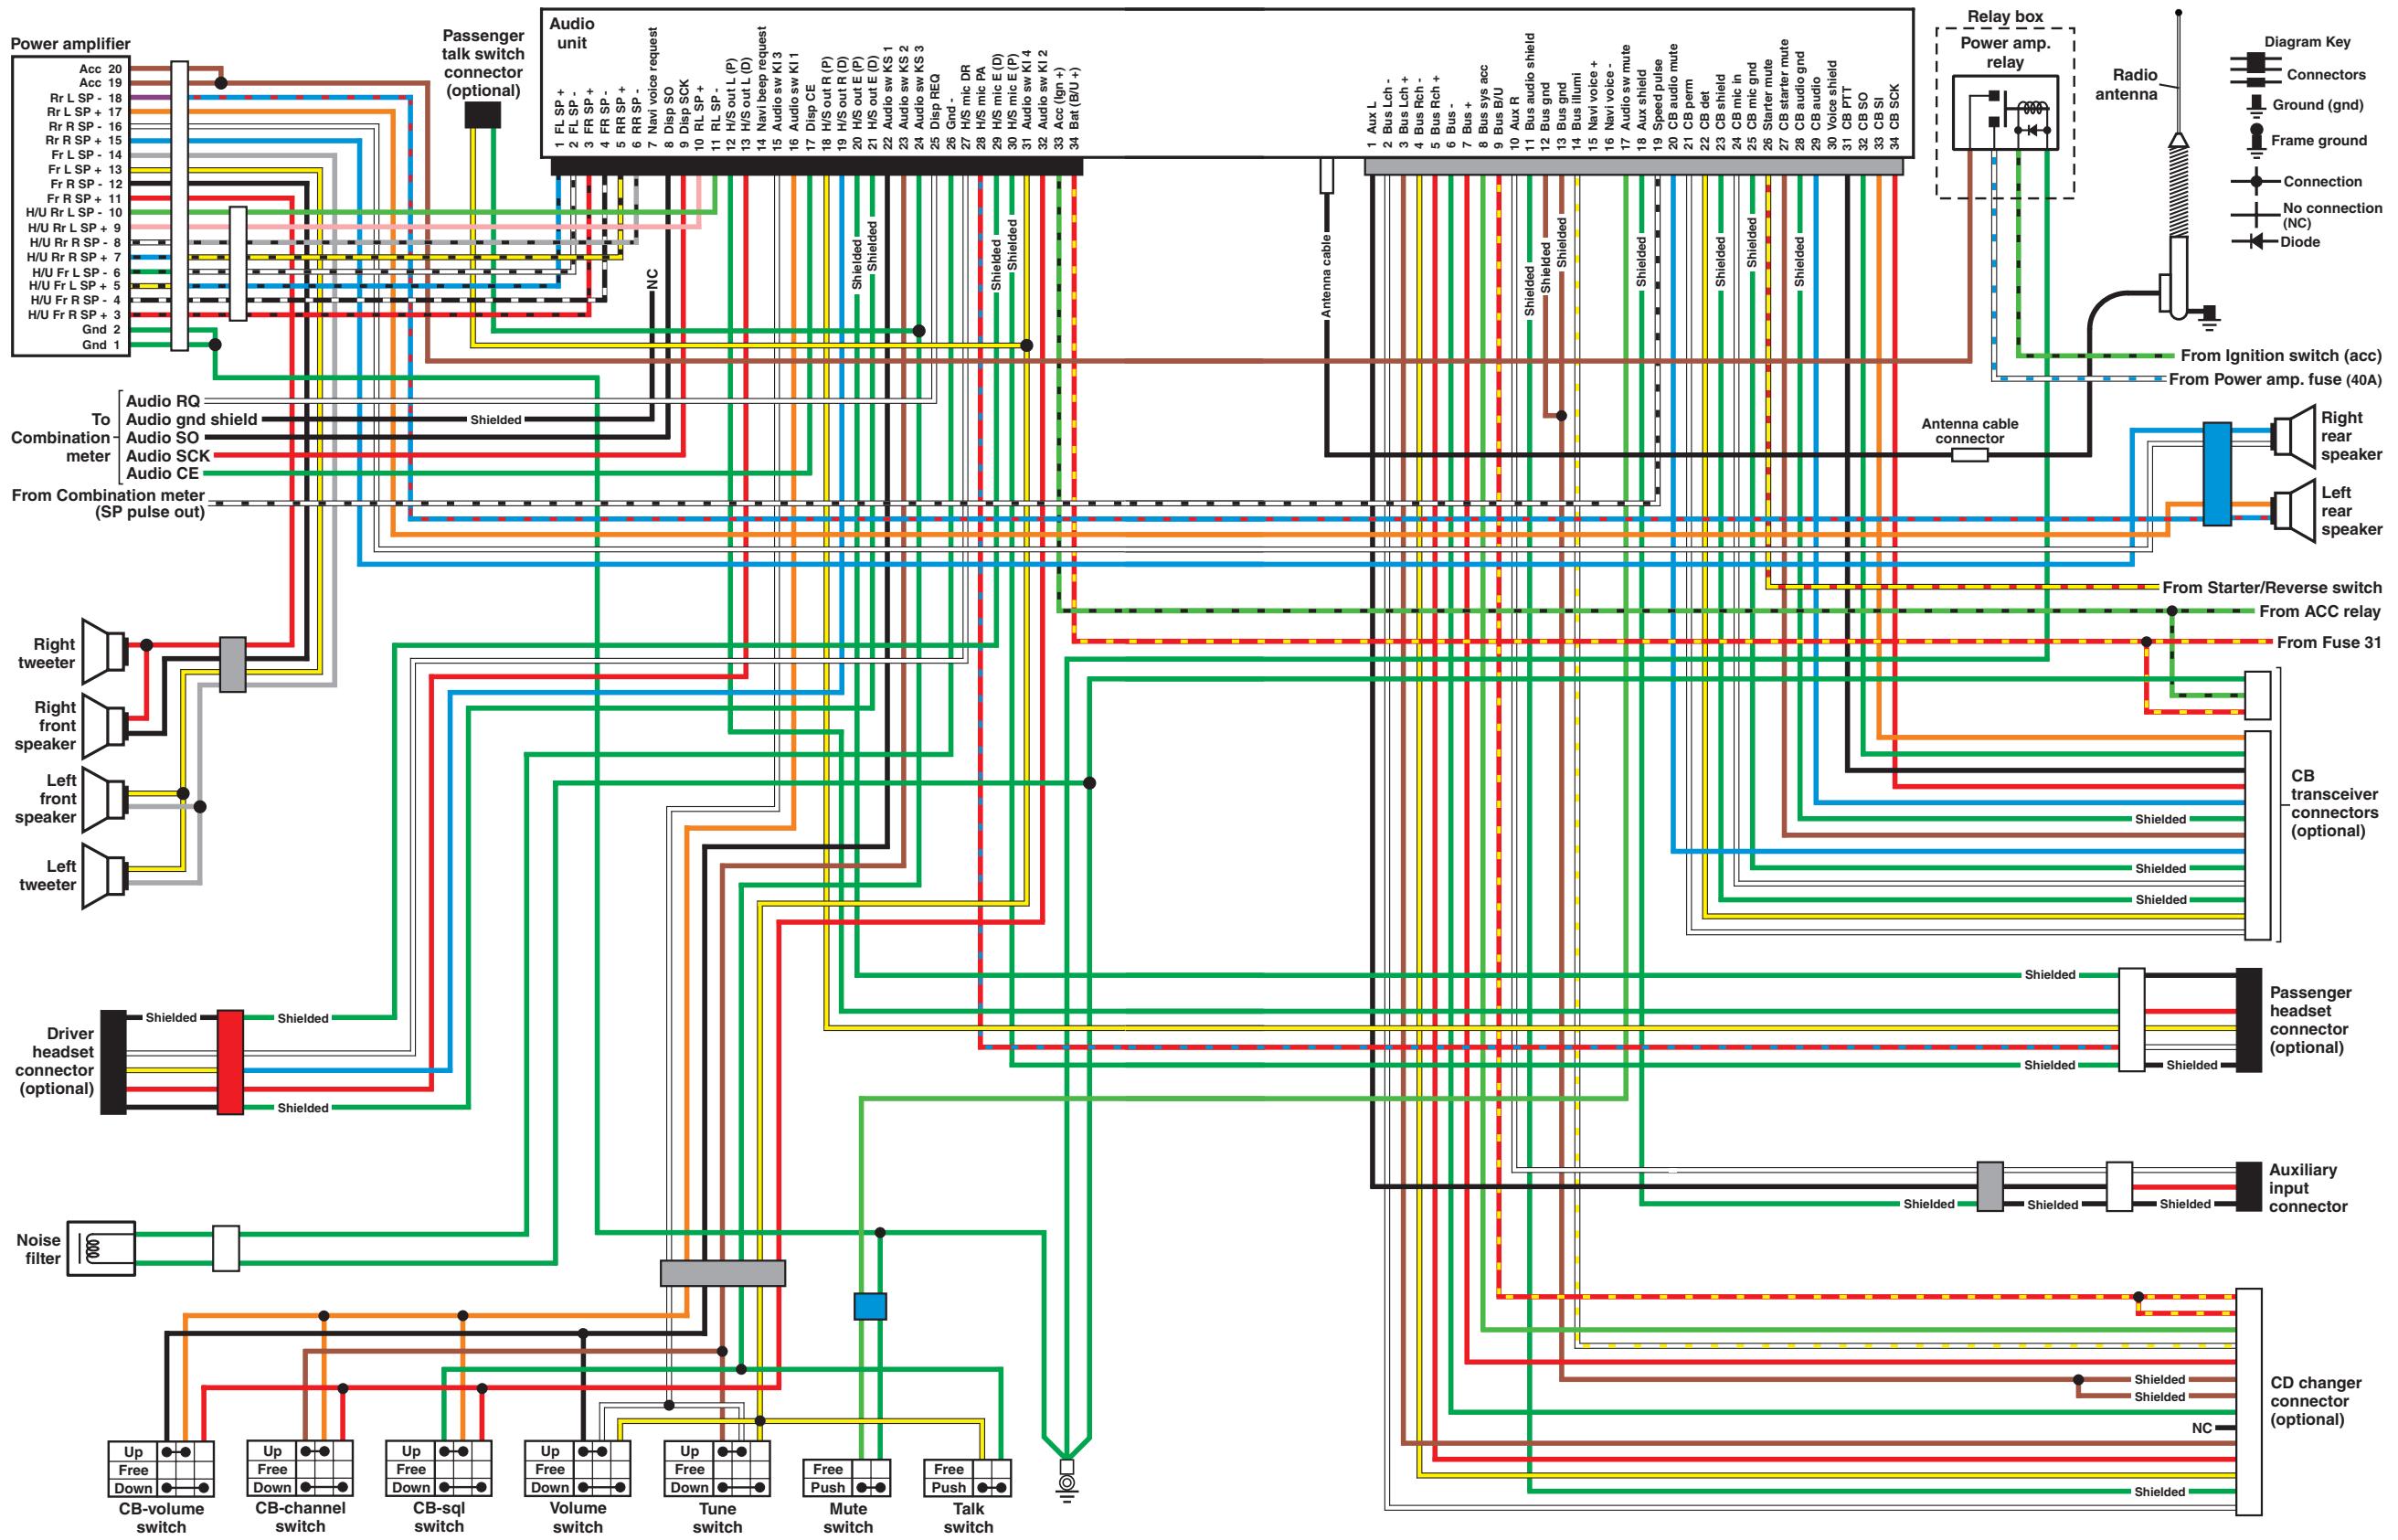


## AUDIO SYSTEM (AIRBAG MODELS)

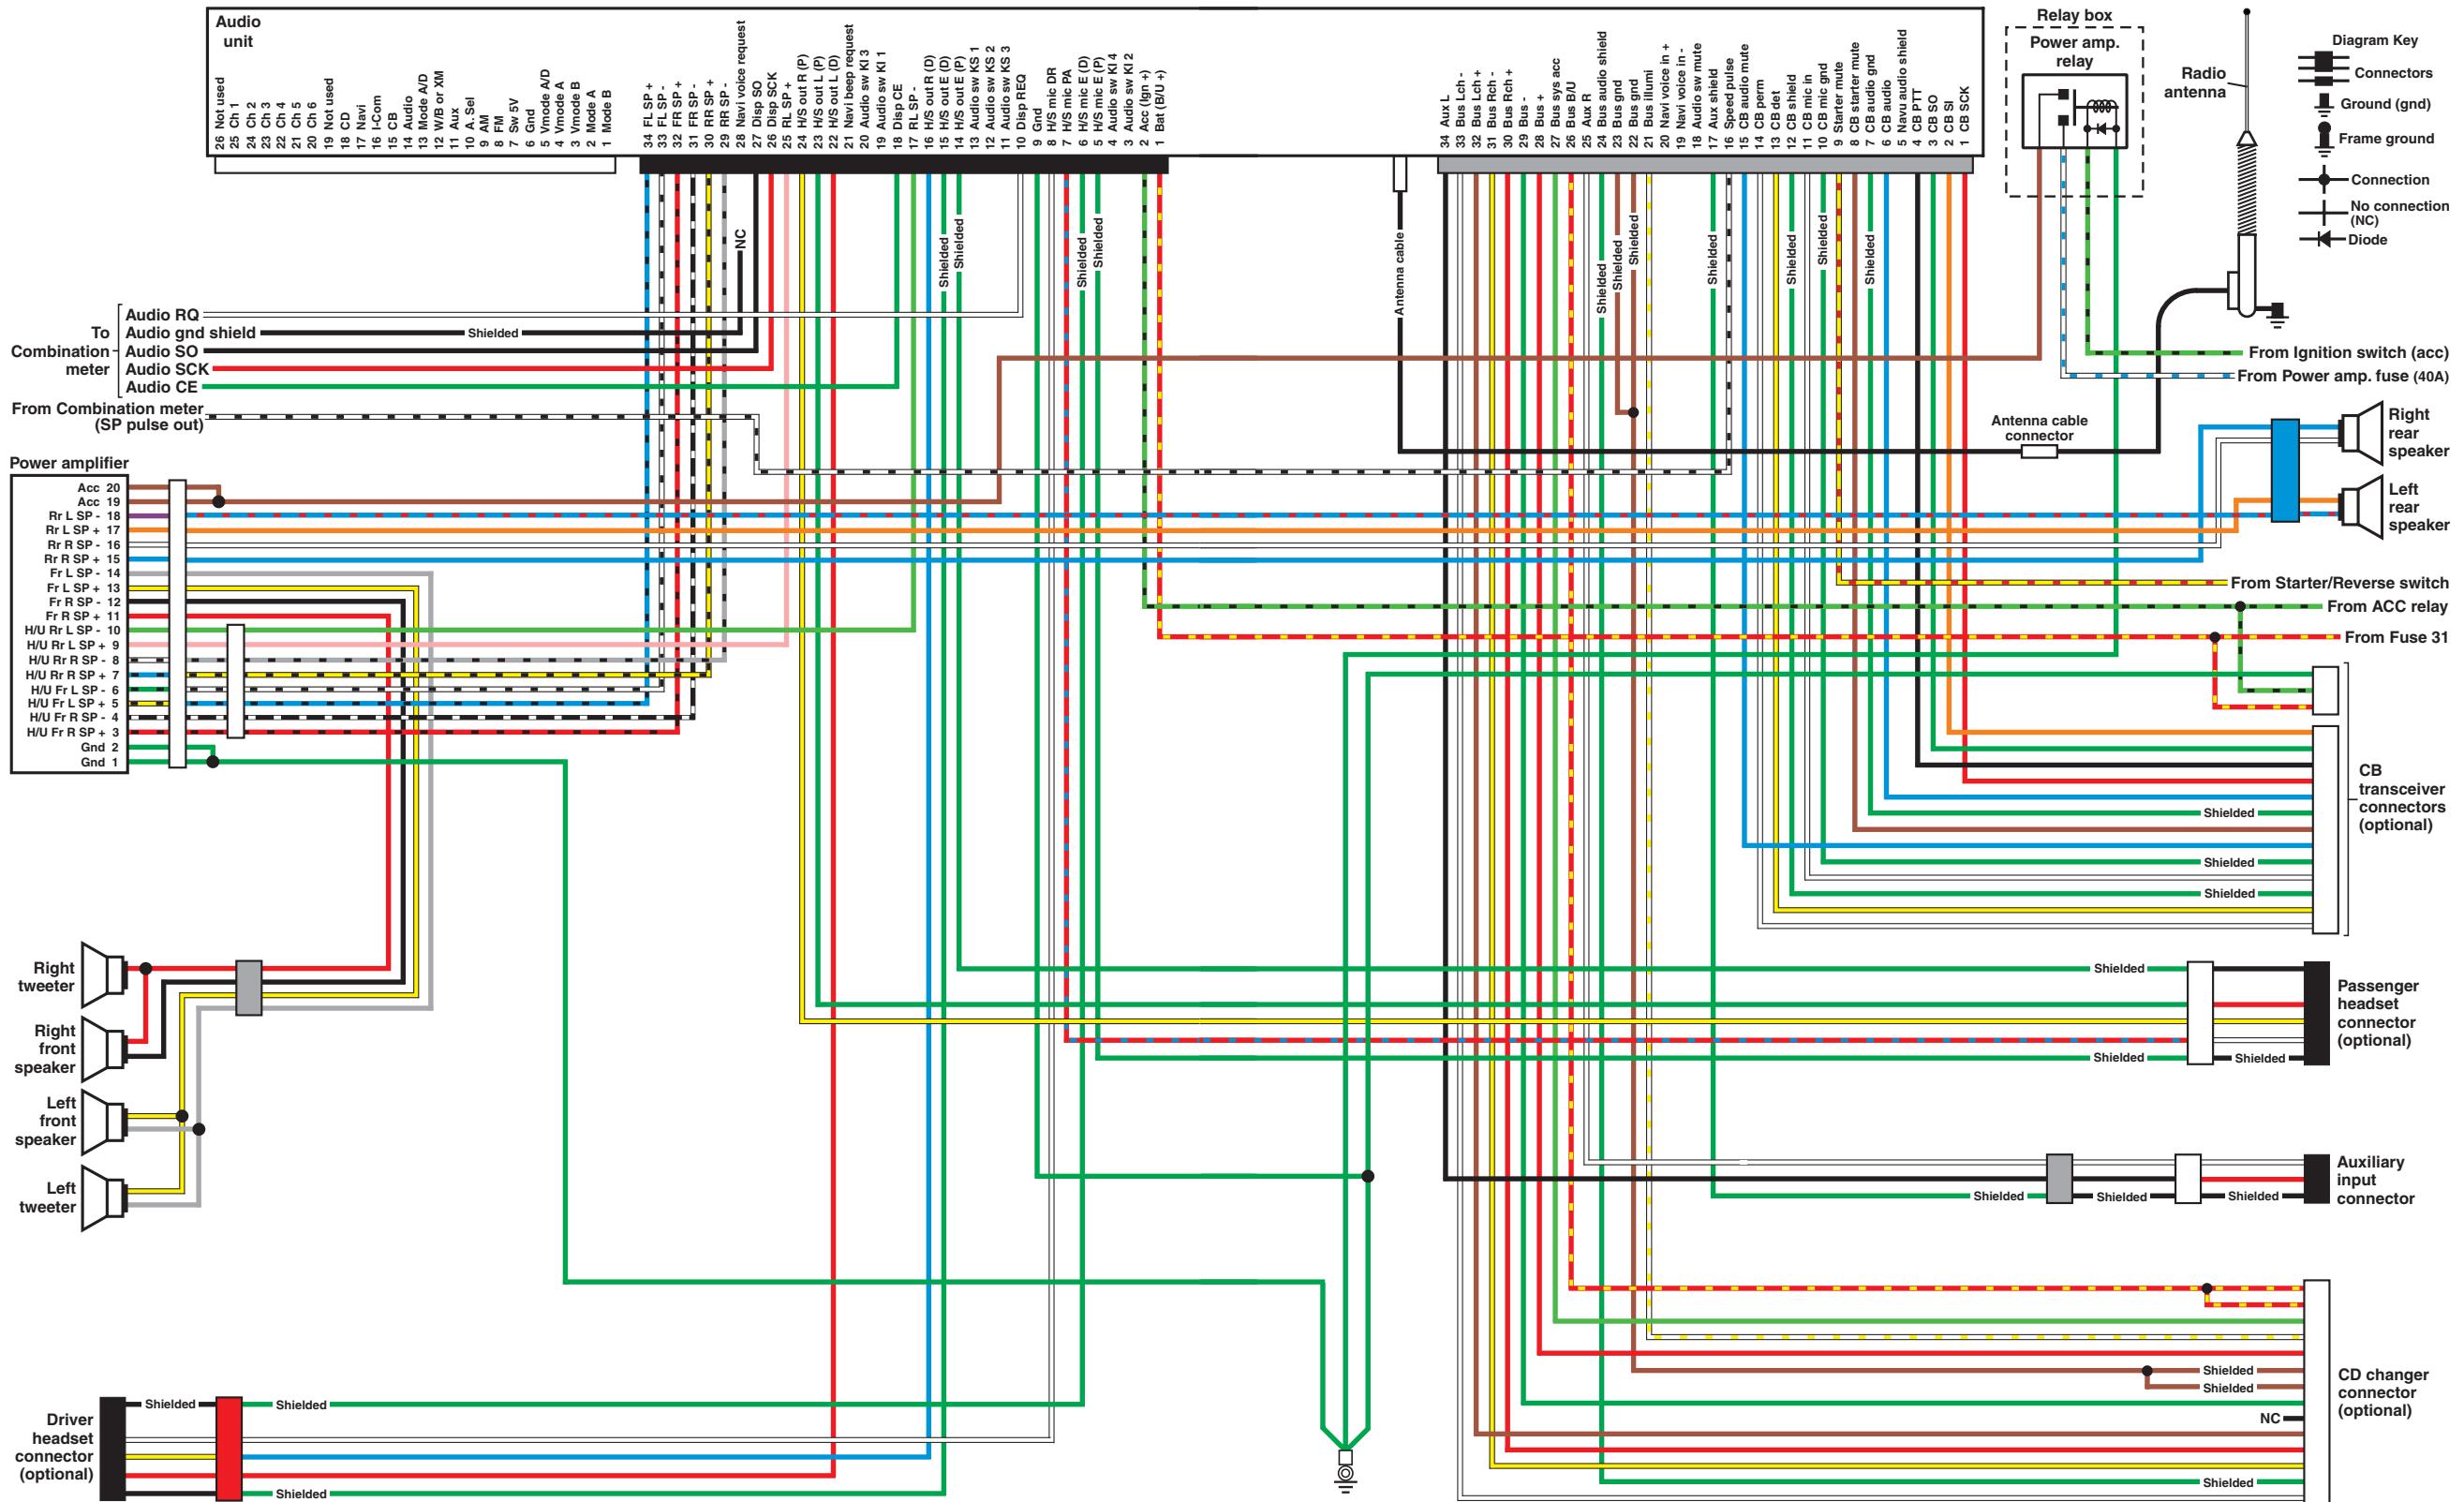


W-43


## AUDIO SYSTEM SWITCHES (AIRBAG MODELS)

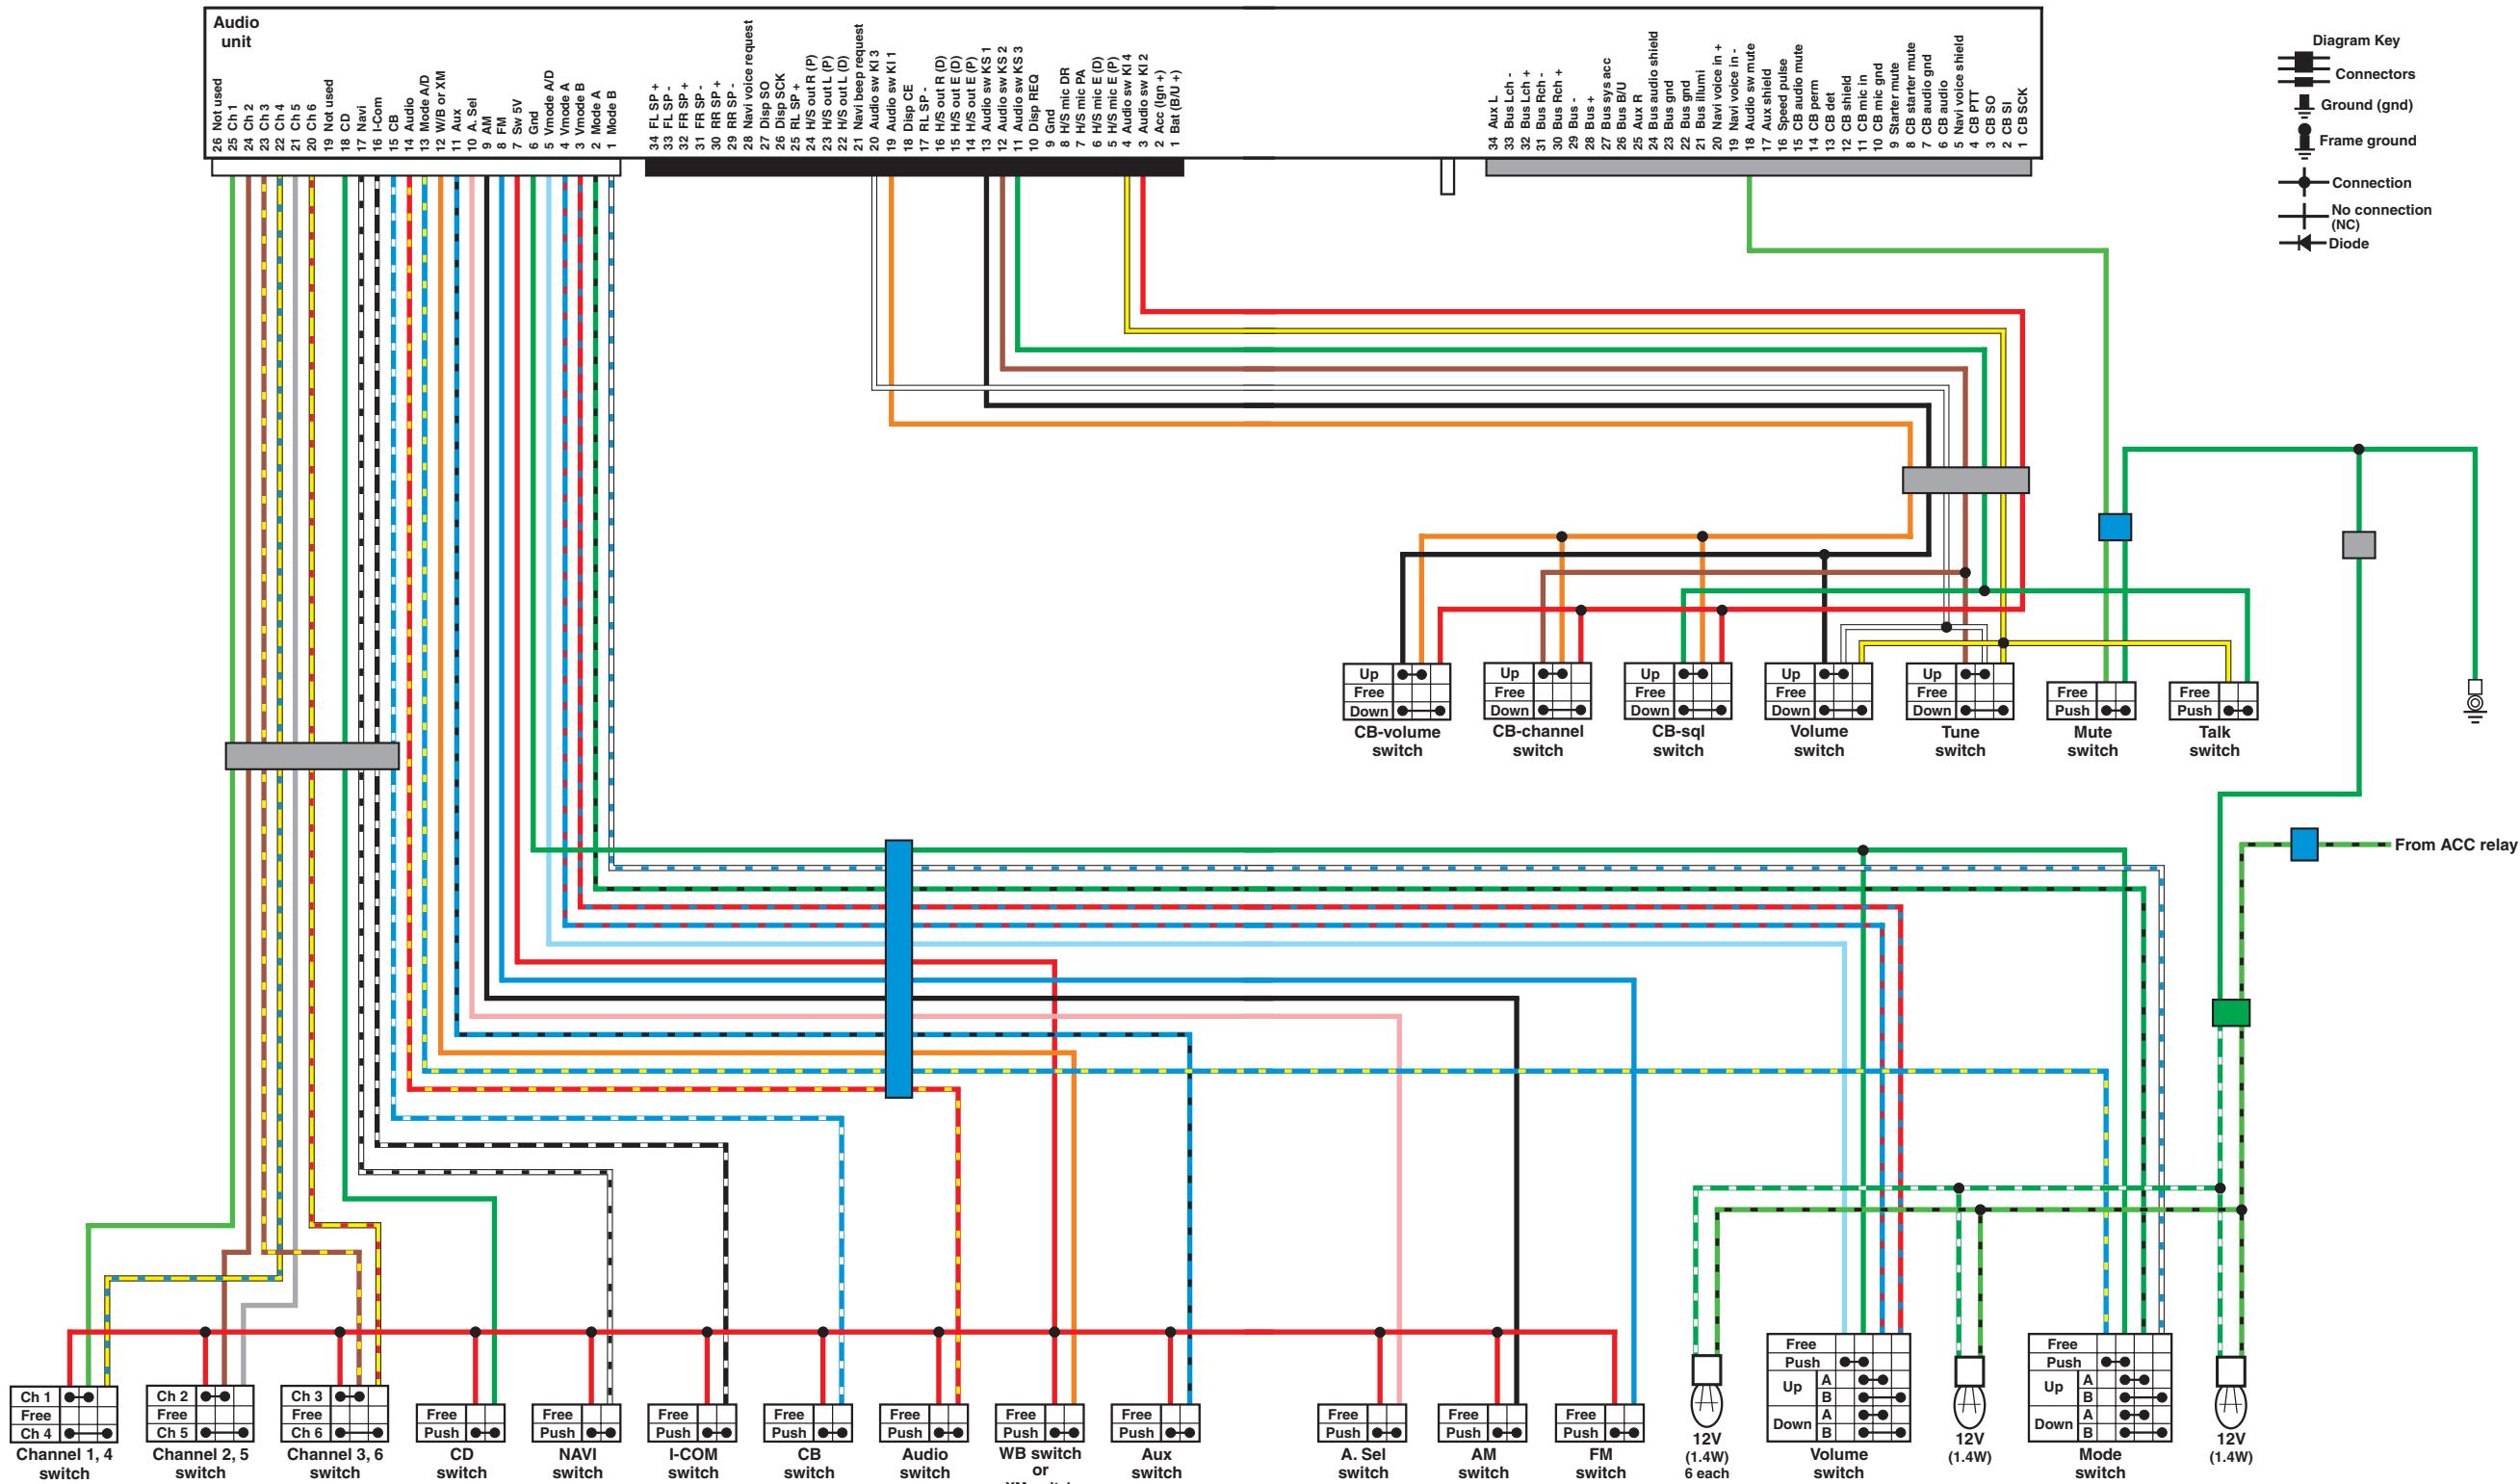

W-44


## SUSPENSION LEVEL CONTROL SYSTEM (2001 MODELS)

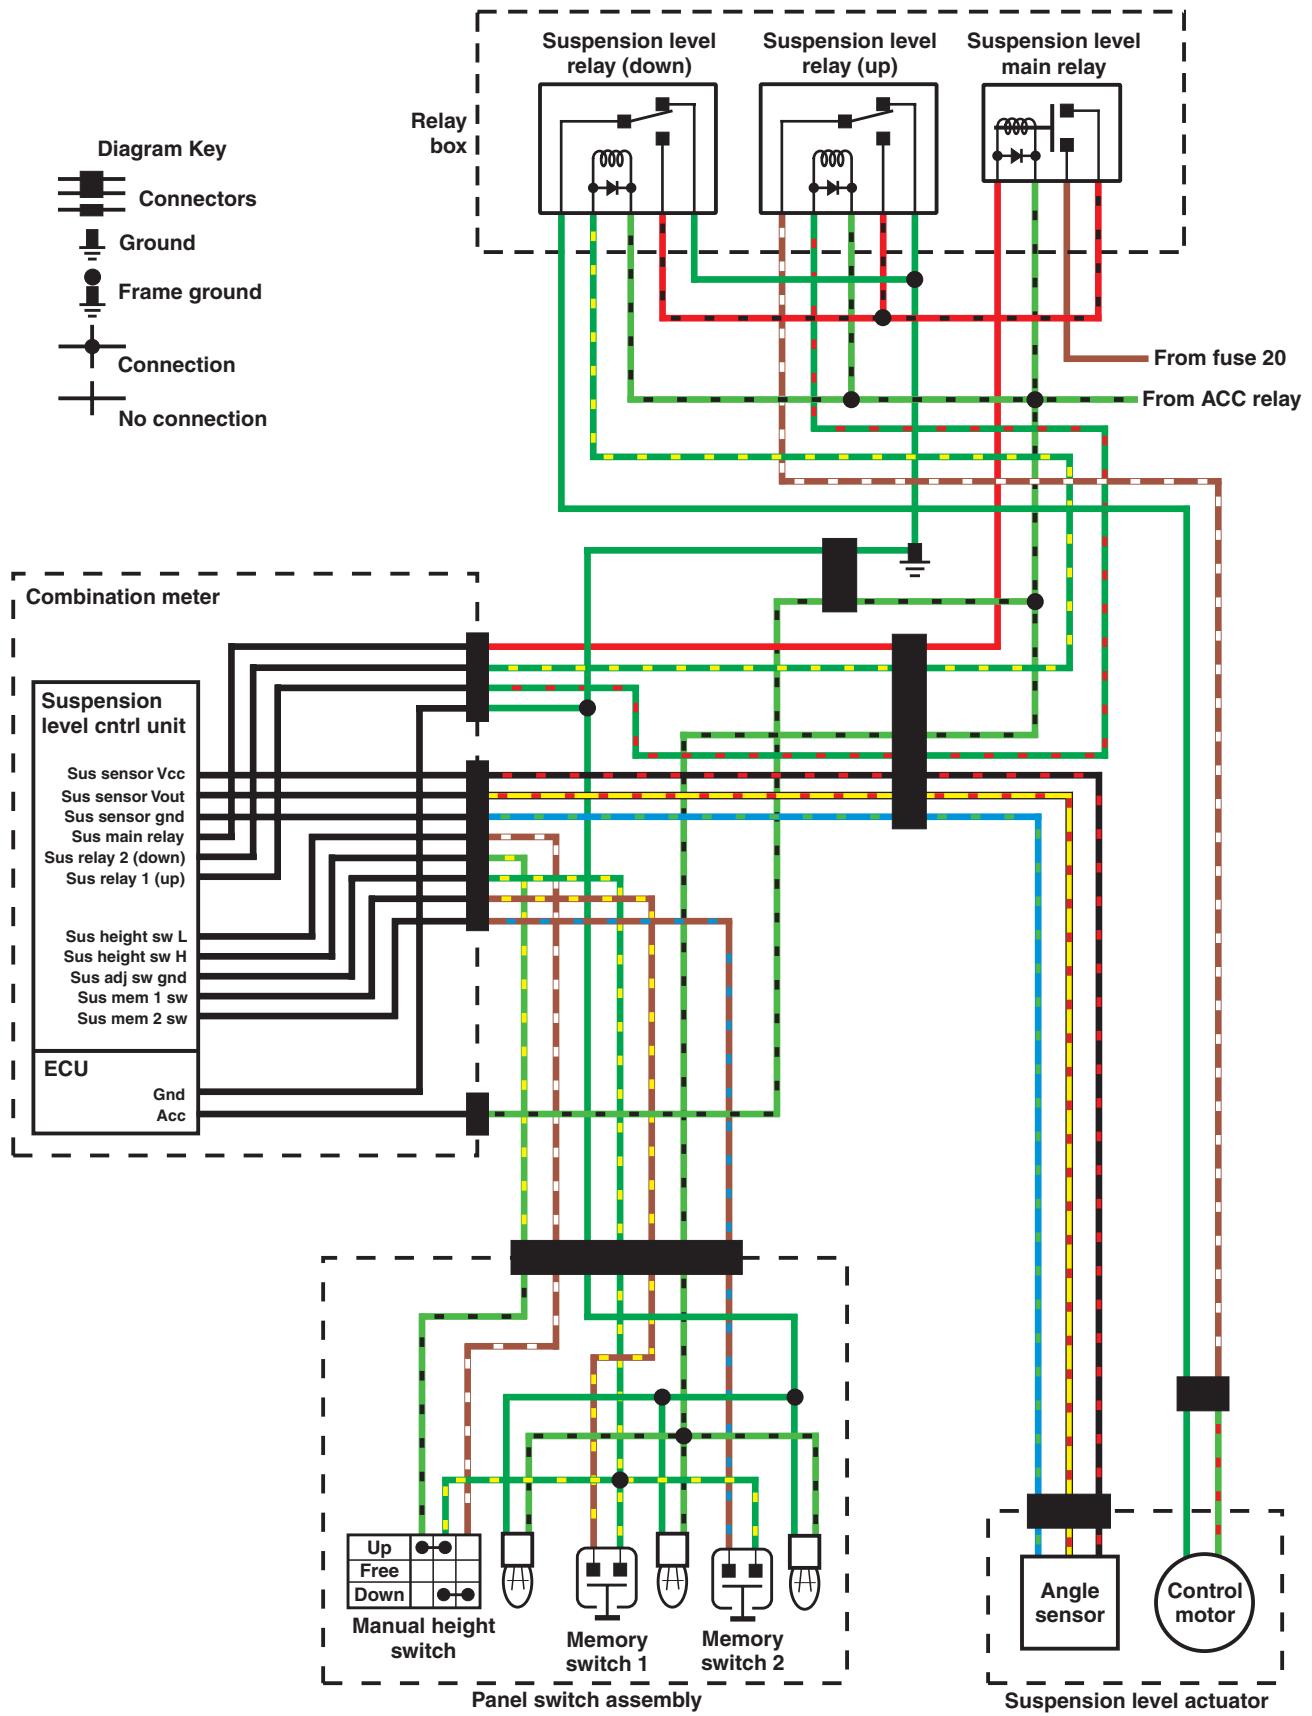

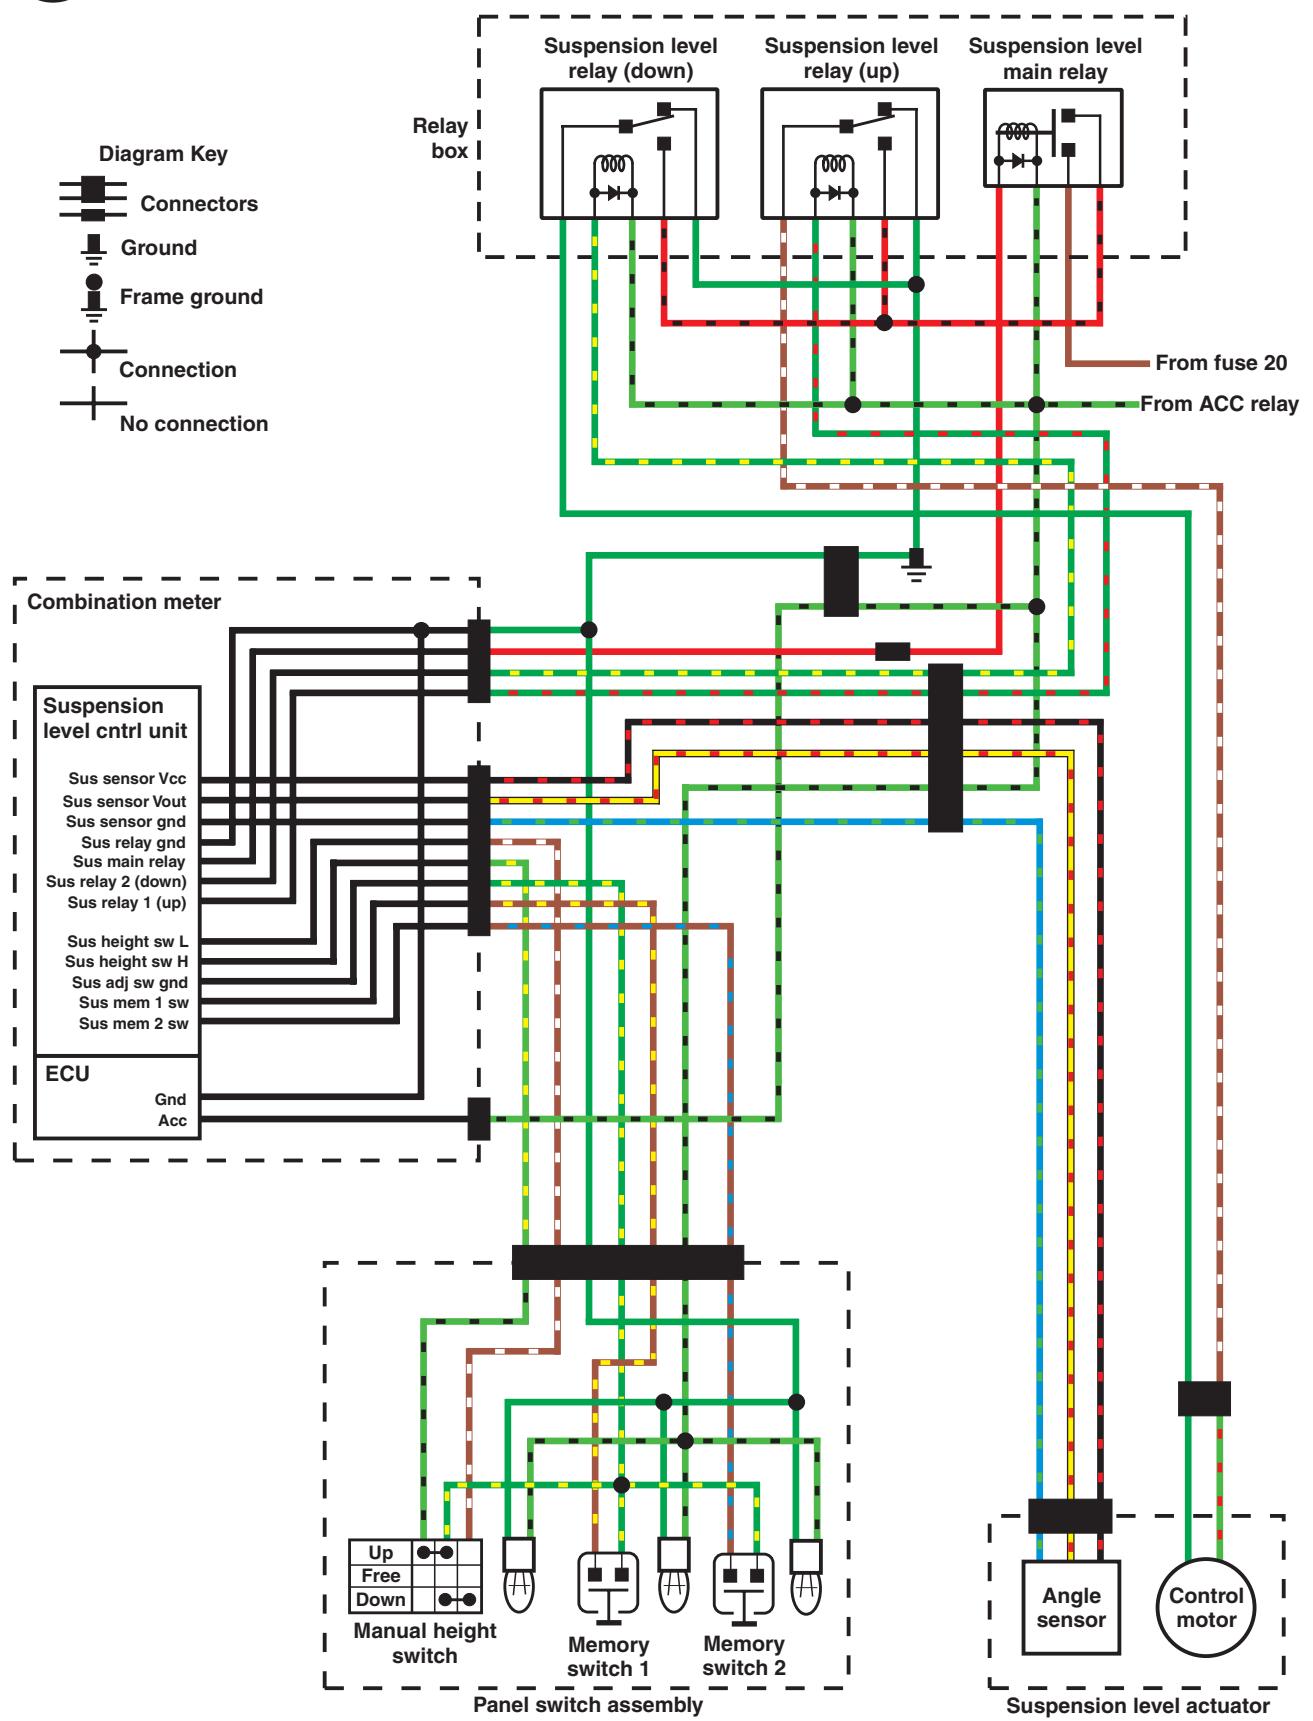
**SUSPENSION LEVEL CONTROL SYSTEM (2002-2005 MODELS)**

W-46


## SUSPENSION LEVEL CONTROL SYSTEM (2006-2008 1A, 1B, 1C AND 1E MODELS)

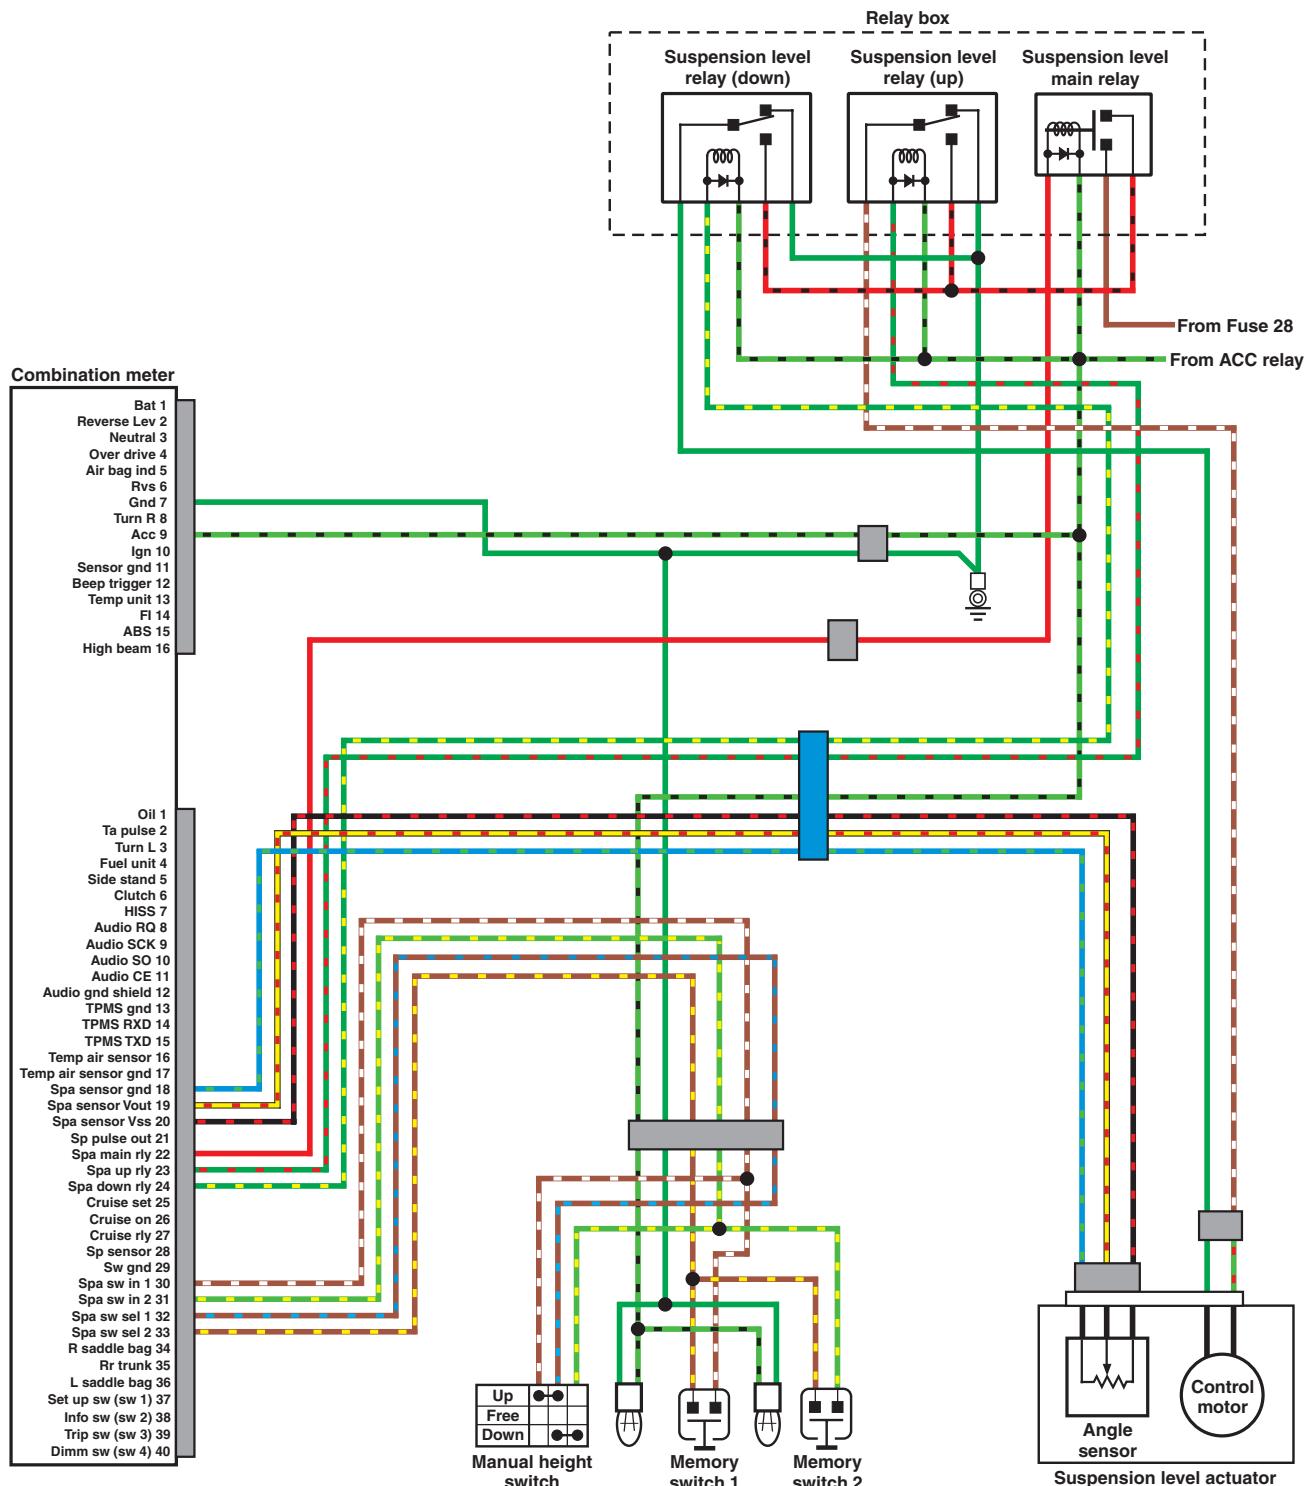


## SUSPENSION LEVEL CONTROL SYSTEM (2006-2008 1D AND 1F MODELS)

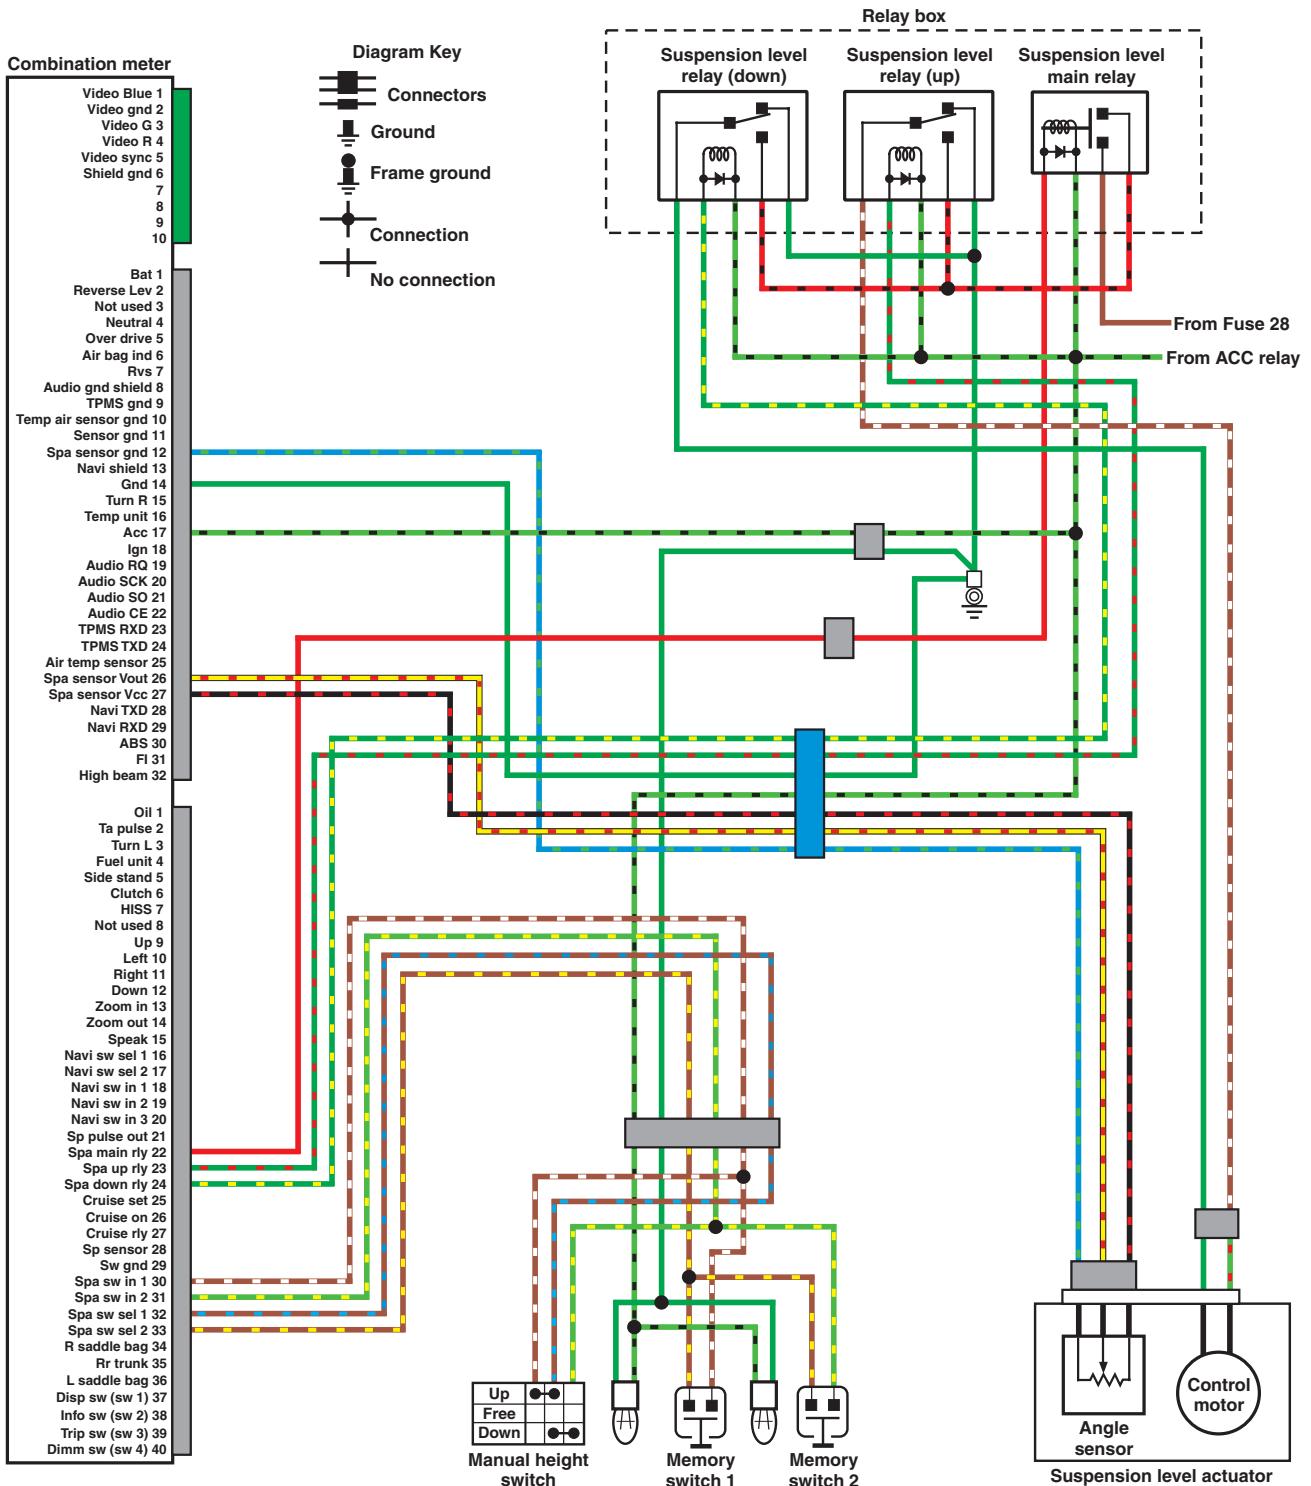

## SUSPENSION LEVEL CONTROL SYSTEM (2006-2008 1G MODELS)

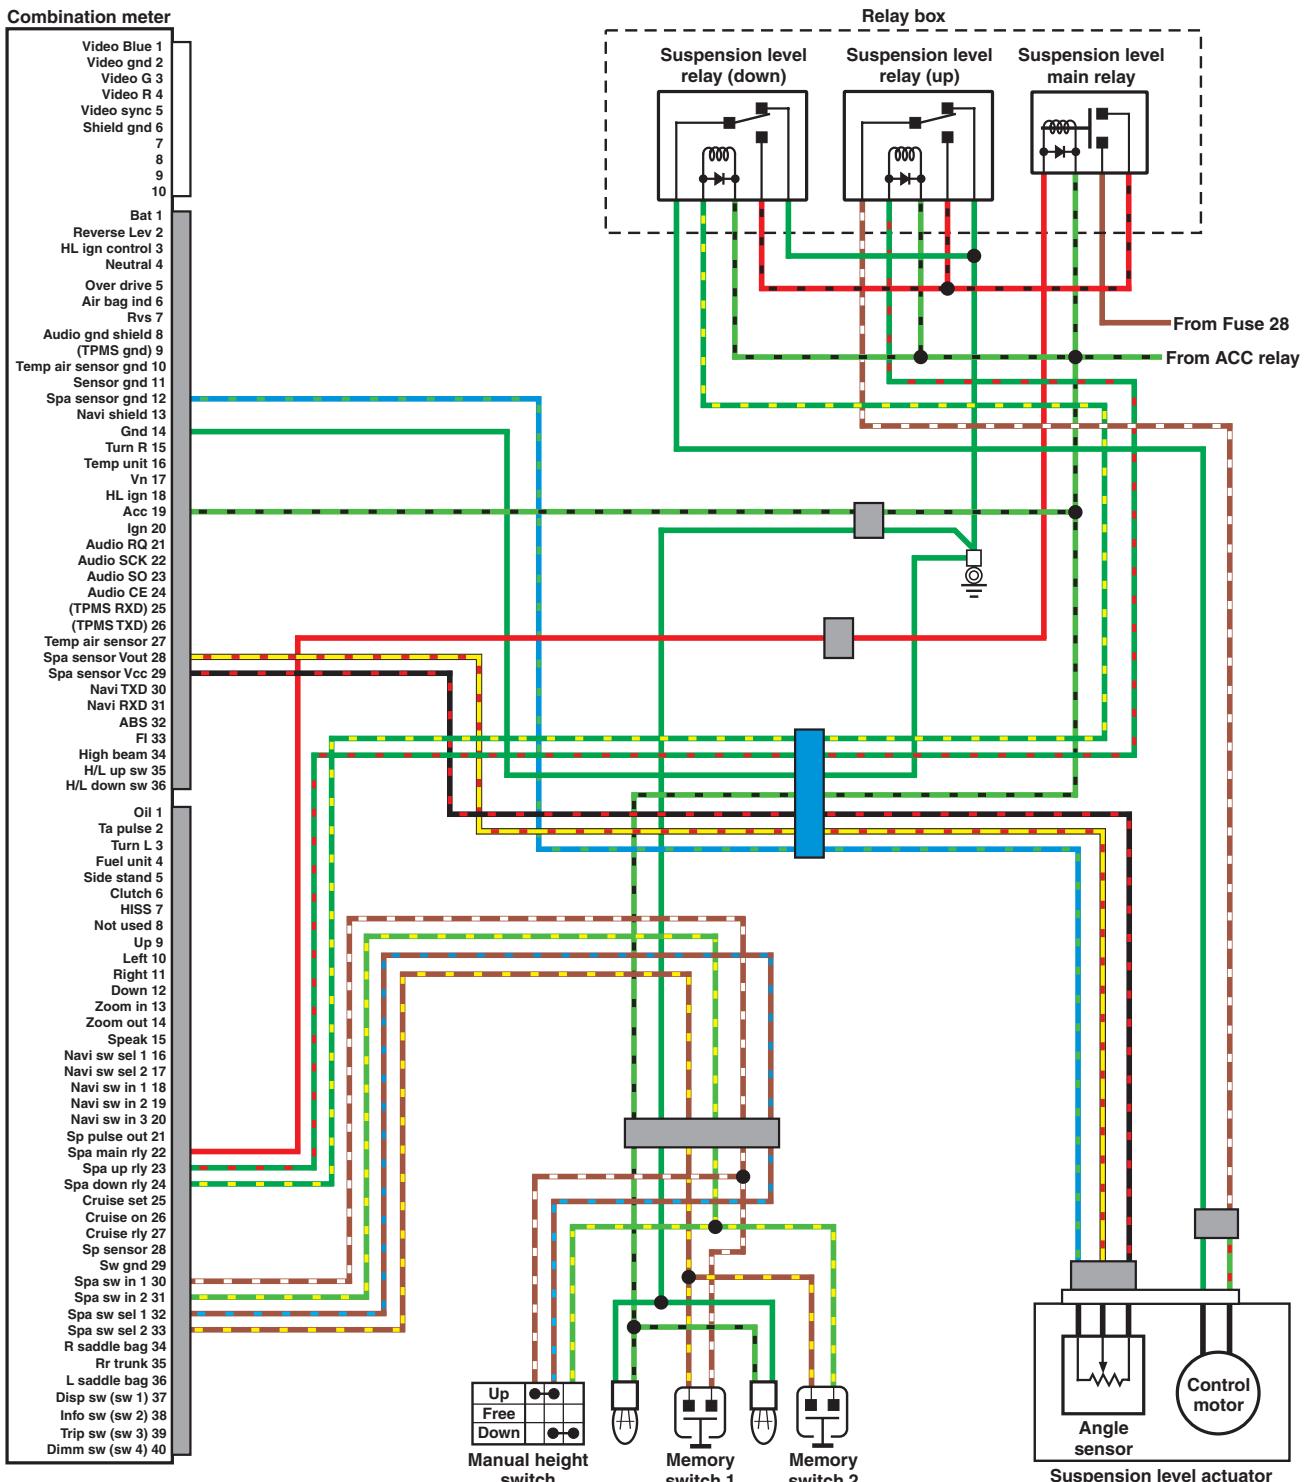


## SUSPENSION LEVEL CONTROL SYSTEM/TPMS (2009-2010 2A MODELS)

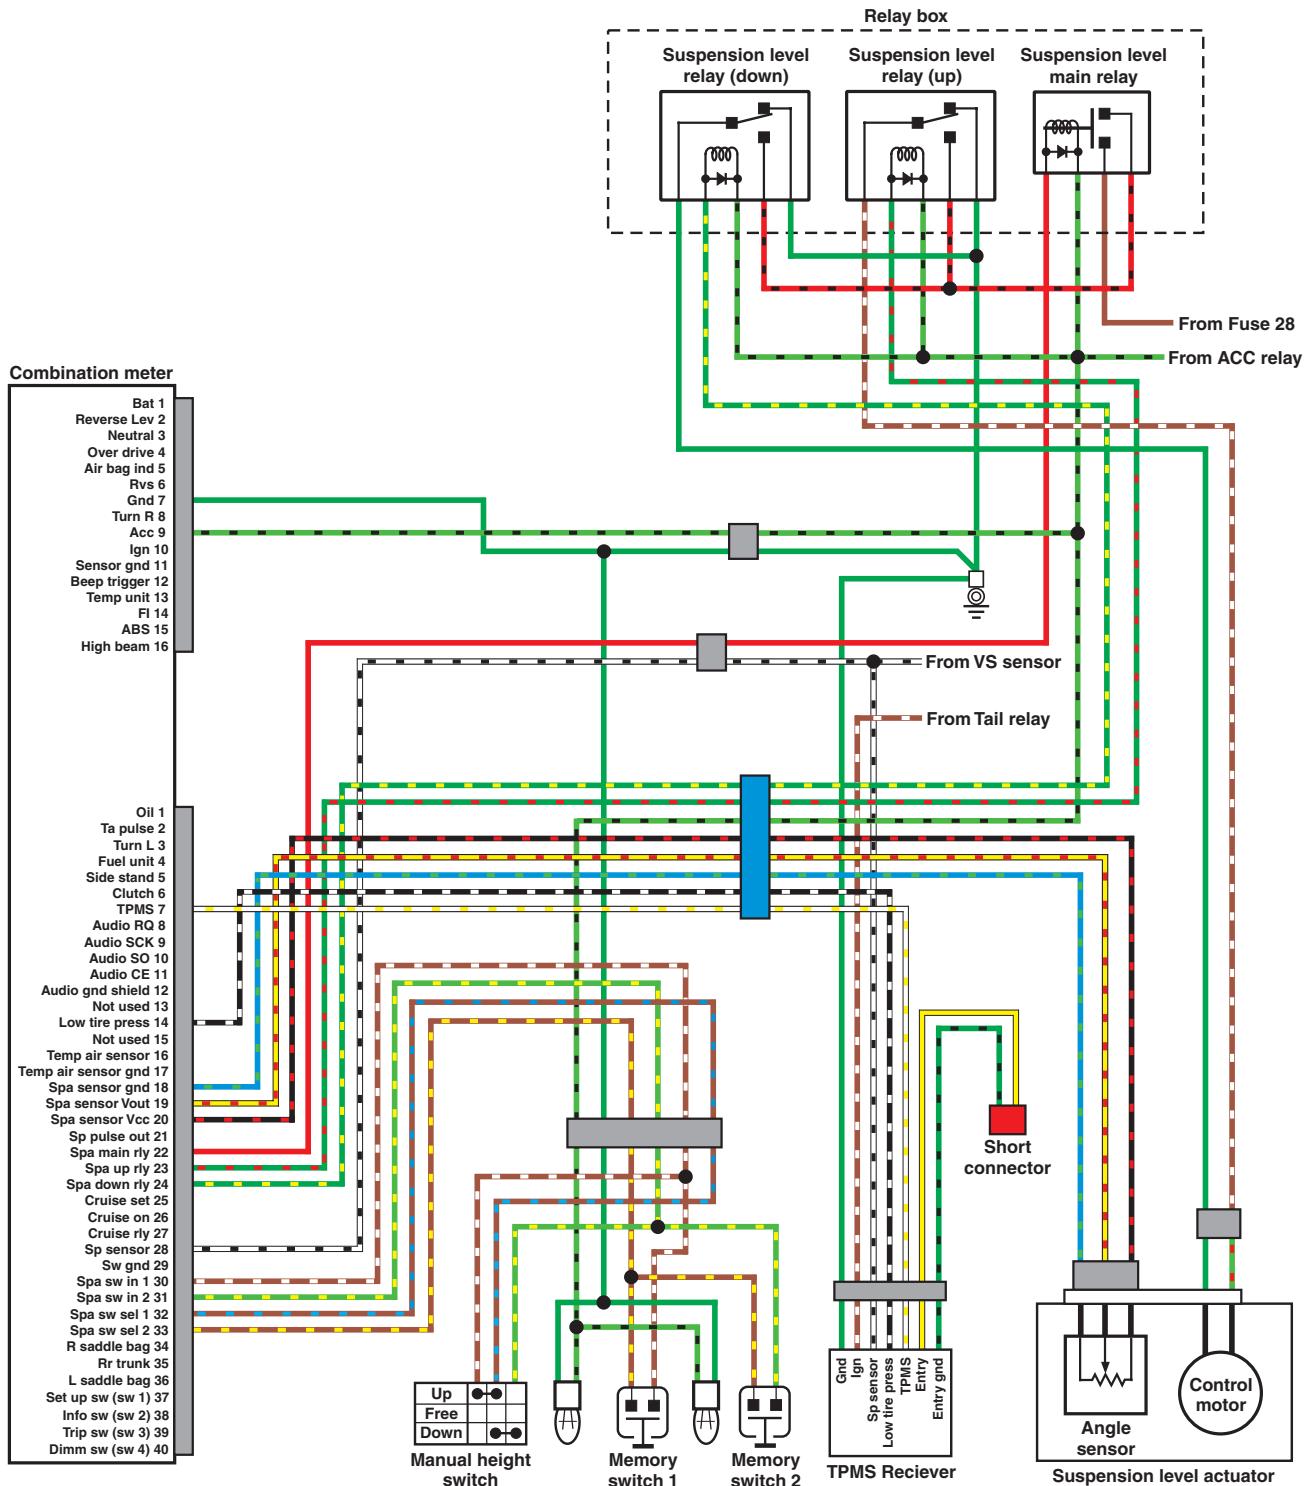


W-50

## SUSPENSION LEVEL CONTROL SYSTEM/TPMS (2009-2010 2B, 2C, 2D, 2E AND 2F MODELS)

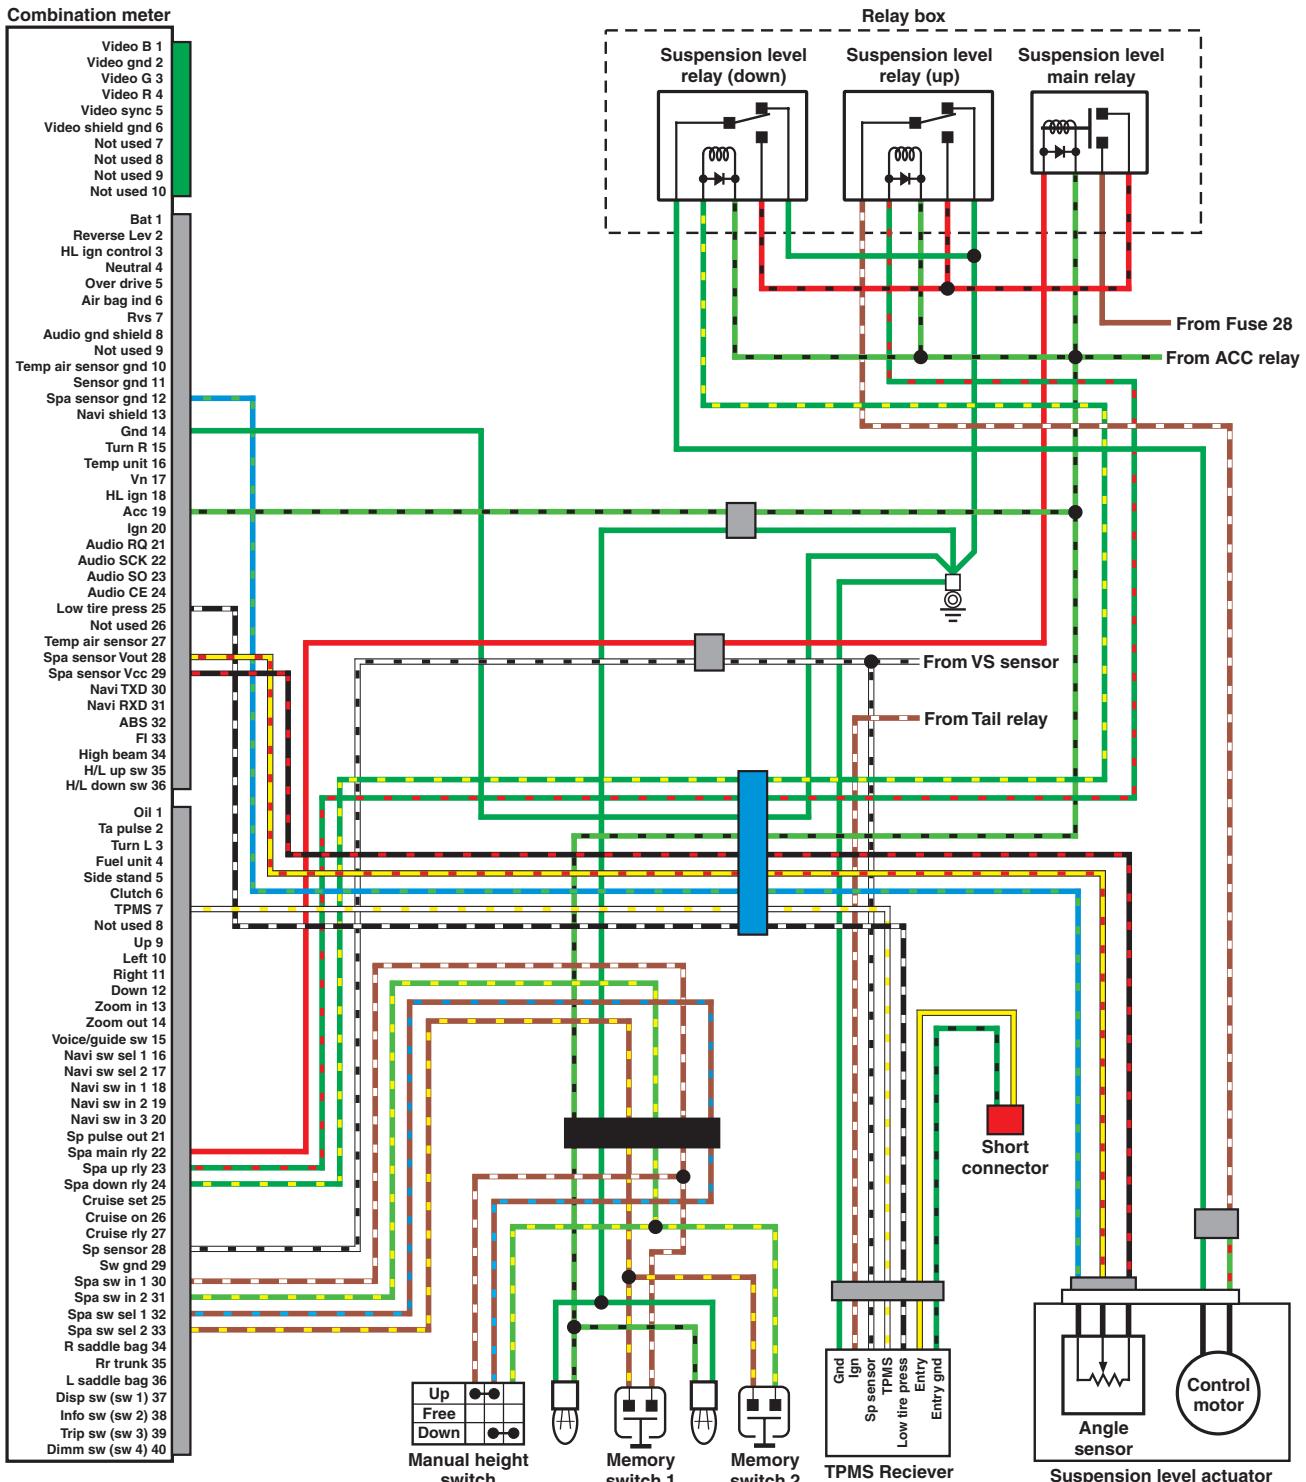



W-51

## FUSE BOX AND RELAY BOX (2001-2005 MODELS)

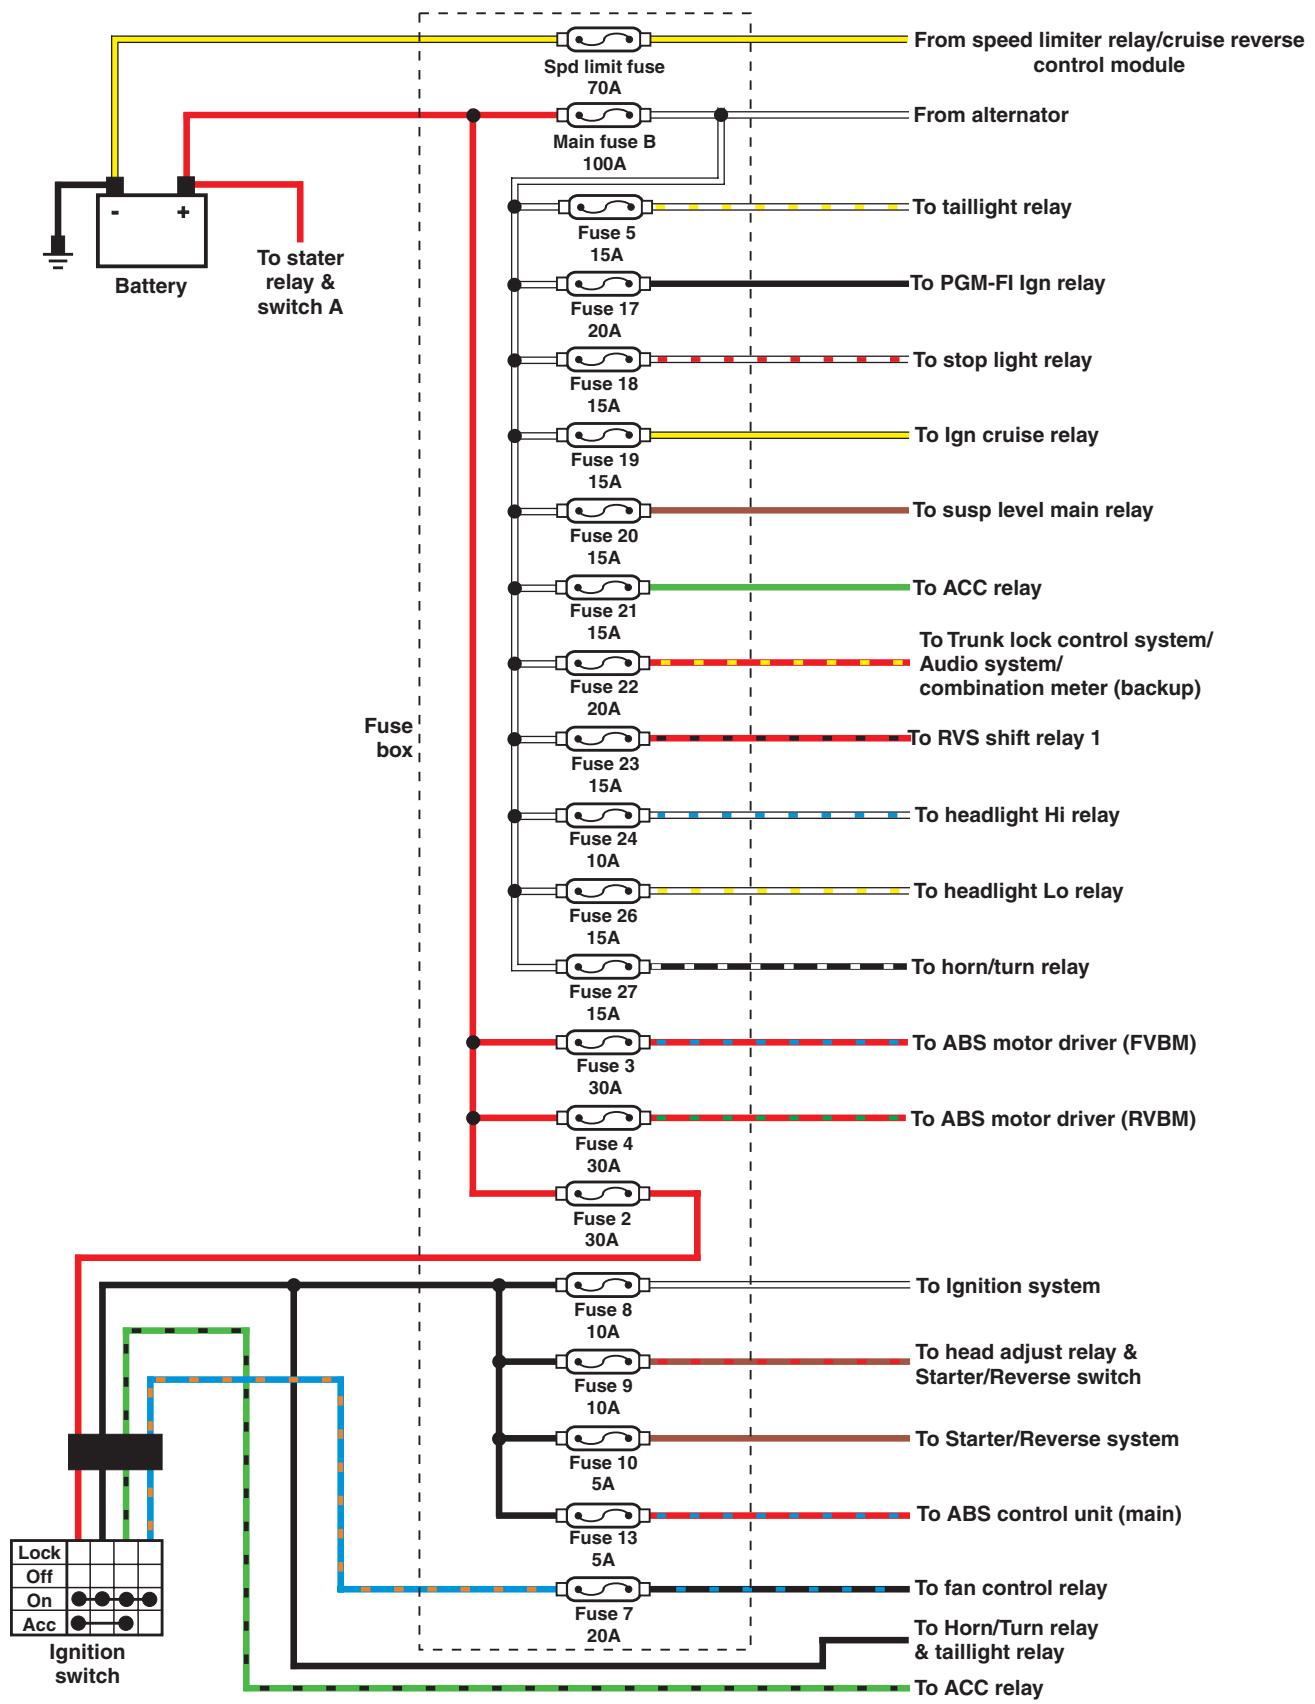


**FUSE BOX AND RELAY BOX (2001-2005 MODELS)****FUSE NUMBER AND AMPERAGE**

- |                             |                               |
|-----------------------------|-------------------------------|
| 1. Not used                 | 15. Not used                  |
| 2. Main fuse A 30A          | 16. Not used                  |
| 3. ABS motor front fuse 30A | 17. PGM-FI ignition fuse 20A  |
| 4. ABS motor rear fuse 30 A | 18. Stop light fuse 15A       |
| 5. Tail light fuse 30A      | 19. Ignition cruise fuse 15A  |
| 6. ACC terminal fuse 5A     | 20. Suspension level fuse 15A |
| 7. Fan fuse                 | 21. Audio/ACC fuse 15A        |
| 8. Stop switch fuse 10A     | 22. Battery fuse 20A          |
| 9. Headlight relay fuse 10A | 23. RVS shift fuse 15A        |
| 10. RVS start fuse A 5A     | 24. Headlight HI fuse 10A     |
| 11. RVS fuse A 5A           | 25. Not used                  |
| 12. RVS fuse B 5A           | 26. Headlight LO fuse 15A     |
| 13. ABS main fuse 5A        | 27. Horn/turn fuse 15A        |
| 14. Not used                |                               |

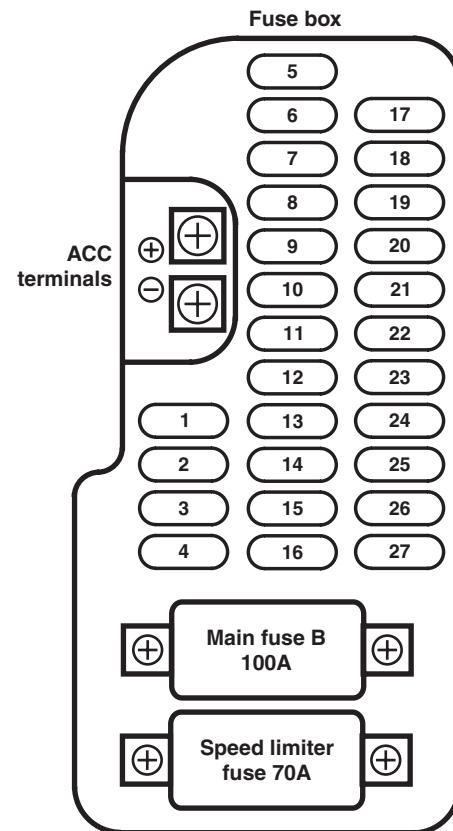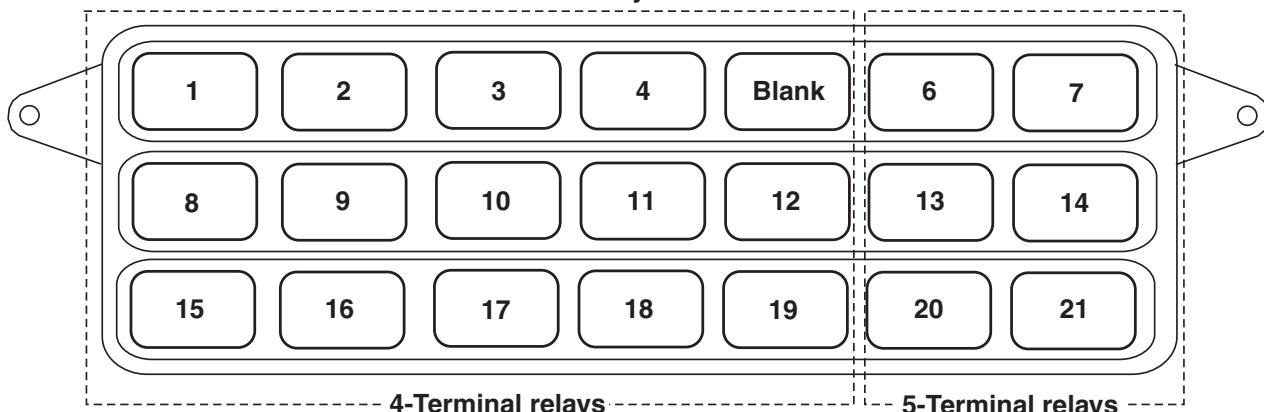
**Relay box**


- |                                 |                                 |
|---------------------------------|---------------------------------|
| 1. Headlight LO relay           | 12. ACC relay                   |
| 2. Cruise actuator relay        | 13. Suspension level down relay |
| 3. Fan control relay            | 14. Suspension level up relay   |
| 4. Fuel pump relay              | 15. FI ignition relay           |
| 5. Blank                        | 16. Headlight HI relay          |
| 6. Ignition cruise relay        | 17. Horn (call) relay           |
| 7. Headlight adjuster relay     | 18. Reverse relay               |
| 8. Horn turn relay              | 19. Reverse shift relay 1       |
| 9. Stop light relay             | 20. Reverse shift relay 2       |
| 10. Taillight relay             | 21. Reverse shift relay 3       |
| 11. Suspension level mail relay |                                 |

## FUSE BOX (2006-2008 1A, 1B, 1C, 1D AND 2009-2010 2A, 2B, 2C, 2E MODELS)

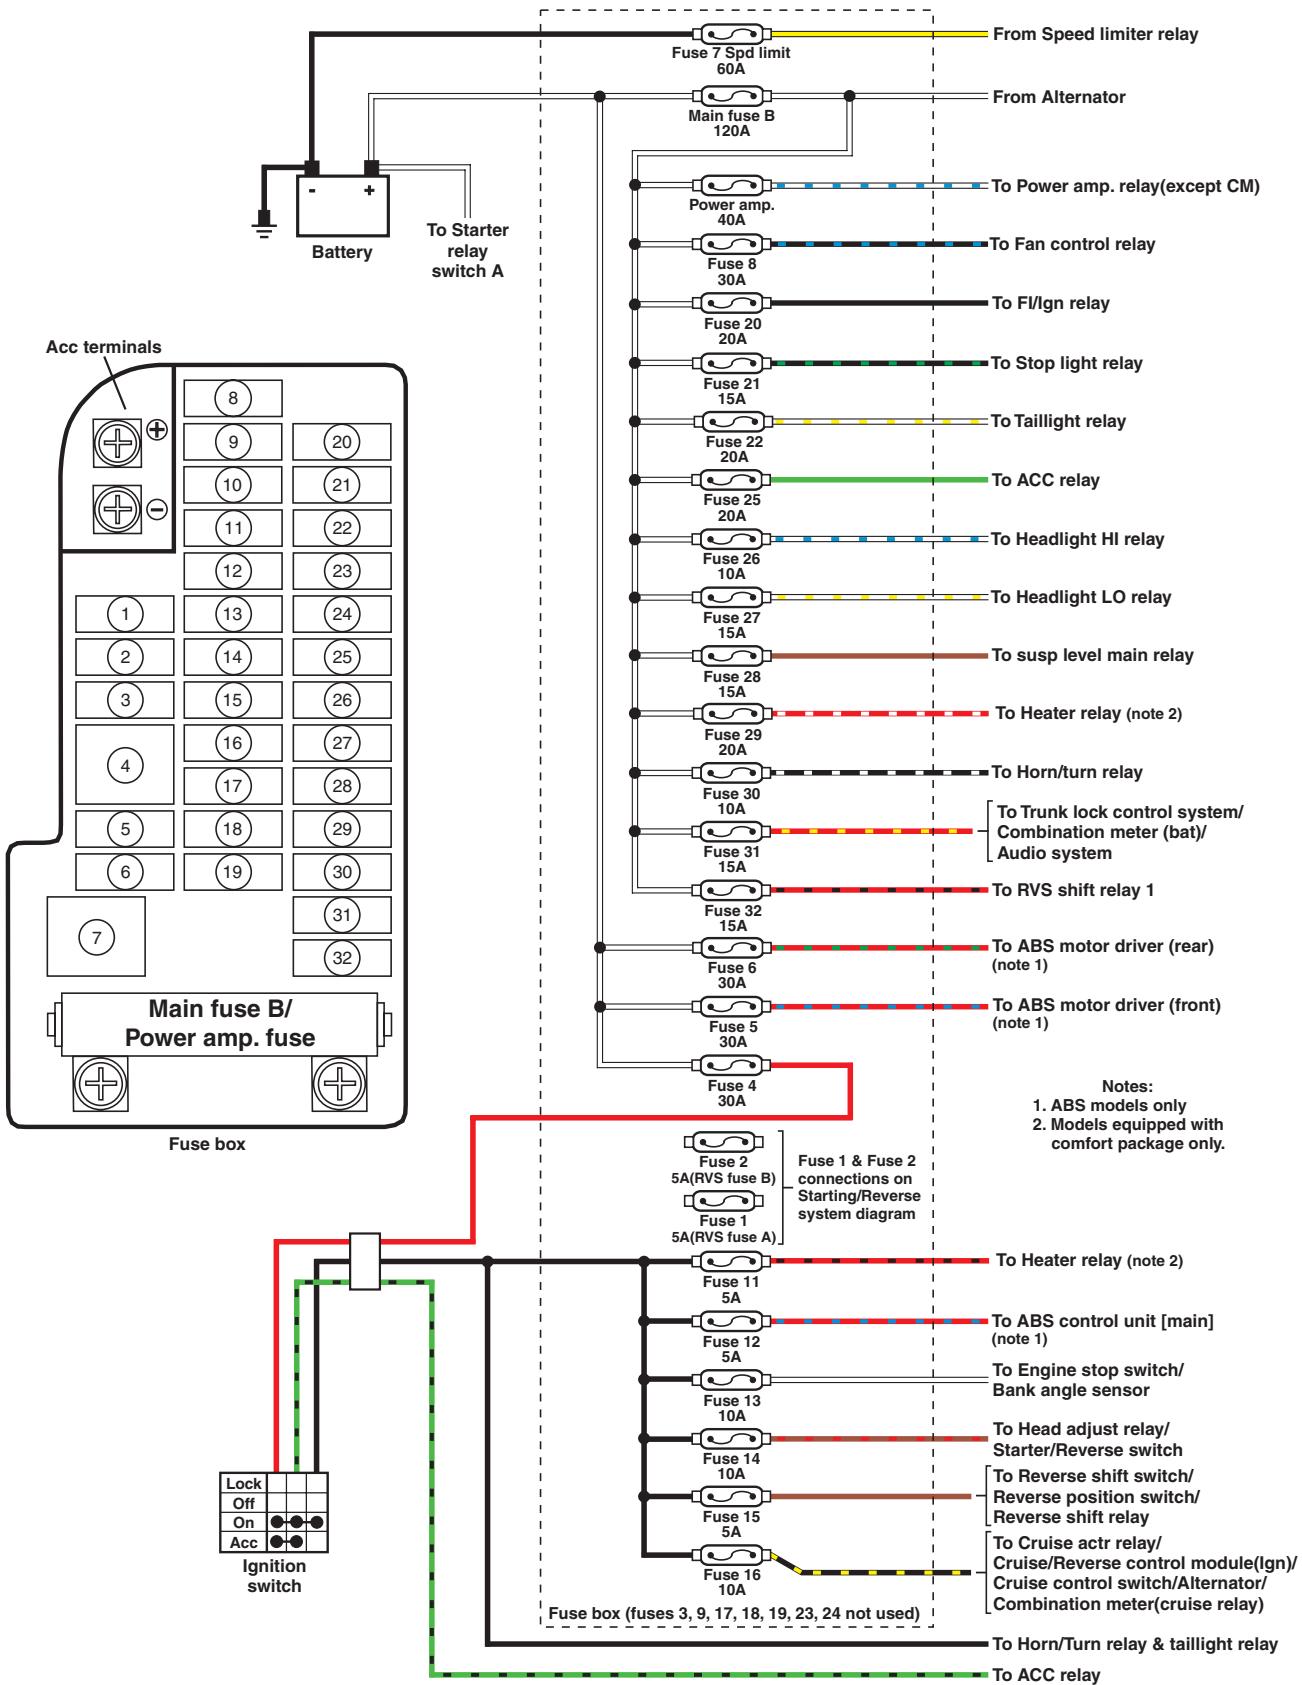


## FUSE BOX (2006-2008 1E AND 1F MODELS)

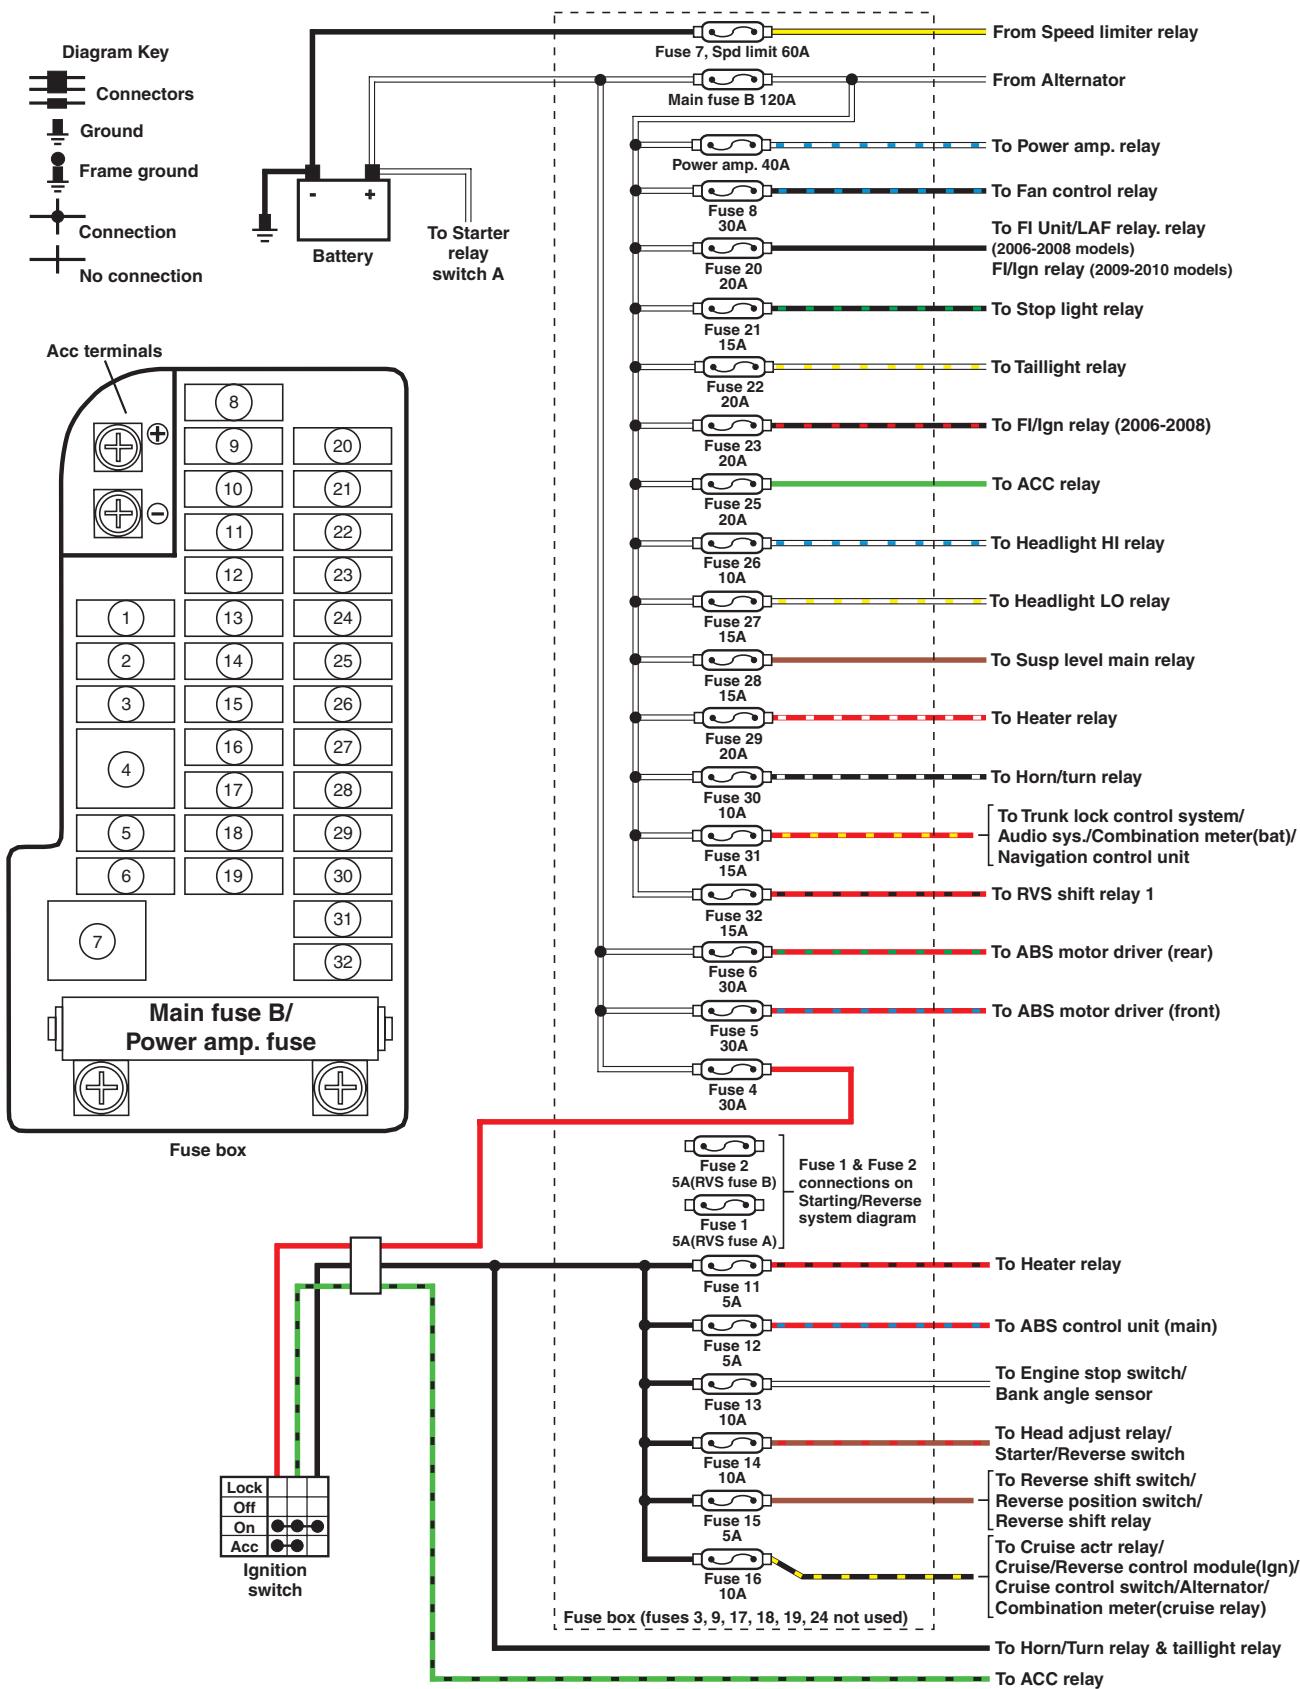

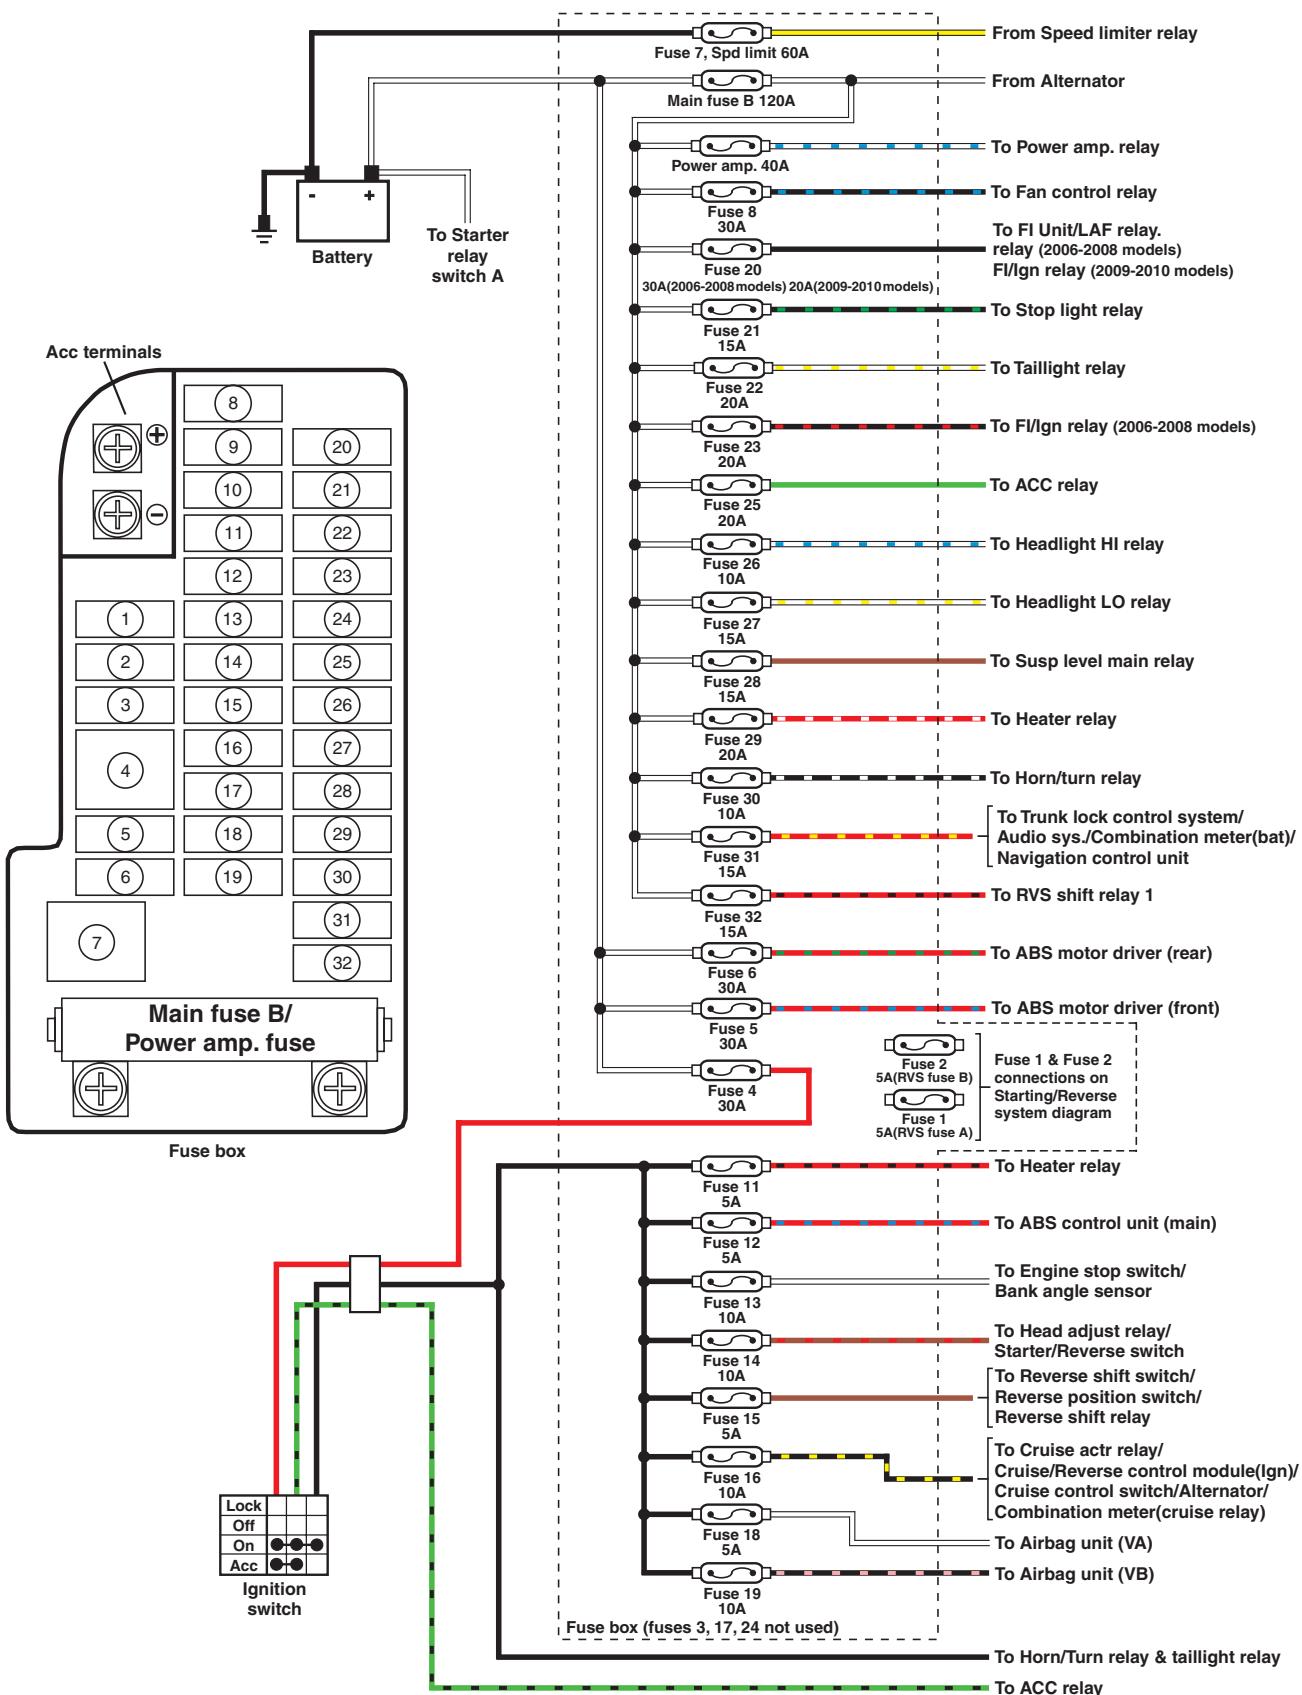**FUSE BOX (2006-2010 AIRBAG MODELS)**


**W-56**

**RELAY BOX (2006-2008 1A, 1B, 1C, 1D AND  
2009-2010 2A, 2B MODELS)**

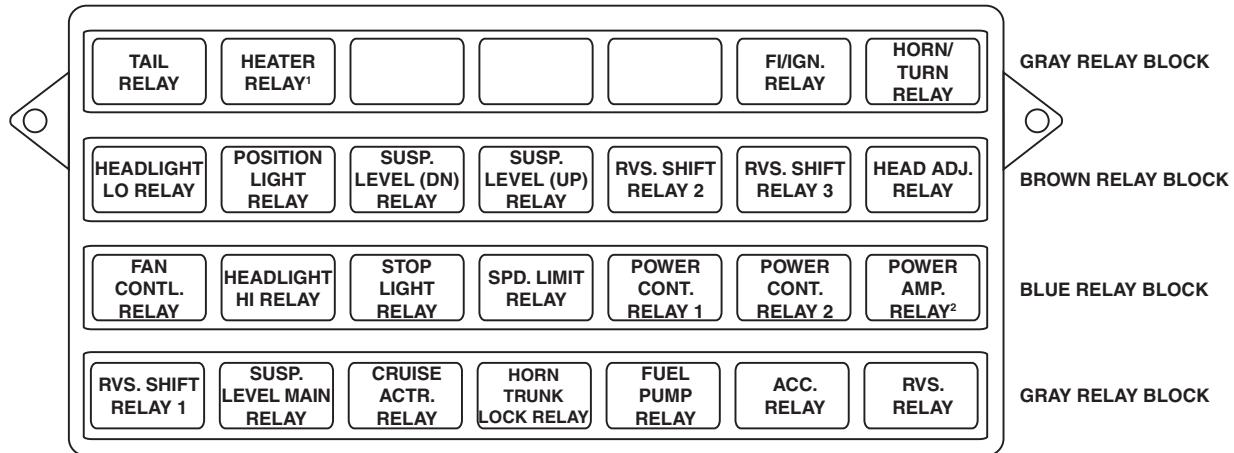

1. Except 1B models.
2. Except 1A models.

**RELAY BOX (2006-2008 1E, 1F, 1G AND  
2009-2010 2C, 2D, 2E, 2F MODELS)**

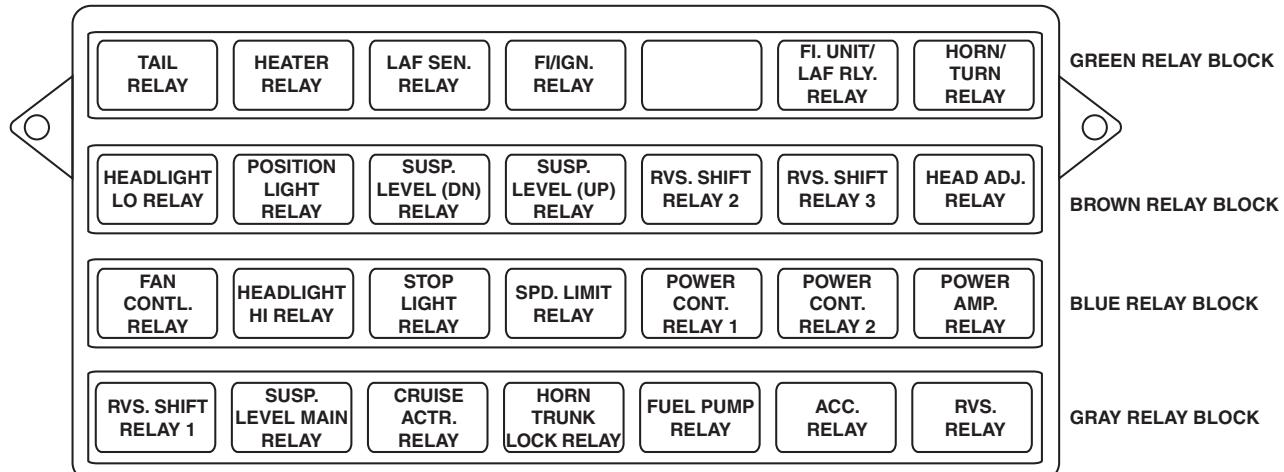


## AIRBAG SYSTEM (2006-2010 MODELS)

Notes:  
 Combination meter pin functions  
 (2008-2010 models)  
 1. Pin 9, Not used  
 2. Pin 25, Low tire press  
 3. Pin 26, Not used  
 4. Pin 7, TPMS


5. Airbag ECU connectors 1 and 2  
 wire colors may be Blue, Brown  
 or wire color as shown.

## Combination meter


Video blue 1	
Video gnd 2	
Video G 3	
Video R 4	
Video sync 5	
Shield gnd 6	
Not used 7	
Not used 8	
Not used 9	
Not used 10	
Bat 1	
Reverse lev 2	
HL ign control 3	
Neutral 4	
Over drive 5	
Air bag ind 6	
RVS 7	
Audio gnd shield 8	
TPMS gnd 9	
Temp air sensor gnd 10	
Sensor gnd 11	
Spa sensor gnd 12	
Navi shield 13	
Gnd 14	
Turn R 15	
Temp unit 16	
Vn 17	
HL ign 18	
Acc 19	
Ign 20	
Audio RQ 21	
Audio SCK 22	
Audio SO 23	
Audio CE 24	
TPMS rxd <sup>2</sup> 25	
TPMS txd <sup>3</sup> 26	
Temp air sensor 27	
Spa sensor Vout 28	
Spa sensor Vcc 29	
Navi txd 30	
Navi rxd 31	
ABS 32	
Fl 33	
High beam 34	
H/L up sw 35	
H/L down sw 36	
Oil 1	
Ta pulse 2	
Turn L 3	
Fuel unit 4	
Side stand 5	
Clutch 6	
HIS <sup>4</sup> 7	
Not used 8	
Up 9	
Left 10	
Right 11	
Down 12	
Zoom in 13	
Zoom out 14	
Voice/Guide sw 15	
Navi sw sel 1 16	
Navi sw sel 2 17	
Navi sw in 1 18	
Navi sw in 2 19	
Navi sw in 3 20	
Sp pulse out 21	
Spa main rly 22	
Spa up rly 23	
Spa down rly 24	
Cruise set 25	
Cruise on 26	
Cruise rly 27	
Sp sensor 28	
Sw gnd 29	
Spa sw in 1 30	
Spa sw in 2 31	
Spa sw sel 1 32	
Spa sw sel 2 33	
R saddle bag 34	
RR trunk 35	
L saddle bag 36	
Disp sw (sw 1) 37	
Info sw (sw 2) 38	
Trip sw (sw 3) 39	
Dim sw (sw 4) 40	

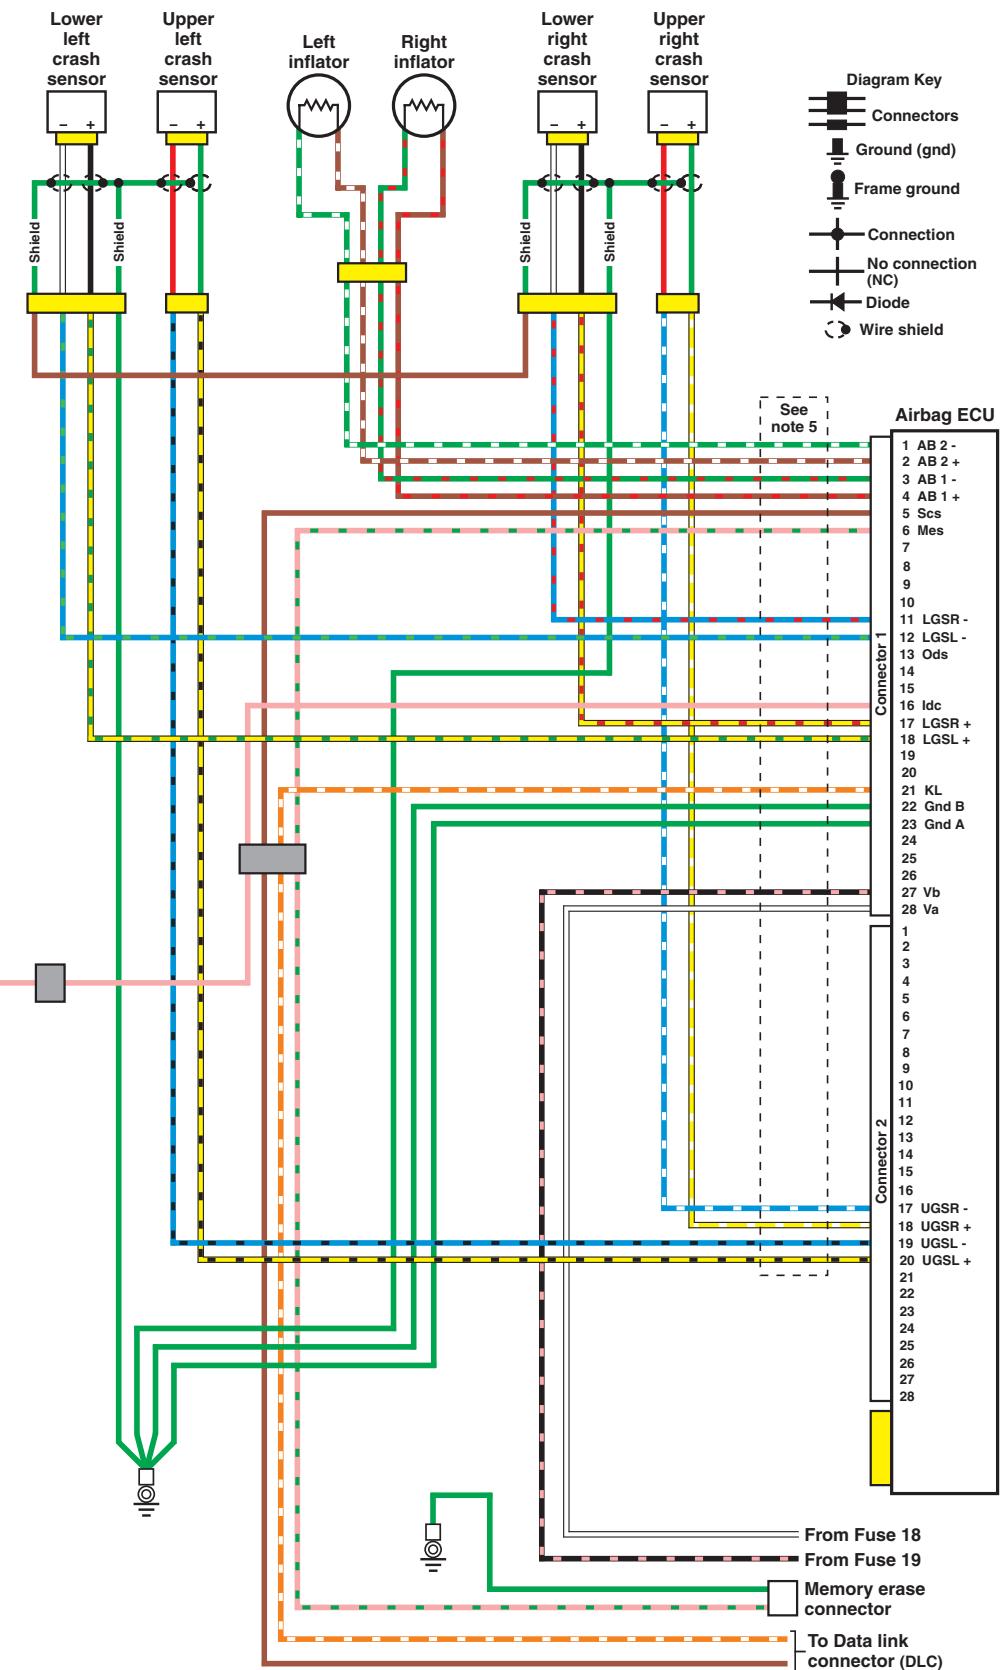

## HEATED HAND GRIPS AND SEAT HEATER SYSTEM (2006-2010 MODELS EXCEPT 1B)

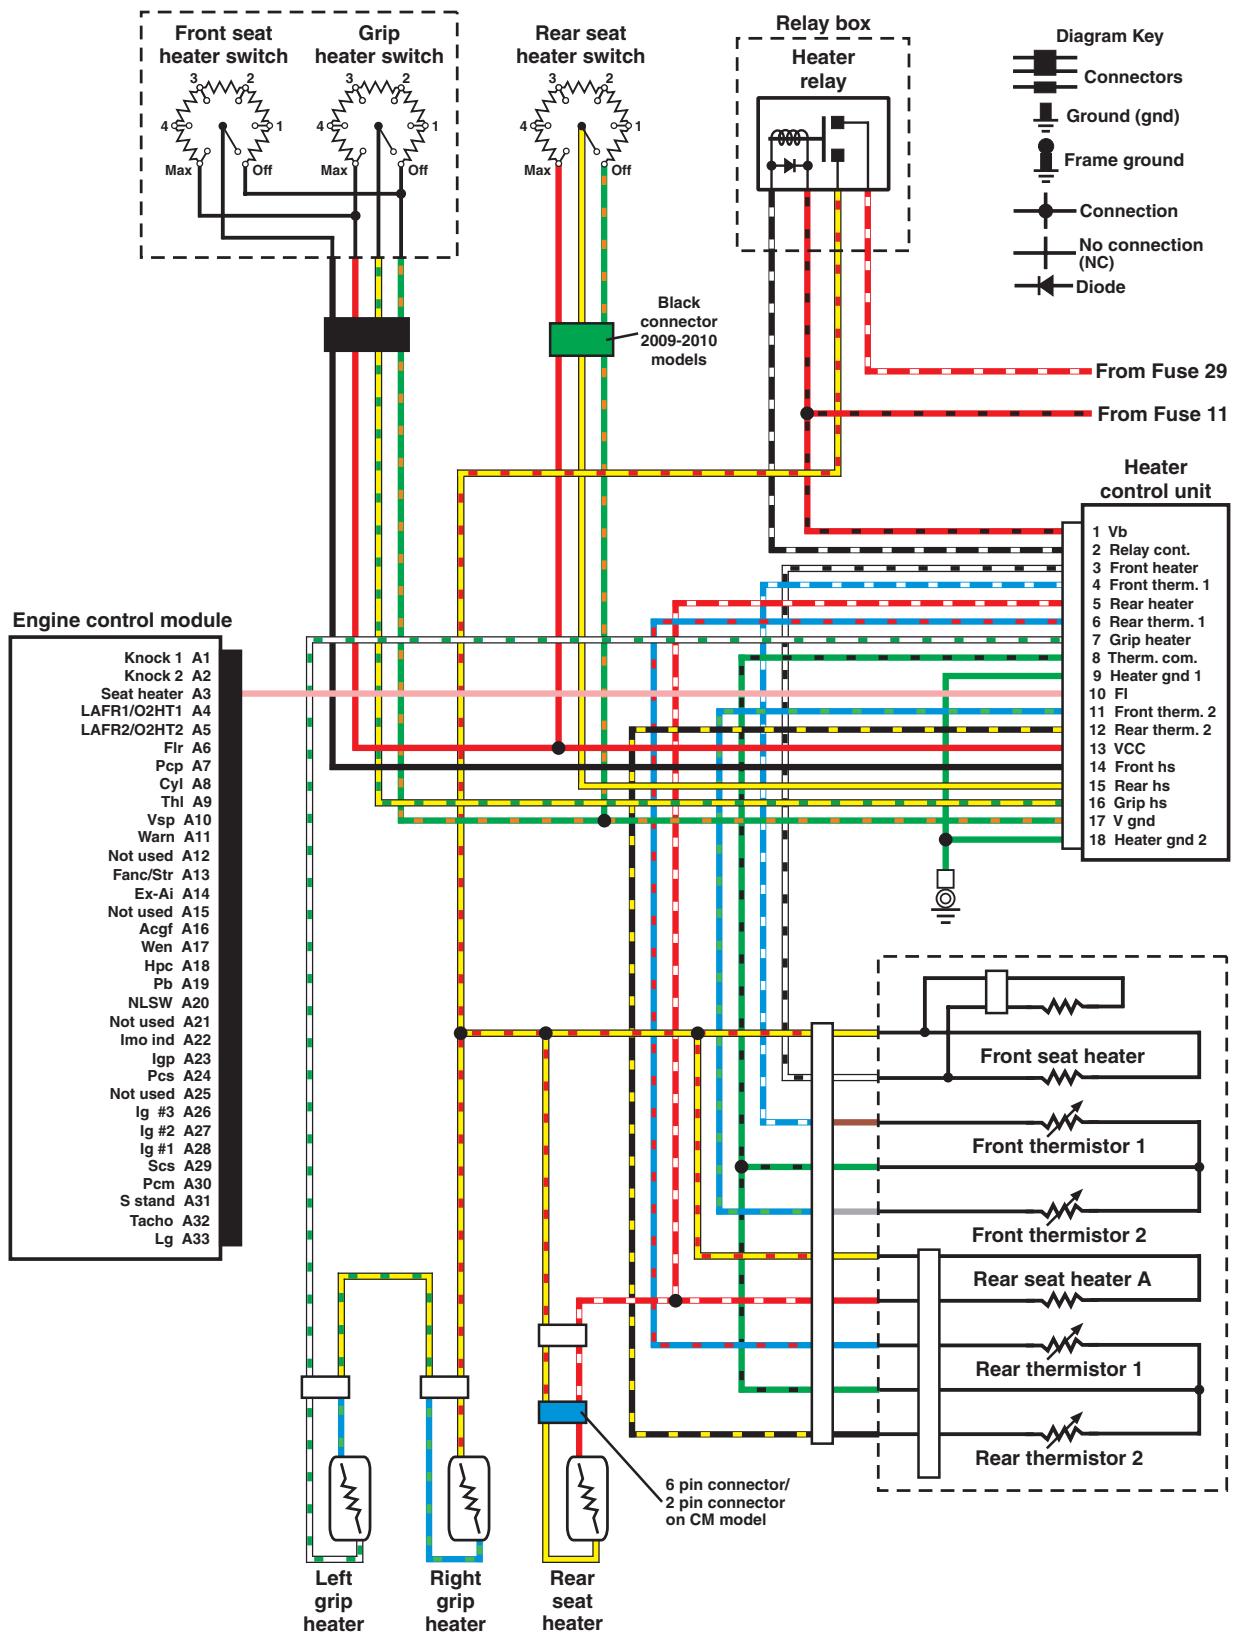


## NAVIGATION SYSTEM (2006-2008 1D AND 1F MODELS)

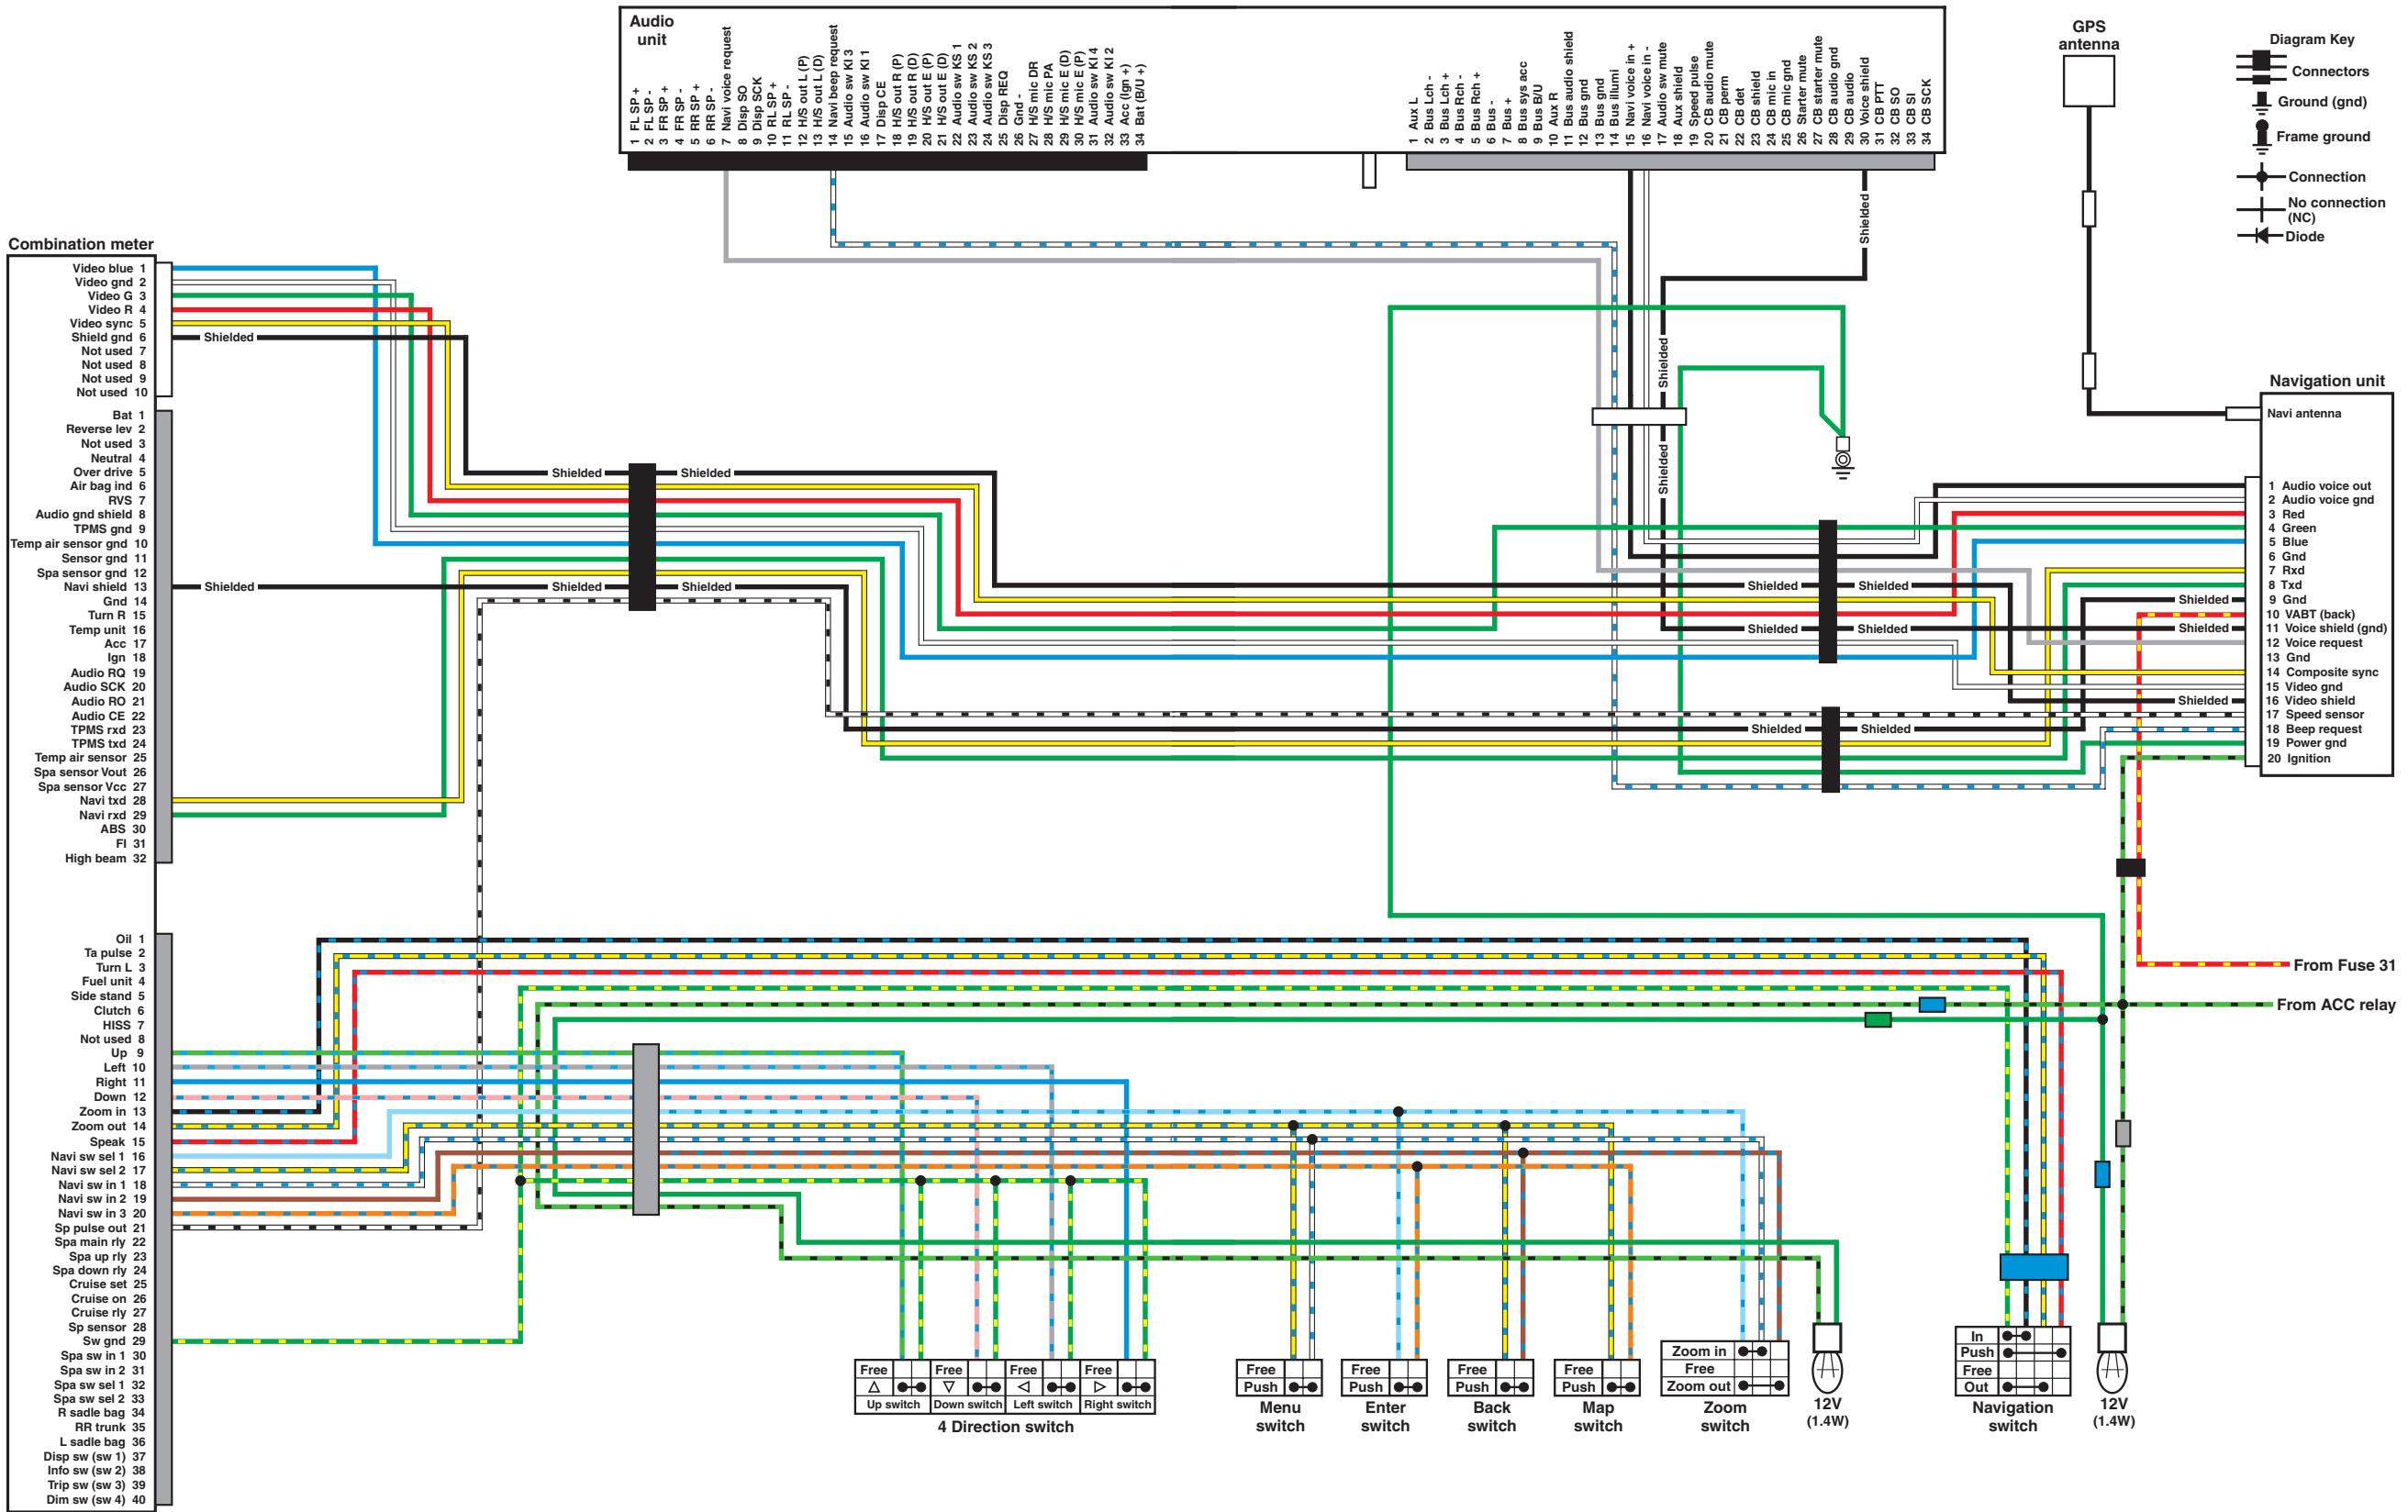


W-60

## NAVIGATION SYSTEM (2006-2008 1G AND 2009-2010 2F MODELS)

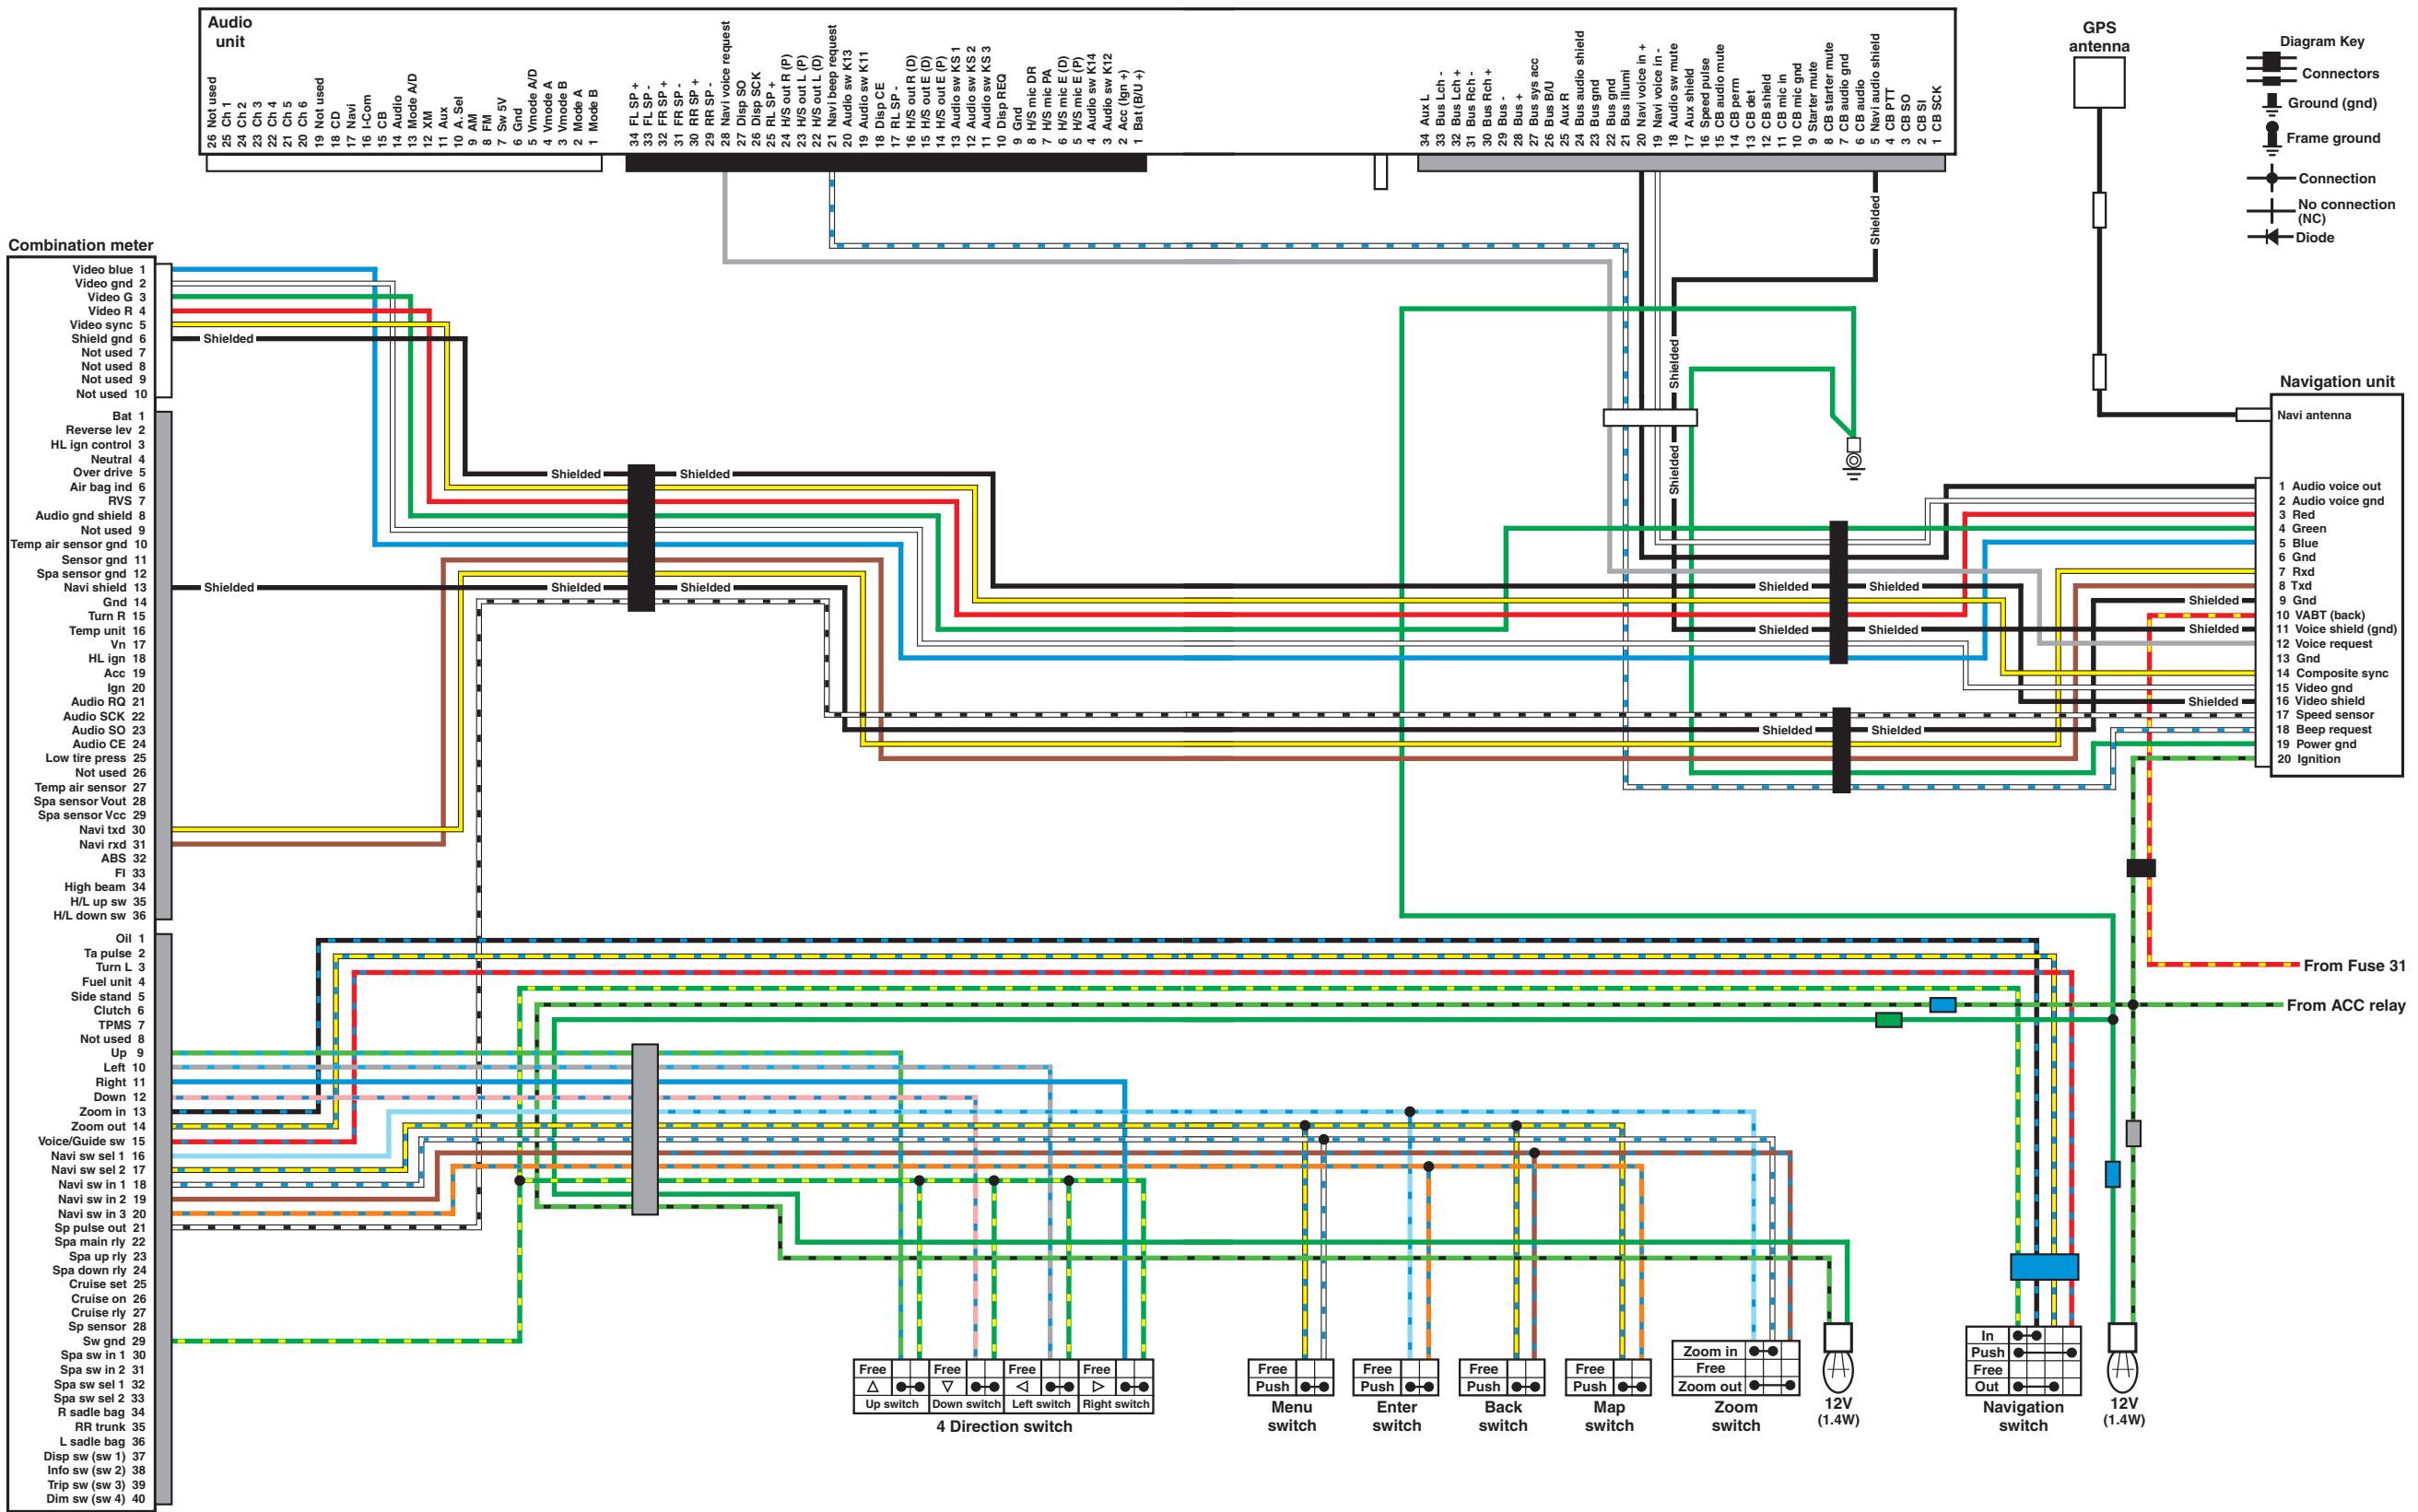


(W-61)

## **NAVIGATION SYSTEM (2009-2010 2B AND 2C MODELS)**

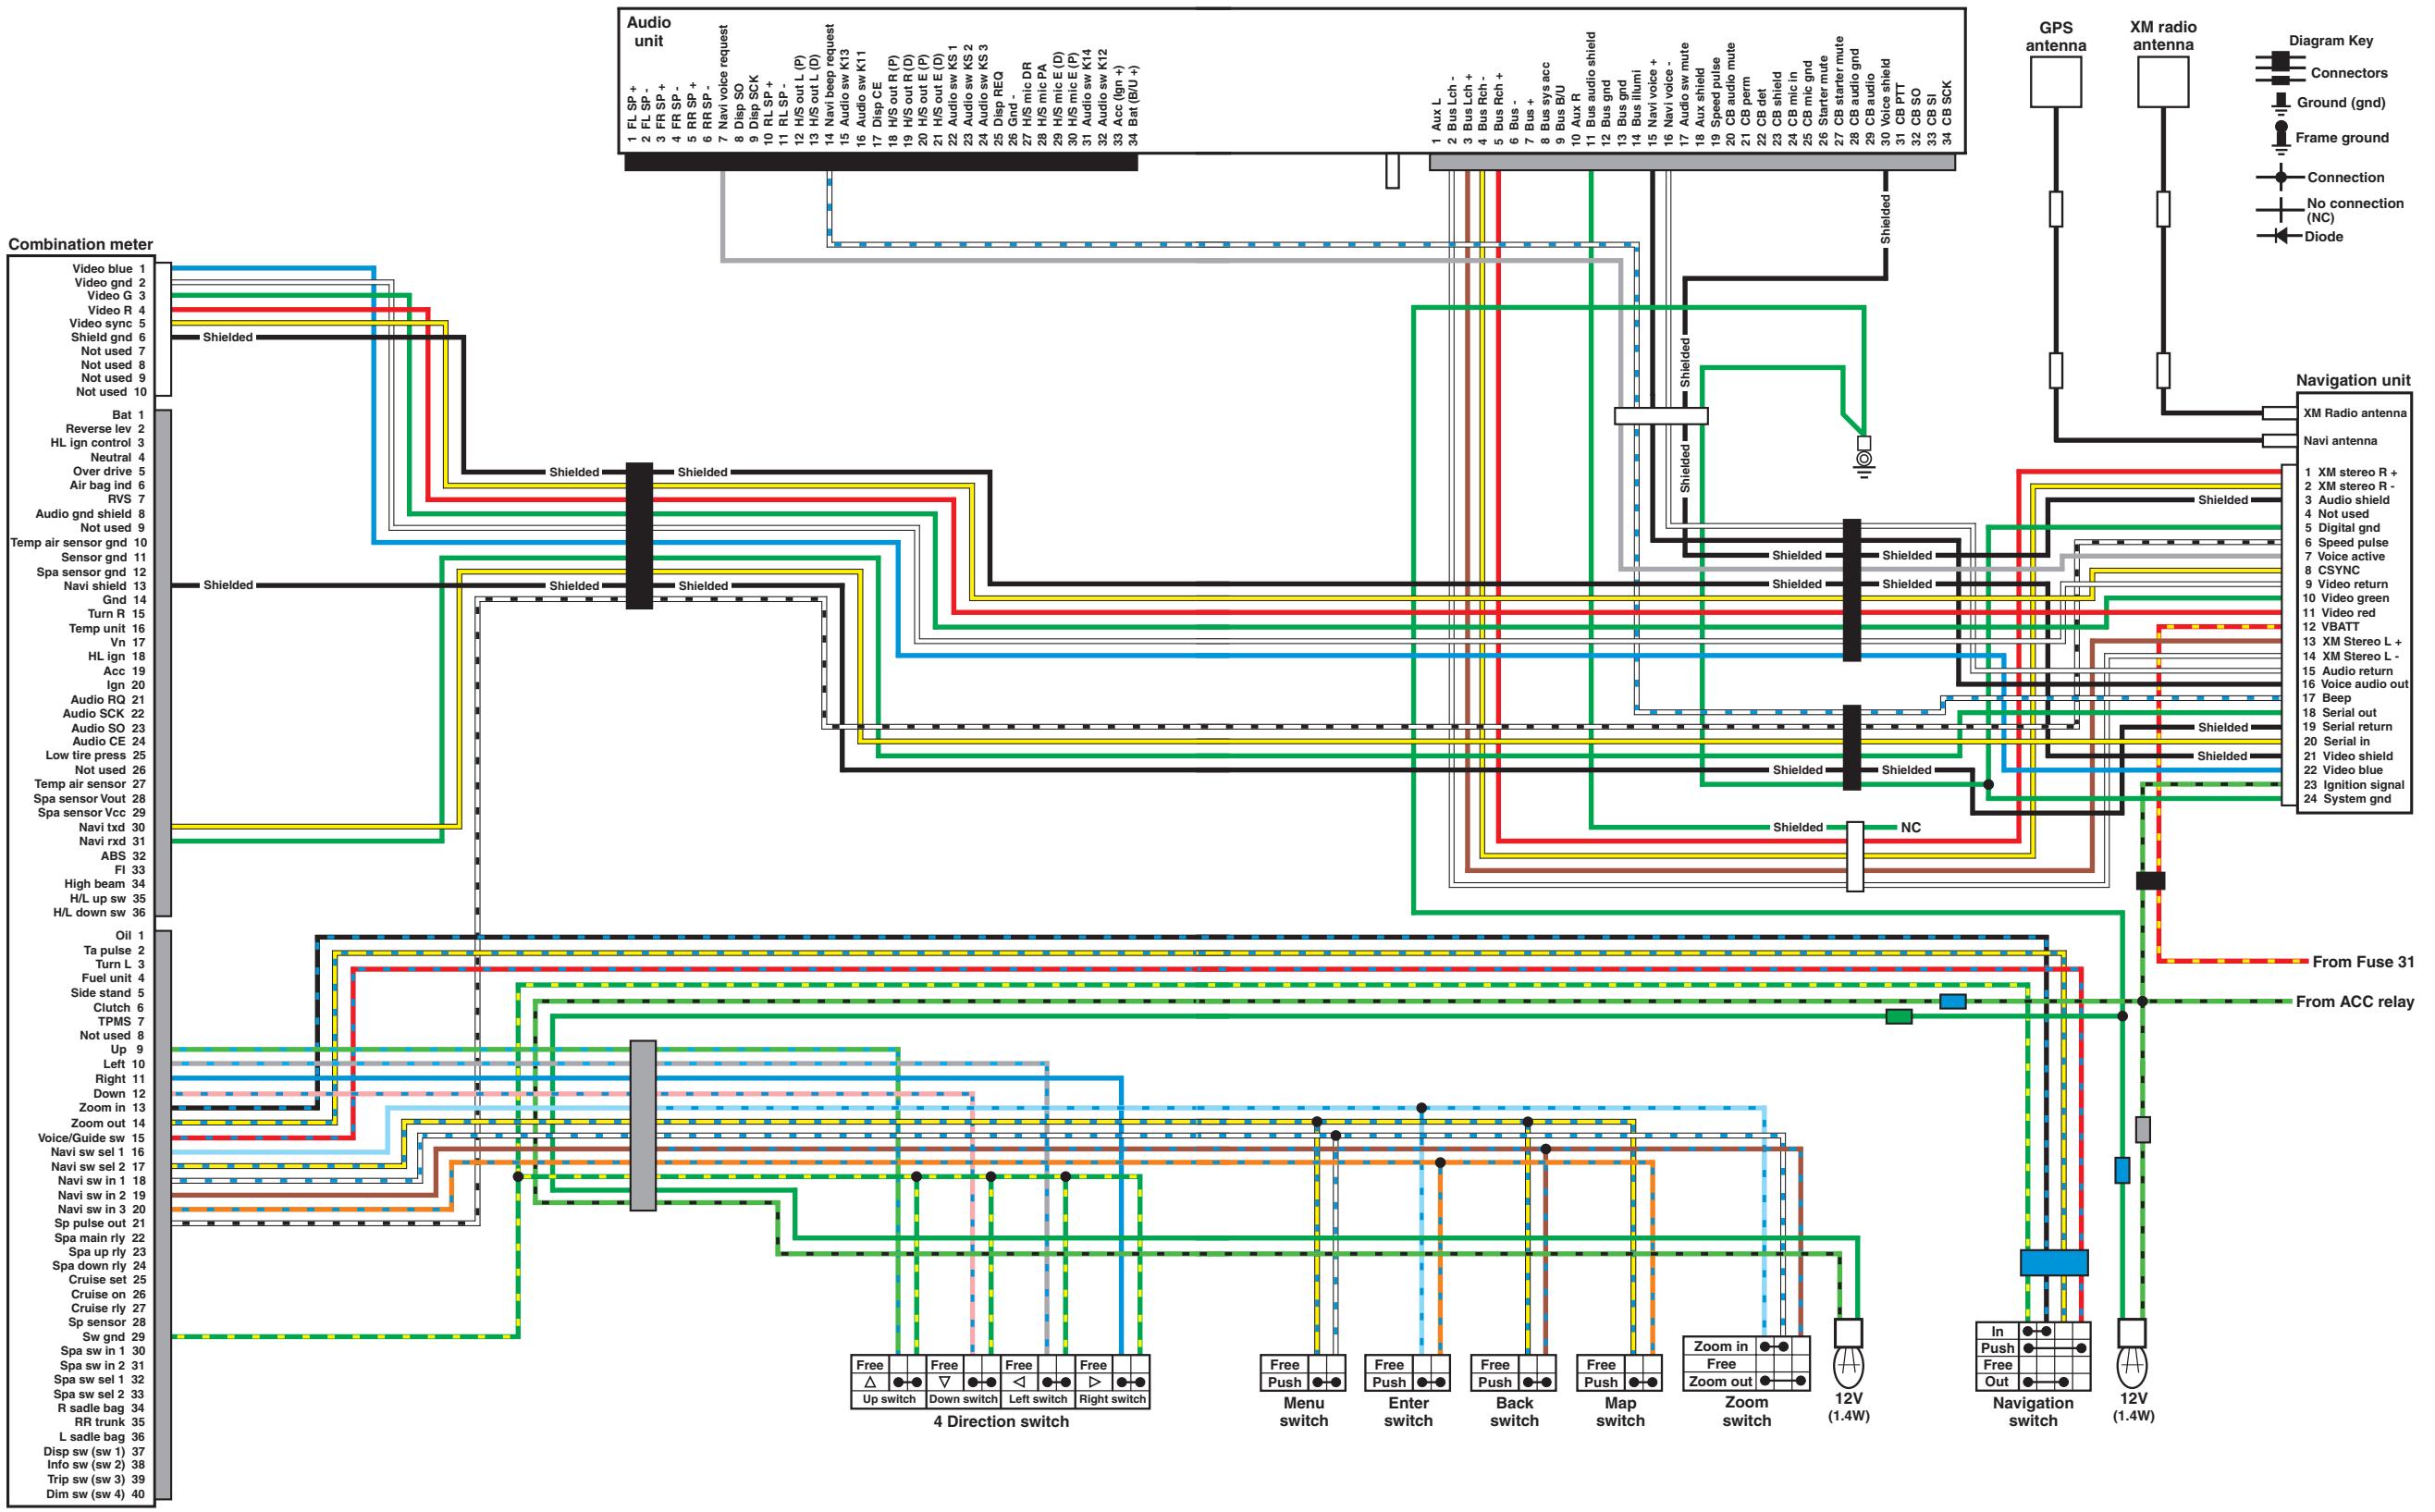

(W-62)

#### **NAVIGATION SYSTEM (2009-2010 2D MODELS)**

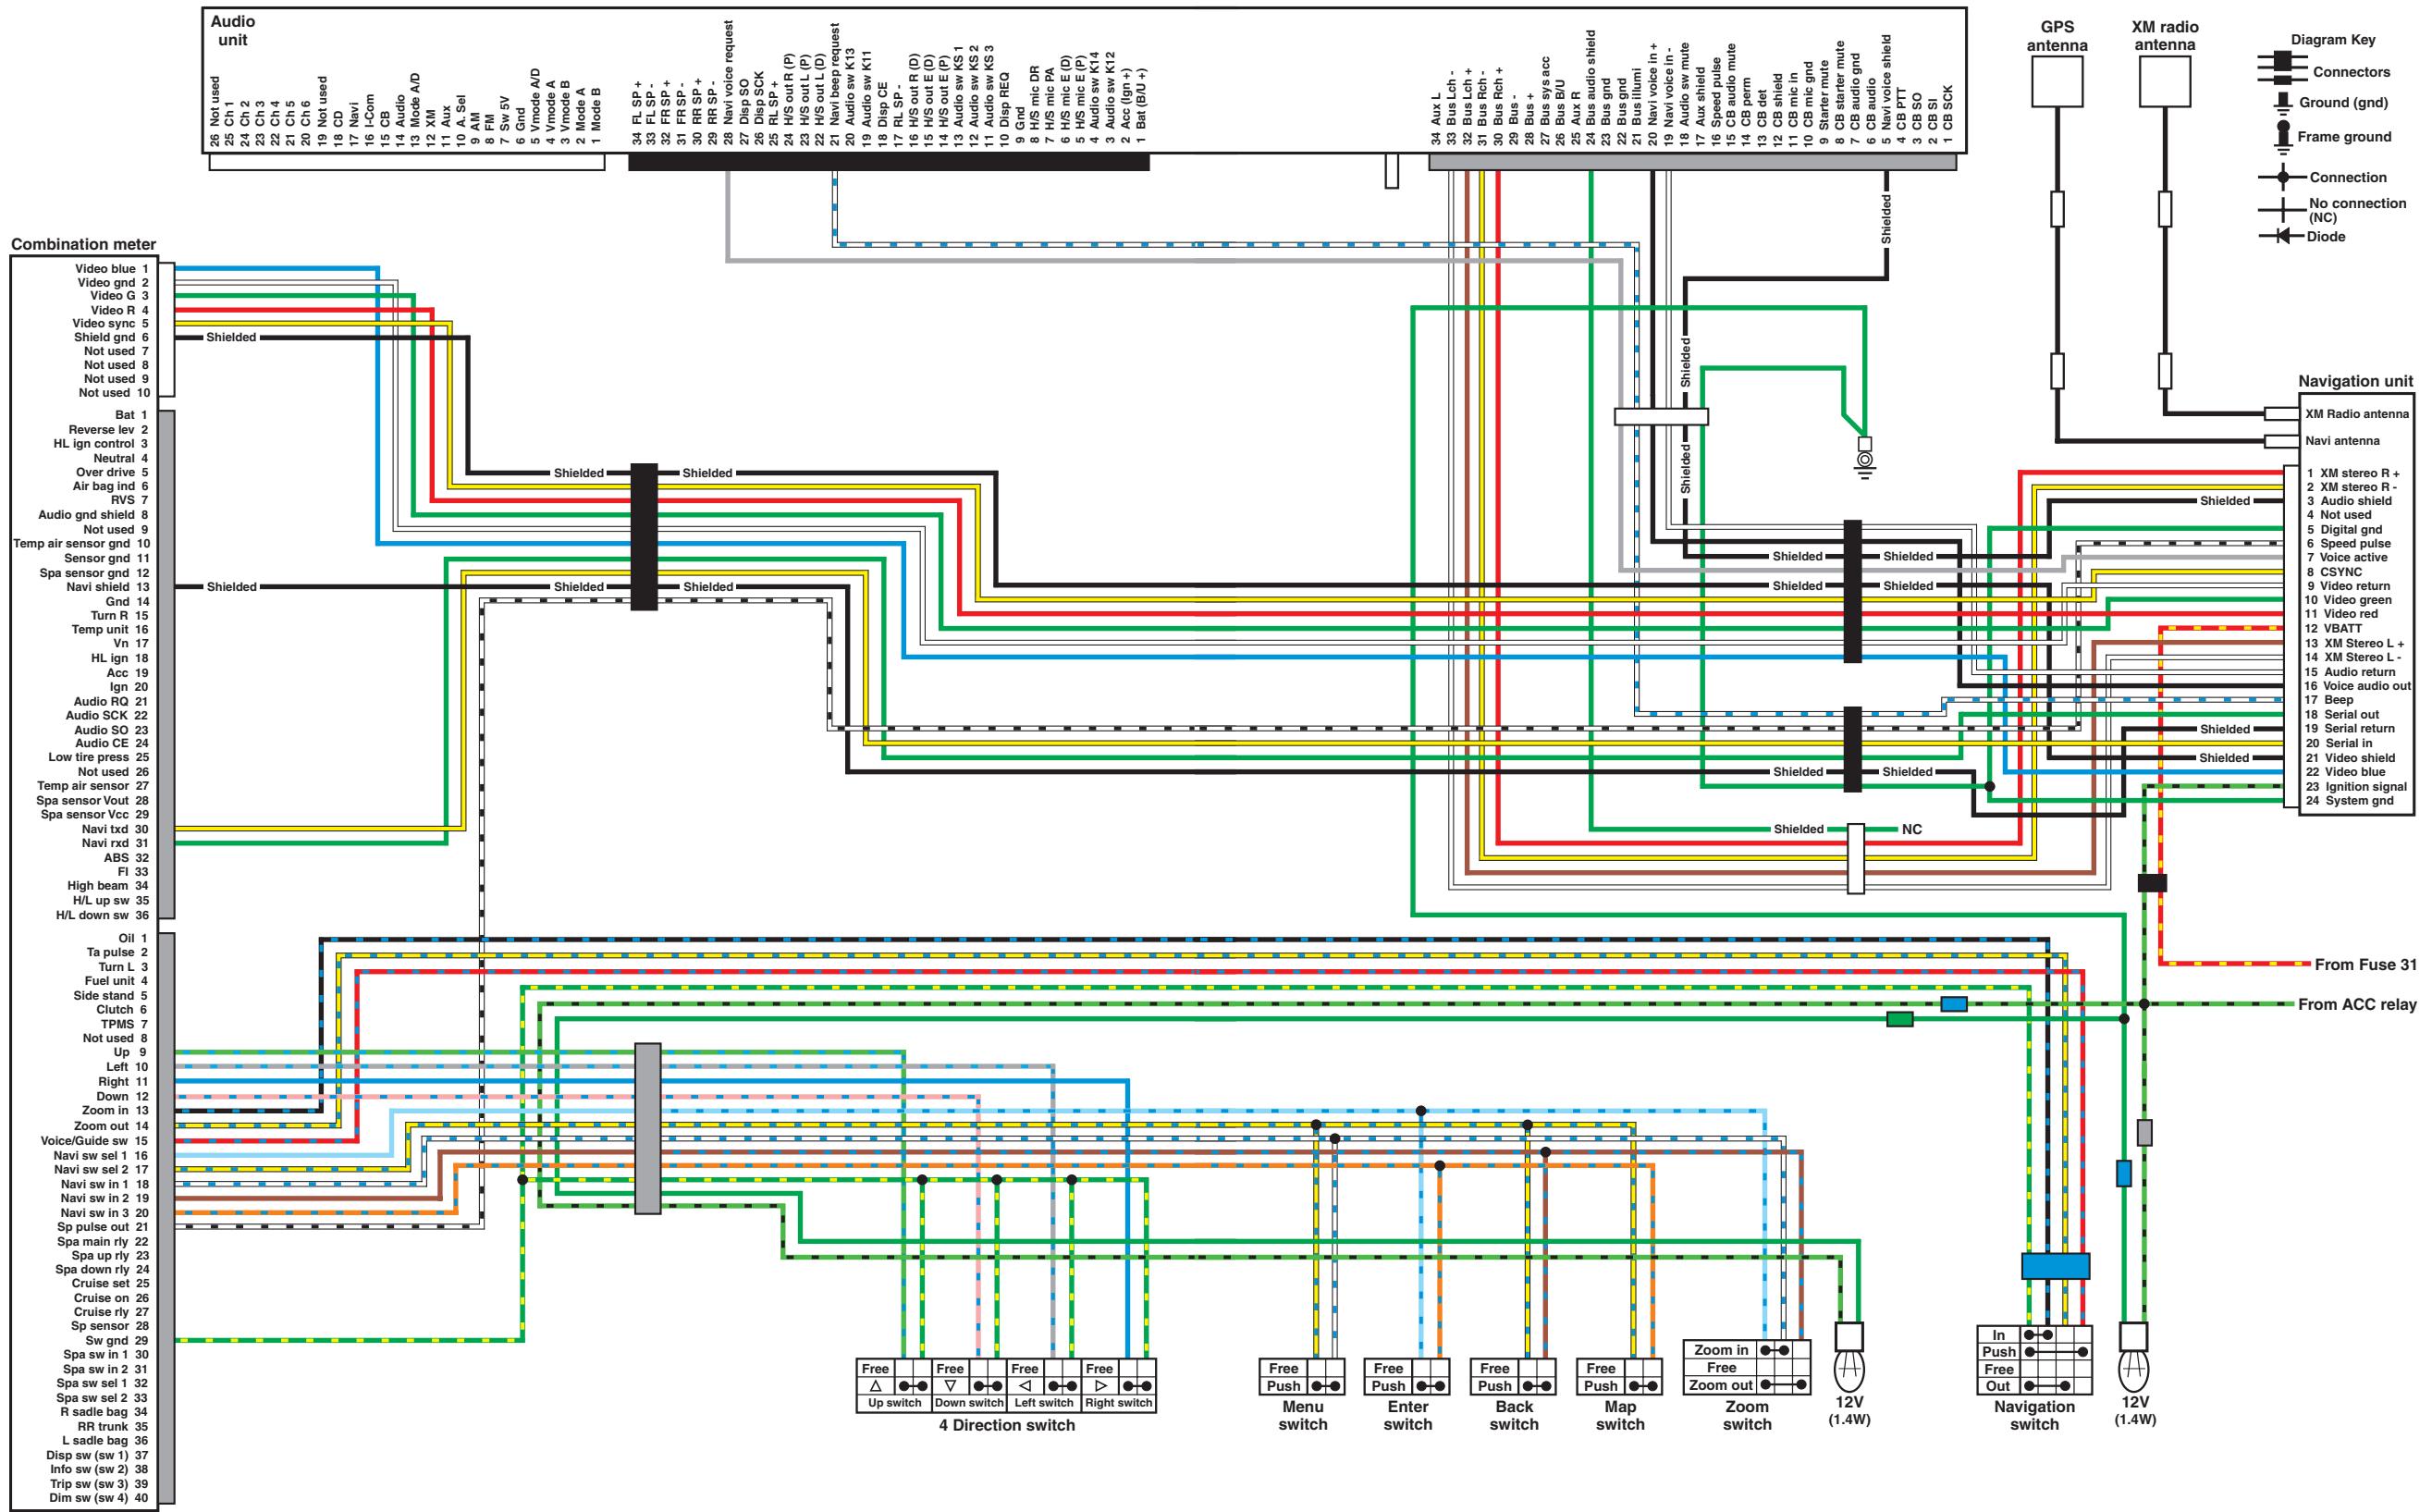

W-63

## NAVIGATION SYSTEM (2009-2010 2E MODELS)

